

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2900212 PWS NAME: BOWERSVILLE VILLAGE PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954582 STU NAME: BOWERSVILLE VILLAGE
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954582. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2900612 PWS NAME: FAIRBORN PUBLIC WATER SYSTEM

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954585 STU NAME: FAIRBORN - SANDHILL

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954585. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2900612 PWS NAME: FAIRBORN PUBLIC WATER SYSTEM

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP002

STATE FACILITY ID: 2960642 STU NAME: FAIRBORN - NORTH PARK

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP002 and the State Facility ID is 2960642. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2900612 PWS NAME: FAIRBORN PUBLIC WATER SYSTEM

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP003

STATE FACILITY ID: 2960643 STU NAME: FAIRBORN-CENTRAL PARK

Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 10/1/2010 and 12/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP003 and the State Facility ID is 2960643. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes

NITRATE Sample Date(s):

Date CCR sent to Ohio EPA:

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2900803 PWS NAME: GREENE COUNTY - DAY

PWS TYPE: Community SOURCE: Purchased Surface Water Sample Monitoring Point: DS000

FACILITY NAME: GREENE COUNTY - DAY DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	2 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

**** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)**

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
HAA5 & TTHM Quarterly Sample Date(s):	Jan - Mar Sample Date(s)			Apr - Jun Sample Date(s)			Jul - Sept Sample Date(s)			Oct - Dec Sample Date(s)		
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2901112 PWS NAME: BELLBROOK WATER WORKS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954587 STU NAME: BELLBROOK WTP 1

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954587. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2901712 PWS NAME: JAMESTOWN VILLAGE PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954589 STU NAME: JAMESTOWN NEW PWS
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954589. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2901712 PWS NAME: JAMESTOWN VILLAGE PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: JAMESTOWN, VILLAGE OF DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	2 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes											
Lead & Copper Sample Date(s):											
HAA5 & TTHM Sample Date(s):											
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov Dec
Total Chlorine Sample Date(s):											

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2901812 PWS NAME: MAPLE GROVE MOBILE HOME

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954590 STU NAME: MAPLE GROVE MHP

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954590. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2901912 PWS NAME: CENTRAL STATE UNIVERSITY
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954591 STU NAME: CENTRAL STATE UNIVERSITY WTP
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954591. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2902012 PWS NAME: WRIGHT STATE UNIVERSITY
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954592 STU NAME: WRIGHT STATE UNIVERSITY WTP
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954592. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2902012 PWS NAME: WRIGHT STATE UNIVERSITY

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: WRIGHT STATE UNIVERSITY DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	30 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	20 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes											
Lead & Copper Sample Date(s):											
HAA5 & TTHM Sample Date(s):											
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov Dec
Total Chlorine Sample Date(s):											

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2902422 PWS NAME: SPRING VALLEY VILLAGE

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP002

STATE FACILITY ID: 2954594 STU NAME: SPRING VALLEY STU 2

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP002 and the State Facility ID is 2954594. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 2 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2902422 PWS NAME: SPRING VALLEY VILLAGE

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: SPRING VALLEY,VILLAGE OF DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Lead & Copper Sample Date(s):</i>												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2902512 PWS NAME: SPRING VALLEY ESTATES MHP
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954595 STU NAME: SPRING VALLEY ESTATES MHP
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954595. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2902512 PWS NAME: SPRING VALLEY ESTATES MHP

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: SPRING VALLEY ESTATES MH DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):												
	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2902812 PWS NAME: XENIA CITY PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954597 STU NAME: XENIA CITY
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954597. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2902812 PWS NAME: XENIA CITY PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: XENIA, CITY OF DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	30 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	30 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Lead & Copper Sample Date(s):</i>												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903012 PWS NAME: YELLOW SPRINGS VILLAGE PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954598 STU NAME: YELLOW SPRINGS VLG

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954598. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2903012 PWS NAME: YELLOW SPRINGS VILLAGE PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: YELLOW SPRINGS, VILLAGE DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	20 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** Not Required, Unless State Delinquency Notice Received
TOTAL COLIFORM (TCR) - 3100	4 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Lead & Copper Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903312 PWS NAME: WRIGHT-PATTERSON AFB AREA B PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954600 STU NAME: WRIGHT-PATTERSON AFB AREA B STU 1
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) Quarterly
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954600. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
<i>NITRATE Sample Date(s):</i>				
<i>VOC Quarterly Sample Date(s):</i>	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
<i>Date CCR sent to Ohio EPA:</i>				

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903312 PWS NAME: WRIGHT-PATTERSON AFB AREA B PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP002
STATE FACILITY ID: 2960515 STU NAME: WRIGHT-PATTERSON AFB AREA B STU 2
Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP002 and the State Facility ID is 2960515. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903412 PWS NAME: WRIGHT-PATTERSON AFB AREA A/C PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954601 STU NAME: WRIGHT PATTERSON AFB AREA A/C STU 1
Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 7/1/2010 and 9/30/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954601. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903412 PWS NAME: WRIGHT-PATTERSON AFB AREA A/C PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP002
STATE FACILITY ID: 2960516 STU NAME: WRIGHT-PATTERSON AFB AREA A/C STU 2
Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 7/1/2010 and 9/30/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP002 and the State Facility ID is 2960516. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903412 PWS NAME: WRIGHT-PATTERSON AFB AREA A/C PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP003
STATE FACILITY ID: 2960517 STU NAME: WRIGHT-PATTERSON AFB AREA A/C STU 3
Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP003 and the State Facility ID is 2960517. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903412 PWS NAME: WRIGHT-PATTERSON AFB AREA A/C PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP004
STATE FACILITY ID: 2960518 STU NAME: WRIGHT-PATTERSON AFB AREA A/C STU 4
Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP004 and the State Facility ID is 2960518. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
NITRATE Sample Date(s):
VOC Sample Date(s):
Date CCR sent to Ohio EPA:

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2903412 PWS NAME: WRIGHT-PATTERSON AFB AREA A/C PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: WRIGHT-PATTERSON AFB, A/C DISTRIBUTION
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 2 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	10 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903512 PWS NAME: GREENE CO.-NORTHWEST REG WATER
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954602 STU NAME: GREENE CO NORTHWEST REGIONAL WTP 1
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	1 Sample(s) between 6/1/2010 and 10/31/2010
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954602. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>RADIOLOGICAL Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903512 PWS NAME: GREENE CO.-NORTHWEST REG WATER
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP002
STATE FACILITY ID: 2960519 STU NAME: GREENE CO. NORTHWEST REGIONAL WTP 2
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
ARSENIC	ARSENIC - 1005	1 Sample(s) Quarterly
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	1 Sample(s) between 6/1/2010 and 10/31/2010
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP002 and the State Facility ID is 2960519. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
ARSENIC Quarterly Sample Date(s):				
NITRATE Sample Date(s):				
RADIOLOGICAL Sample Date(s):				
Date CCR sent to Ohio EPA:				

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2903512 PWS NAME: GREENE CO.-NORTHWEST REG WATER

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: GREENE CO.-NORTHWEST REG WTP 01 DISTRIBU

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 2 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	40 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903612 PWS NAME: CEDARVILLE UNIVERSITY

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954603 STU NAME: CEDARVILLE UNIVERSITY

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
ARSENIC	ARSENIC - 1005	1 Sample(s) Quarterly
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954603. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
ARSENIC Quarterly Sample Date(s):				
NITRATE Sample Date(s):				
Date CCR sent to Ohio EPA:				

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2903912 PWS NAME: GREENE CO.-SOUTHWEST REG WATER
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 2954605 STU NAME: GREENE CO SOUTHWEST REGIONAL
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 7/1/2010 and 9/30/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954605. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>SOC Group 2 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2903912 PWS NAME: GREENE CO.-SOUTHWEST REG WATER

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: GREENE CO.-SOUTHWEST REG DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** Not Required, Unless State Delinquency Notice Received
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Lead & Copper Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2904103 PWS NAME: GREENE COUNTY - SWIGART PWS

PWS TYPE: Community SOURCE: Purchased Surface Water Sample Monitoring Point: DS000

FACILITY NAME: GREENE COUNTY - SWIGART DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
	<i>Jan - Mar Sample Date(s)</i>			<i>Apr - Jun Sample Date(s)</i>			<i>Jul - Sept Sample Date(s)</i>			<i>Oct - Dec Sample Date(s)</i>		
<i>HAA5 & TTHM Quarterly Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2904203 PWS NAME: GREENE COUNTY - CLYO PWS
PWS TYPE: Community SOURCE: Purchased Surface Water Sample Monitoring Point: DS000
FACILITY NAME: GREENE COUNTY - CLYO DISTRIBUTION
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes											
HAA5 & TTHM Quarterly Sample Date(s):	Jan - Mar Sample Date(s)			Apr - Jun Sample Date(s)			Jul - Sept Sample Date(s)			Oct - Dec Sample Date(s)	
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov Dec
Total Chlorine Sample Date(s):											

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2930612 PWS NAME: BEAVER SQUARE
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954609 FACILITY NAME: BEAVER SQUARE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

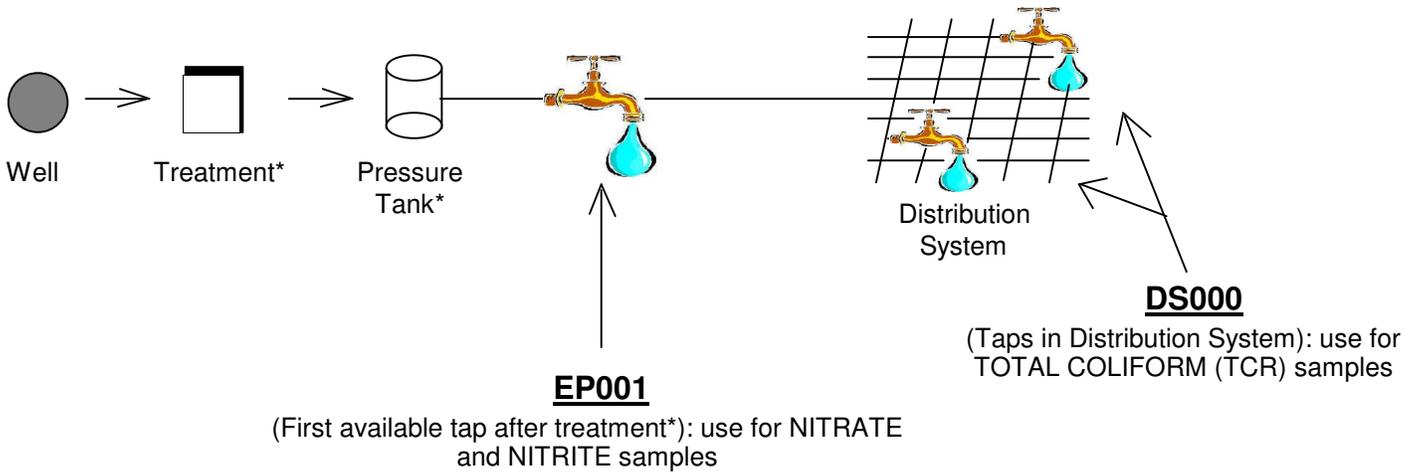

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2930912 PWS NAME: BEAVERCREEK PROFESSIONAL BLDG PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954610 FACILITY NAME: BEAVERCREEK PROFESSIONAL BLDG

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

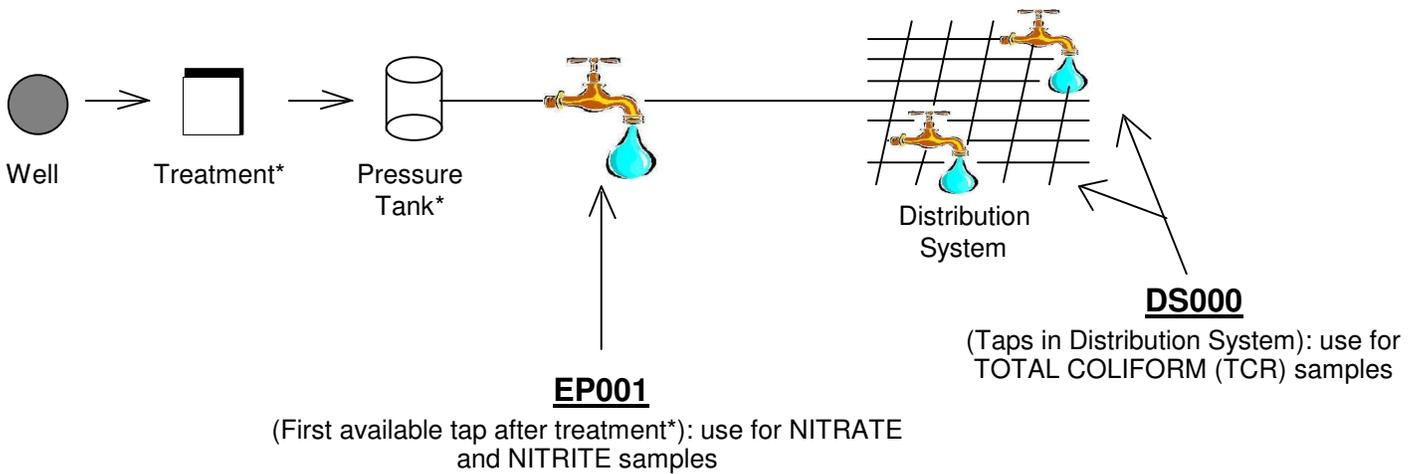

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2932212 PWS NAME: ECONO LODGE BEAVERCREEK

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954613 FACILITY NAME: ECONO LODGE BEAVERCREEK

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

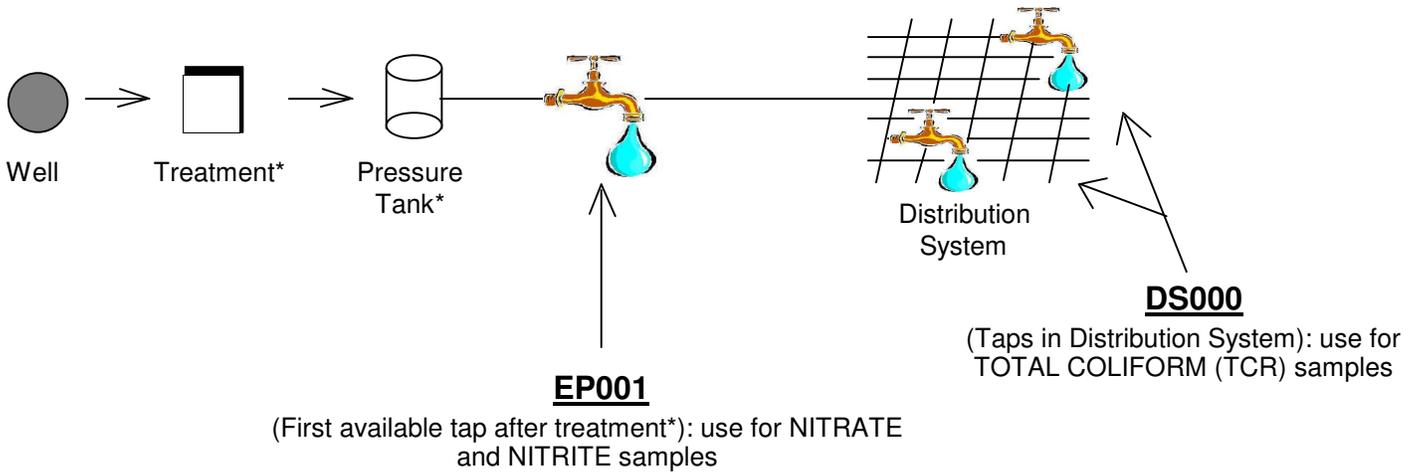

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2932612 PWS NAME: RESEARCH PARK CORPORATION

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954614 STU NAME: RESEARCH PARK CORPORATION

Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 4 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954614. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

SOC Group 4 Chemicals: BENZO (A) PYRENE - 2306, ENDOTHALL - 2033, DI(2-ETHYLHEXYL) - ADIPATE - 2035, DI(2-ETHYLHEXYL) - PHTHALATE - 2039

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>SOC Group 2 Sample Date(s):</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2932612 PWS NAME: RESEARCH PARK CORPORATION

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: RESEARCH PARK CORP DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

Use for Sample Tracking Purposes				
	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>
<i>TCR Quarterly Sample Date(s):</i>				

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2934012 PWS NAME: GLEN HELEN OUTDOOR EDUCATION CENTER

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954617 FACILITY NAME: GLEN HELEN OUTDOOR ED CTR

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 3/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

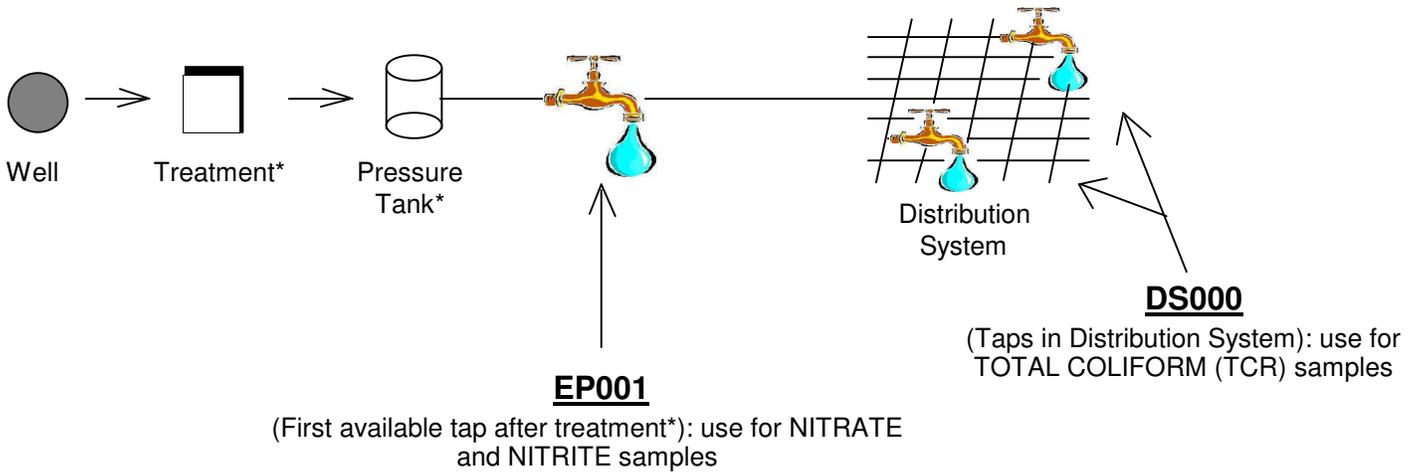

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2934112 PWS NAME: GREENE CO FISH AND GAME CLUBHOUSE PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2962123 FACILITY NAME: GREENE COUNTY FISH & GAME CLUBHOUSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

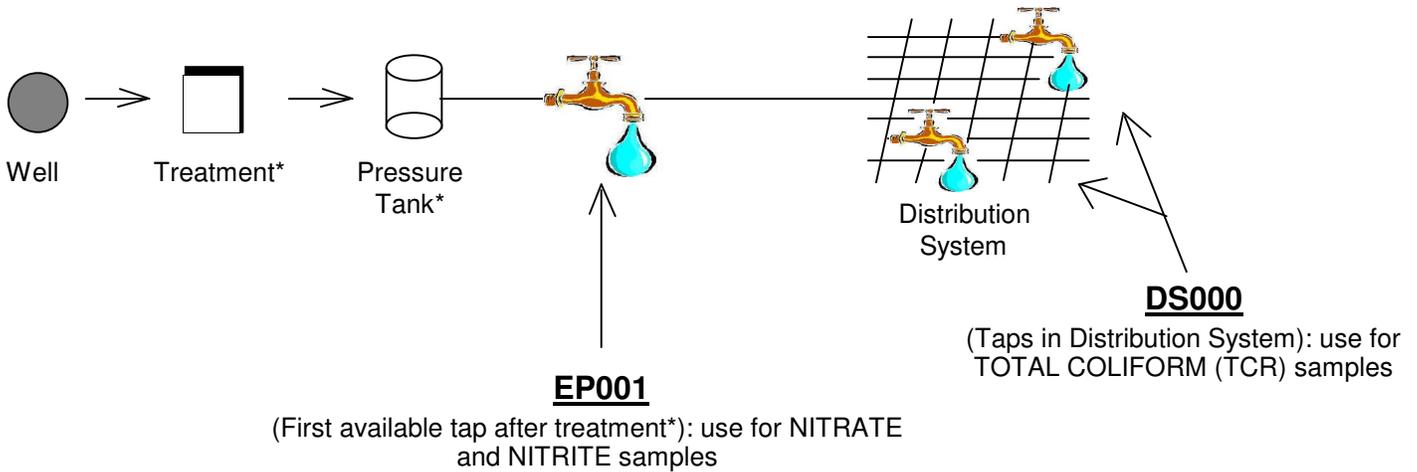

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2934412 PWS NAME: WOODYS BAR B Q PWS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954619 FACILITY NAME: WOODYS BAR B Q

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

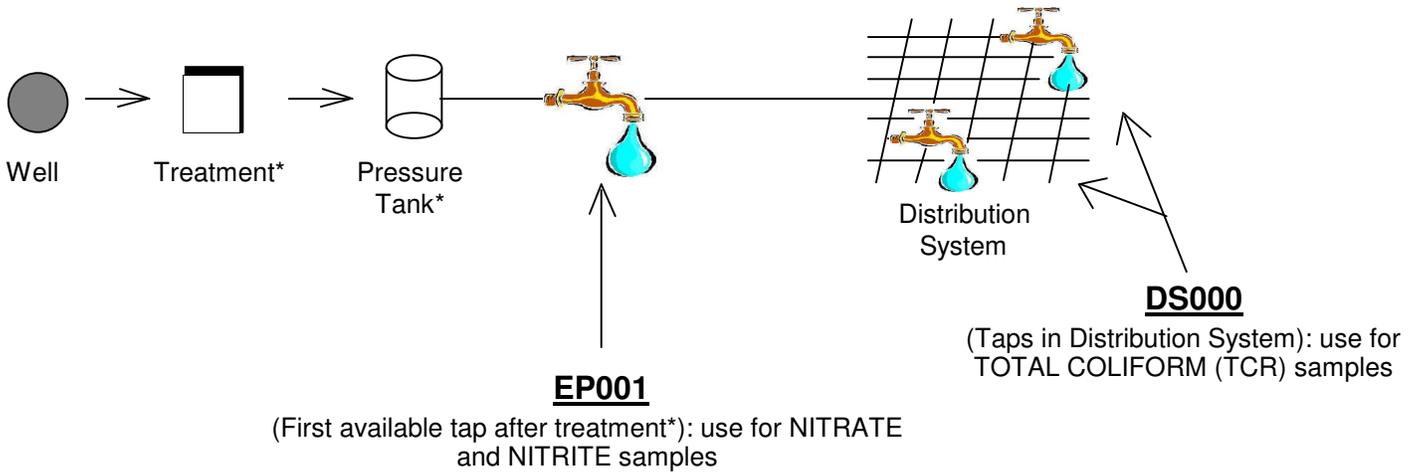

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2935012 PWS NAME: ODNR-JOHN BRYAN STATE PARK CAMPGROUND

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954621 FACILITY NAME: ODNR JOHN BRYAN STATE PARK CAMP

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 10/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

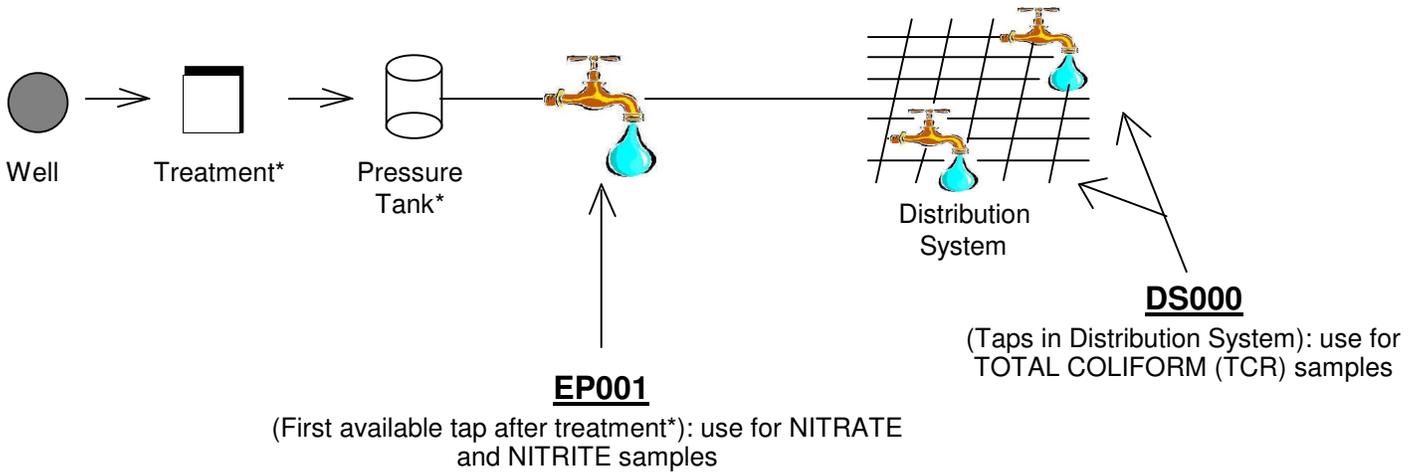

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2935812 PWS NAME: KNOLLWOOD TAVERN
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954623 FACILITY NAME: KNOLLWOOD TAVERN

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

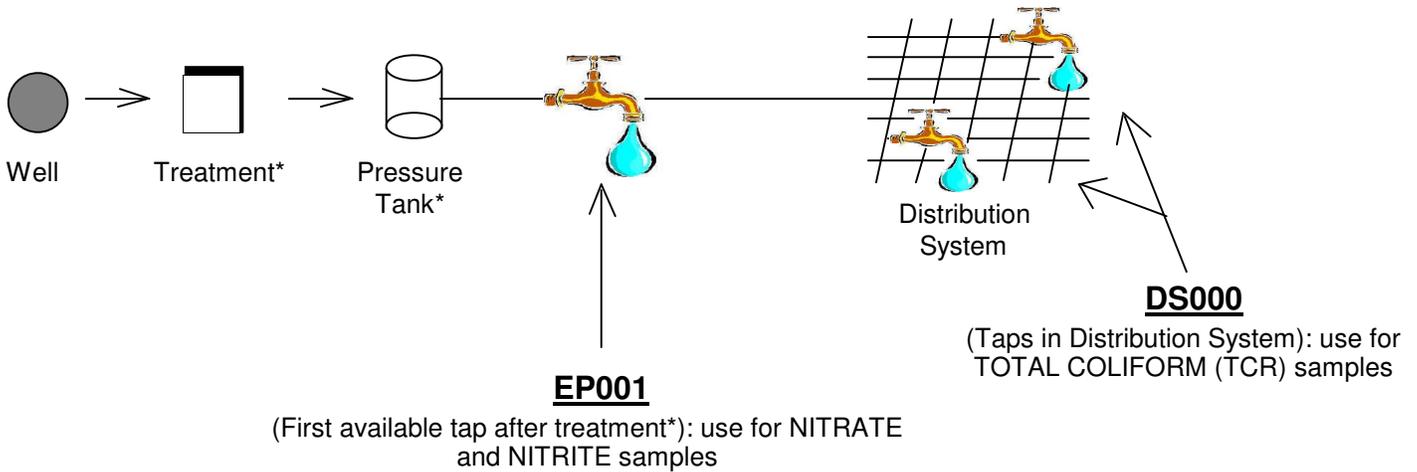

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2936312 PWS NAME: SANTA FE LOUNGE
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954625 FACILITY NAME: SANTA FE LOUNGE

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

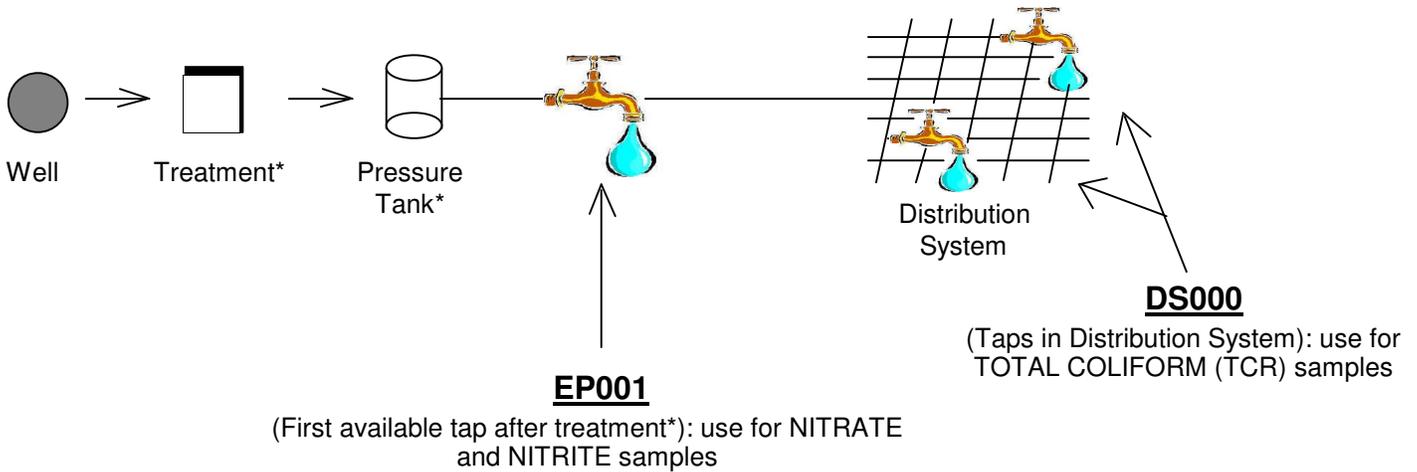

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2936912 PWS NAME: REMAX PWS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954626 FACILITY NAME: M & S AUTOMOTIVE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

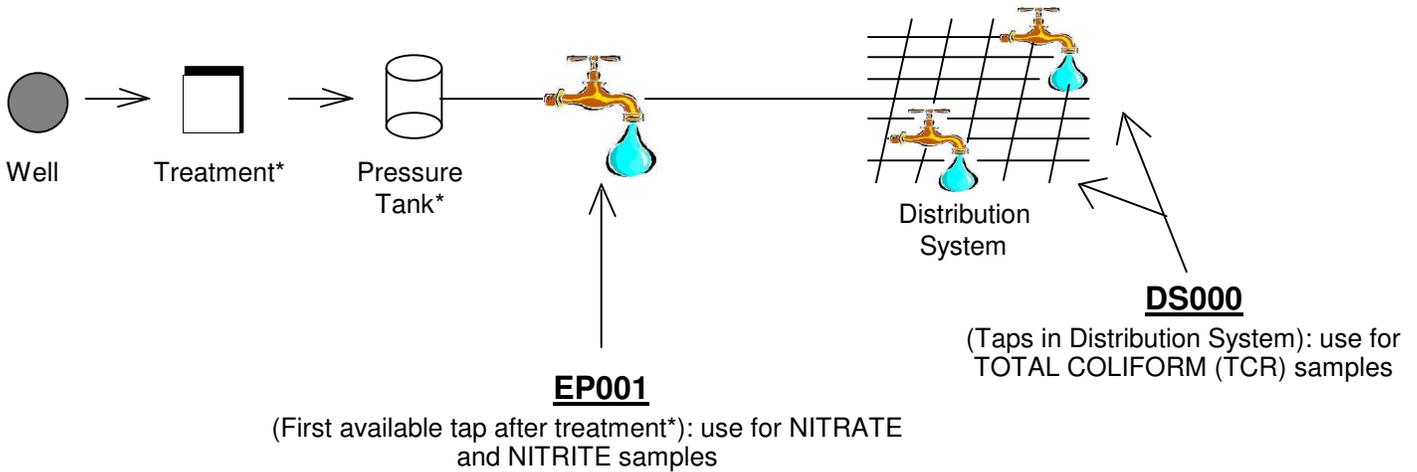

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2937612 PWS NAME: RAINBOW LAKE
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954629 FACILITY NAME: RAINBOW LAKE

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 3/1/2010 and 9/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

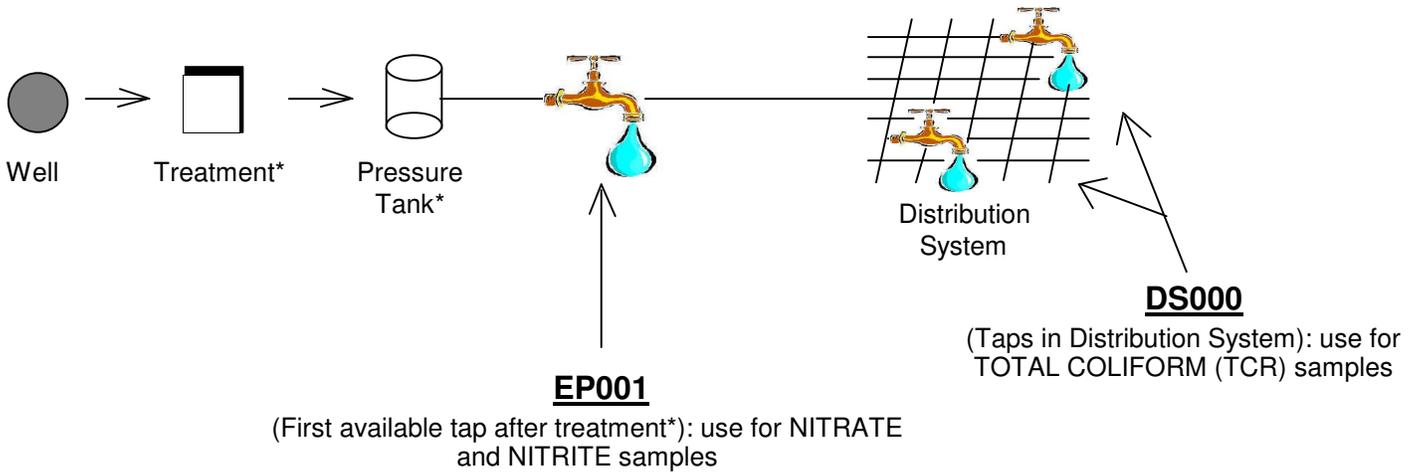

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2938412 PWS NAME: SKYBORN DRIVE-IN THEATER

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954630 FACILITY NAME: SKYBORN DRIVE-IN THEATER

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2010 and 9/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

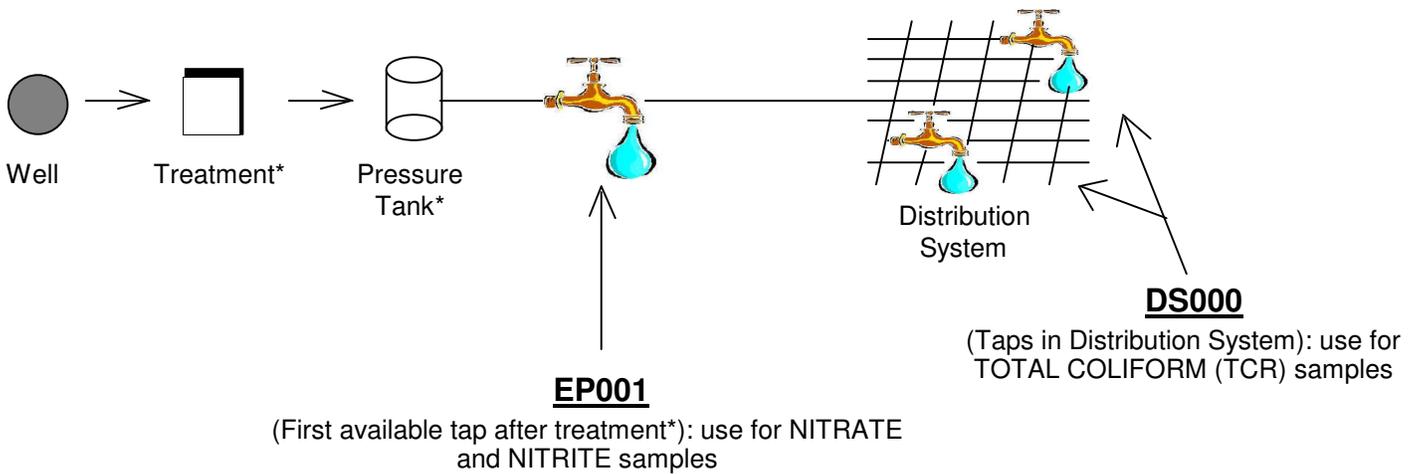

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2938512 PWS NAME: SKYBORN SKATELAND
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954631 FACILITY NAME: SKYBORN SKATELAND

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

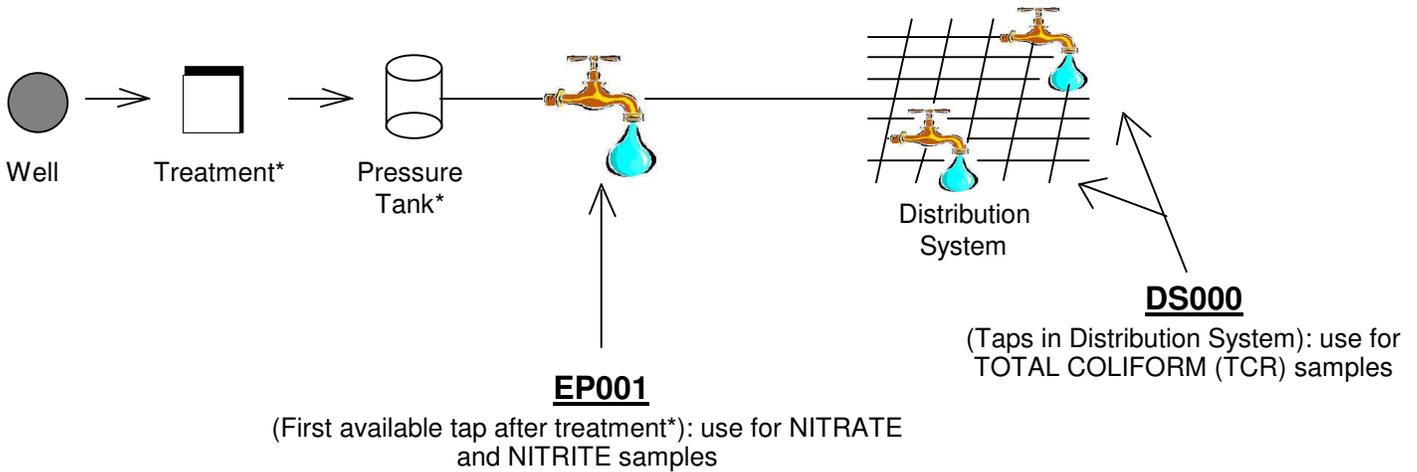

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2939312 PWS NAME: XENIA CHRIST TEMPLE CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954633 FACILITY NAME: XENIA CHRIST TEMPLE CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

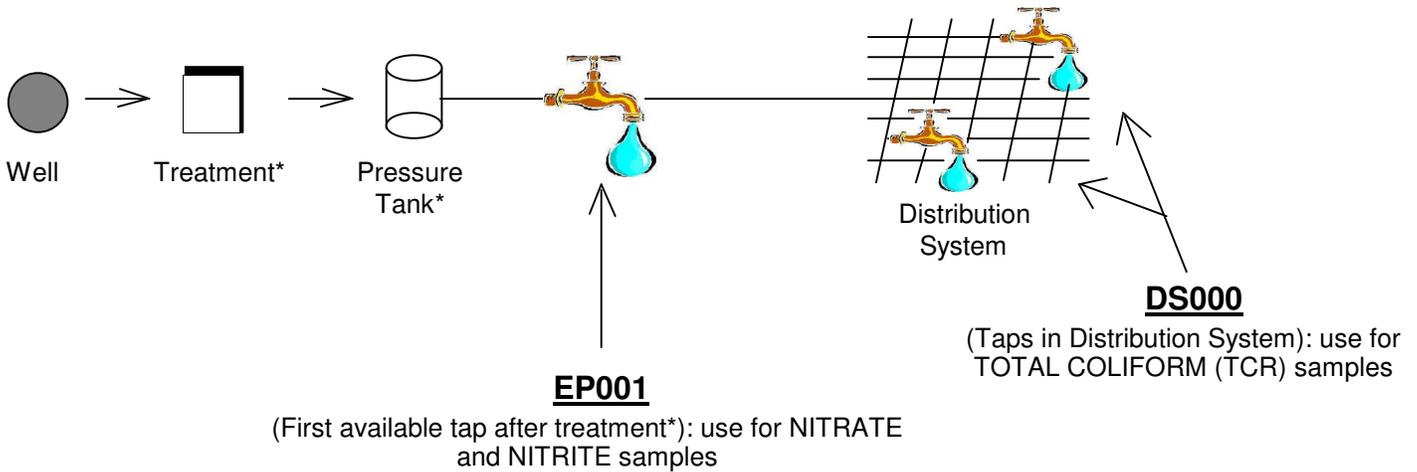

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2939612 PWS NAME: 4-H CAMP CLIFTON, INC.
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954634 FACILITY NAME: 4-H CAMP CLIFTON INC

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) Quarterly	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 6/1/2010 and 8/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

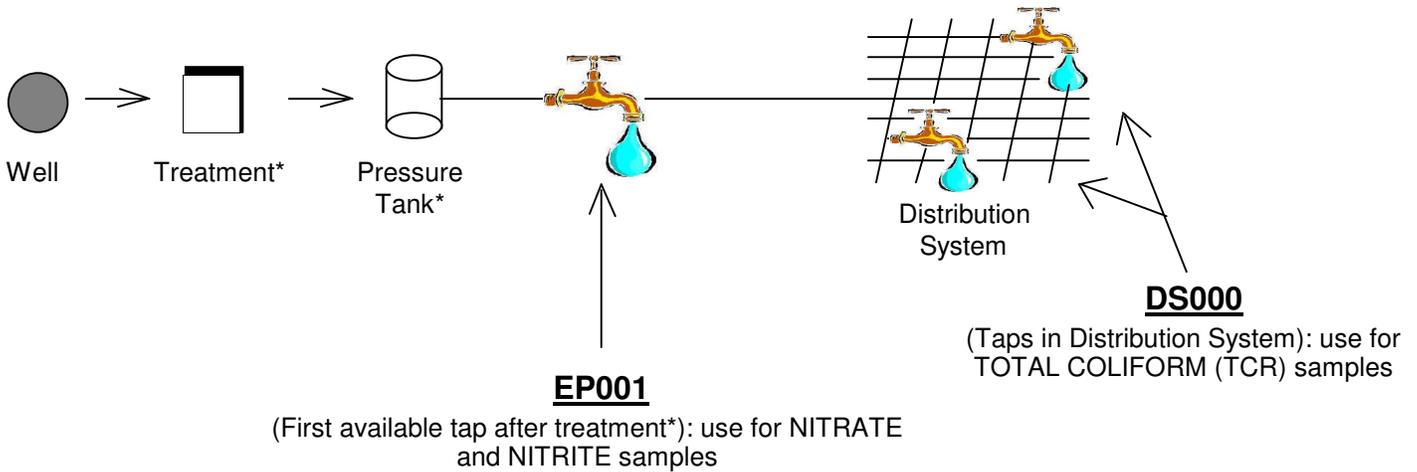

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
Nitrate Quarterly Sample Date(s):				
TCR Quarterly Sample Date(s):				

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2940312 PWS NAME: BOY SCOUTS-CAMP BIRCH 1 PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954635 FACILITY NAME: BOY SCOUTS CAMP BIRCH NO 1

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

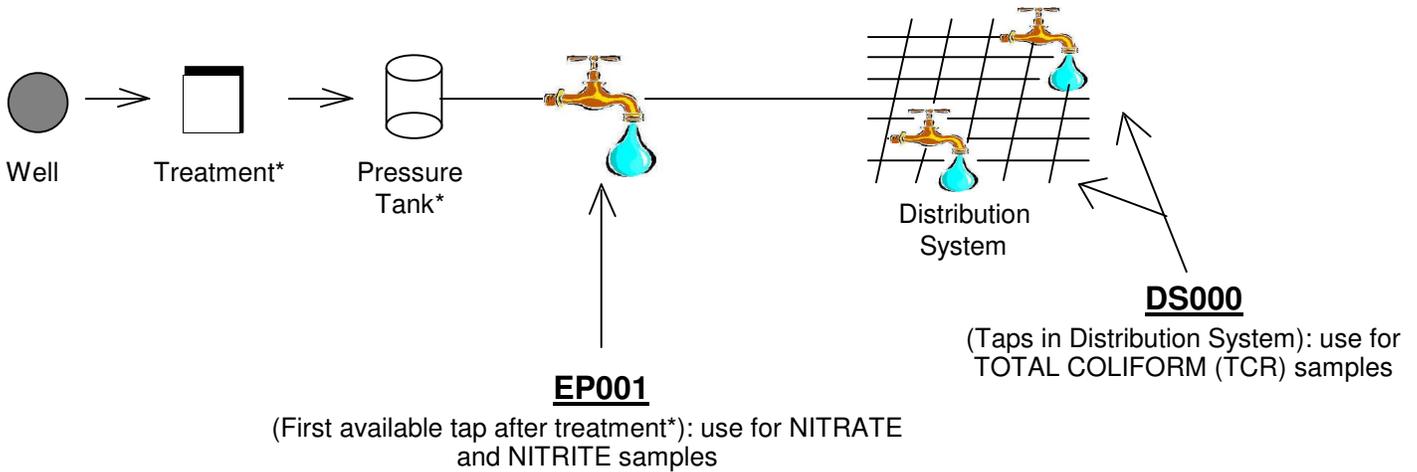

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2940322 PWS NAME: BOY SCOUTS-CAMP BIRCH 2 PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954636 FACILITY NAME: BOY SCOUTS CAMP BIRCH NO 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

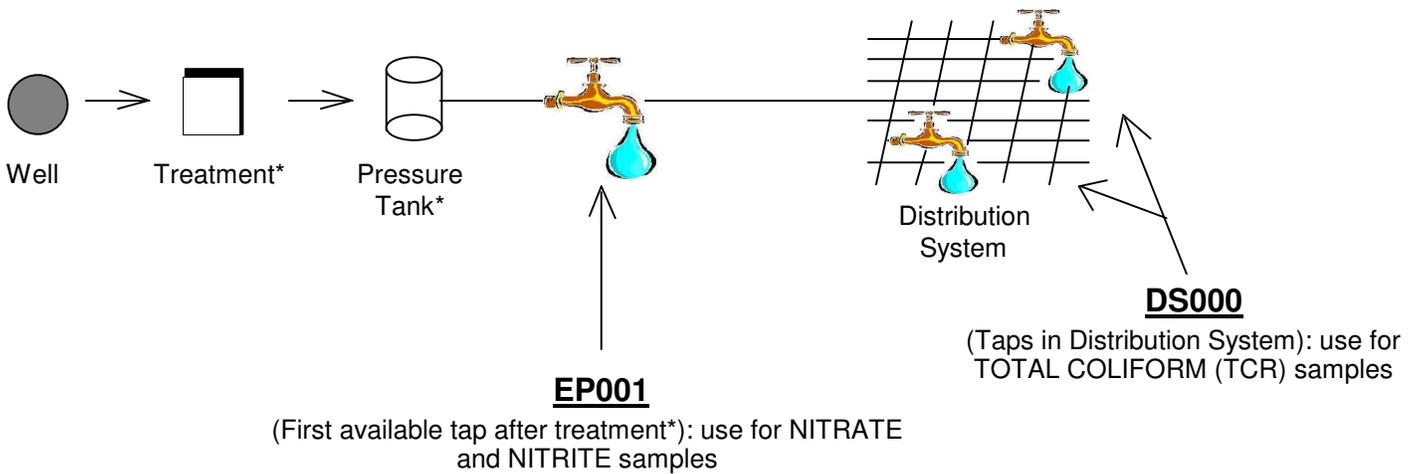

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2940712 PWS NAME: CLIFTON MILLS, INC.
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954638 FACILITY NAME: CLIFTON MILLS INC

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

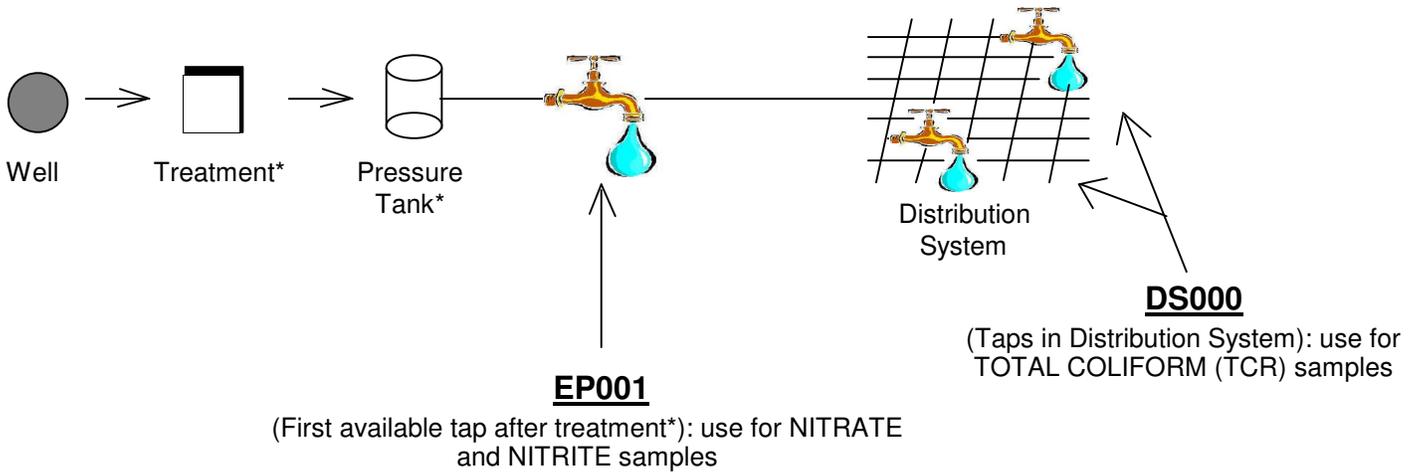

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2940912 PWS NAME: COUNTY LINE BAPTIST CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954639 FACILITY NAME: COUNTY LINE BAPTIST CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

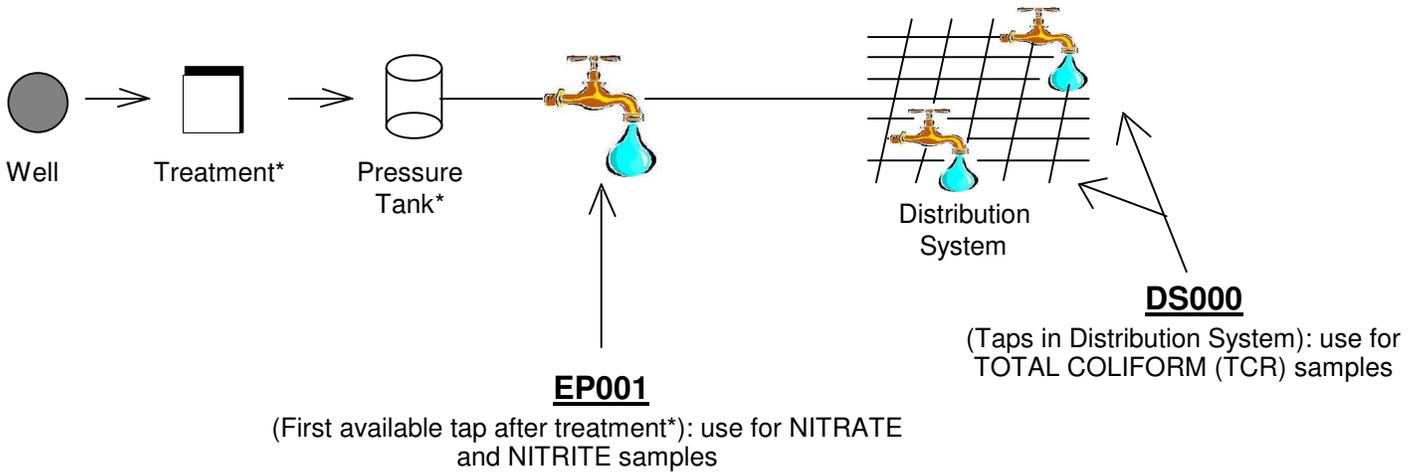

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2941212 PWS NAME: FELLOWSHIP TABERNACLE CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954640 FACILITY NAME: FELLOWSHIP TABERNACLE CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

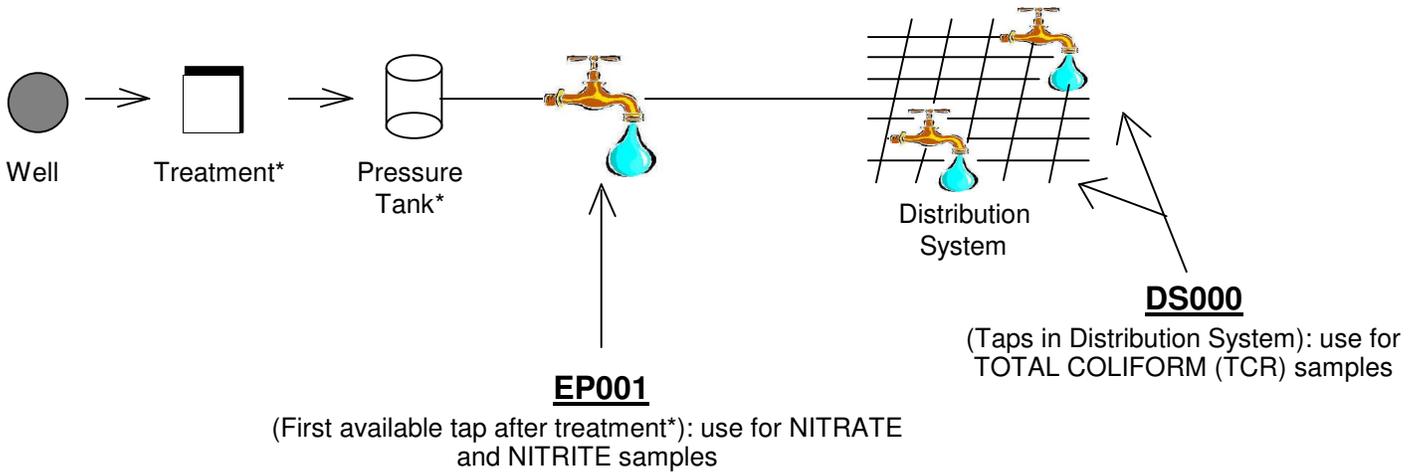

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2941412 PWS NAME: GRAPE GROVE CHURCH OF CHRIST PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954641 FACILITY NAME: GRAPE GROVE CHURCH OF CHRIST

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

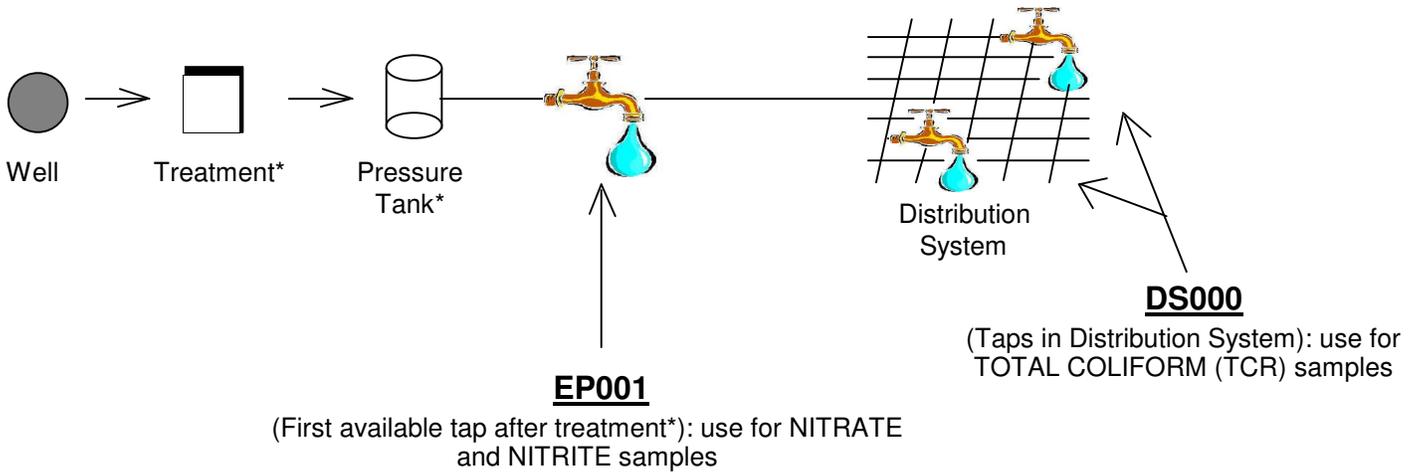

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2941912 PWS NAME: KIDDIE KINGDOM

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954644 STU NAME: KIDDIE KINGDOM

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954644. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
NITRATE Sample Date(s):

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2941912 PWS NAME: KIDDIE KINGDOM

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: KIDDIE KINGDOM DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month. If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

Use for Sample Tracking Purposes				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2942312 PWS NAME: SHAWNEE HILLS BAPTIST CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954646 FACILITY NAME: SHAWNEE HILLS BAPTIST CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

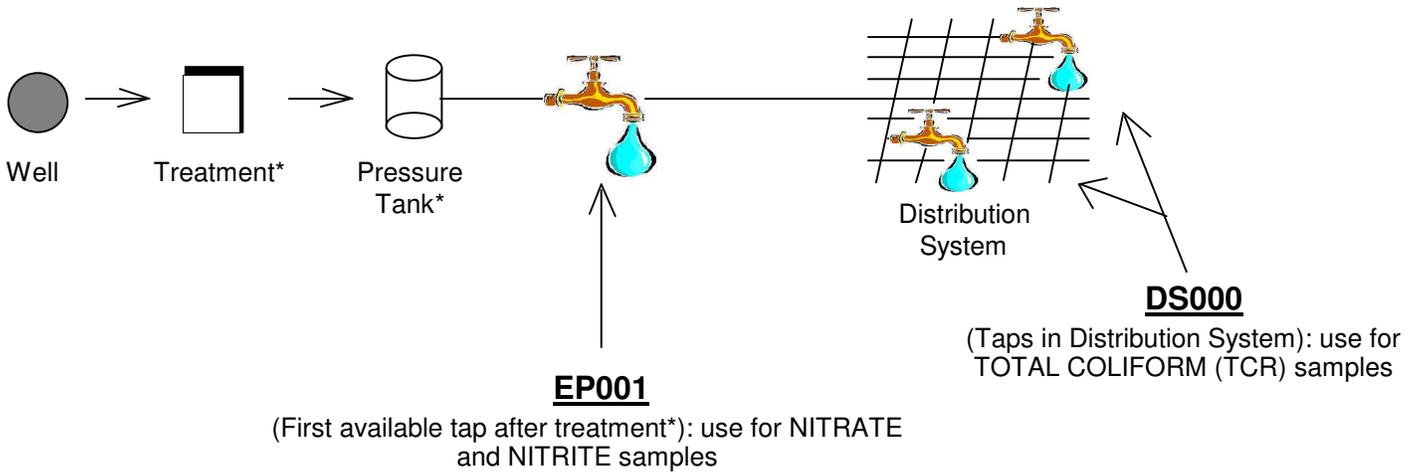

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2943112 PWS NAME: GRACE BAPTIST CHURCH
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954649 FACILITY NAME: GRACE BAPTIST CHURCH

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

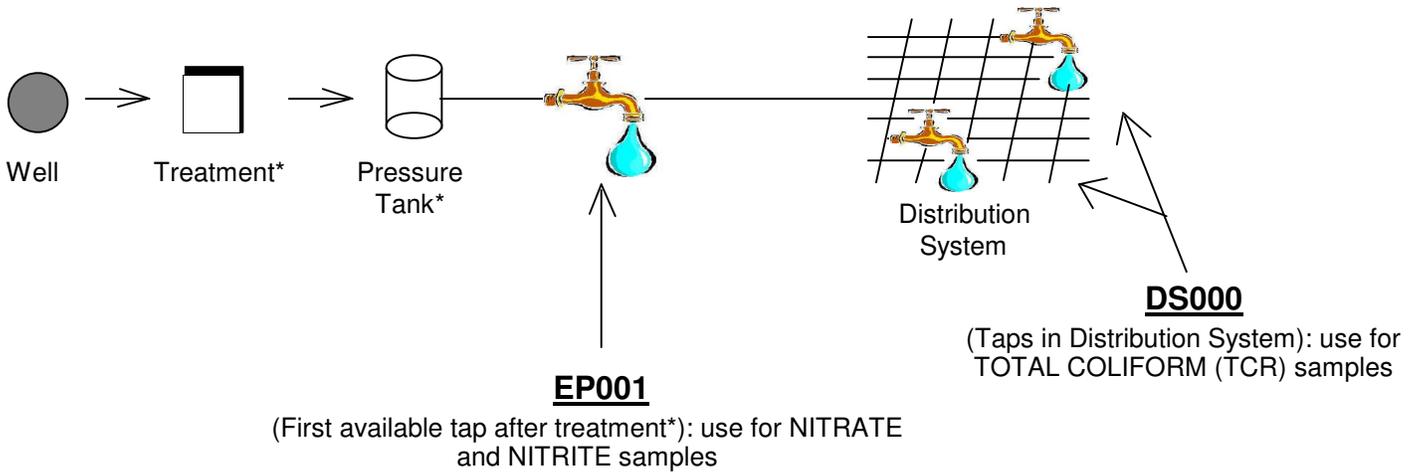

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2943712 PWS NAME: WOODHAVEN SWIM & TENNIS CLUB, INC

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954653 FACILITY NAME: WOODHAVEN SWIM CLUB INC

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 6/1/2010 and 9/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

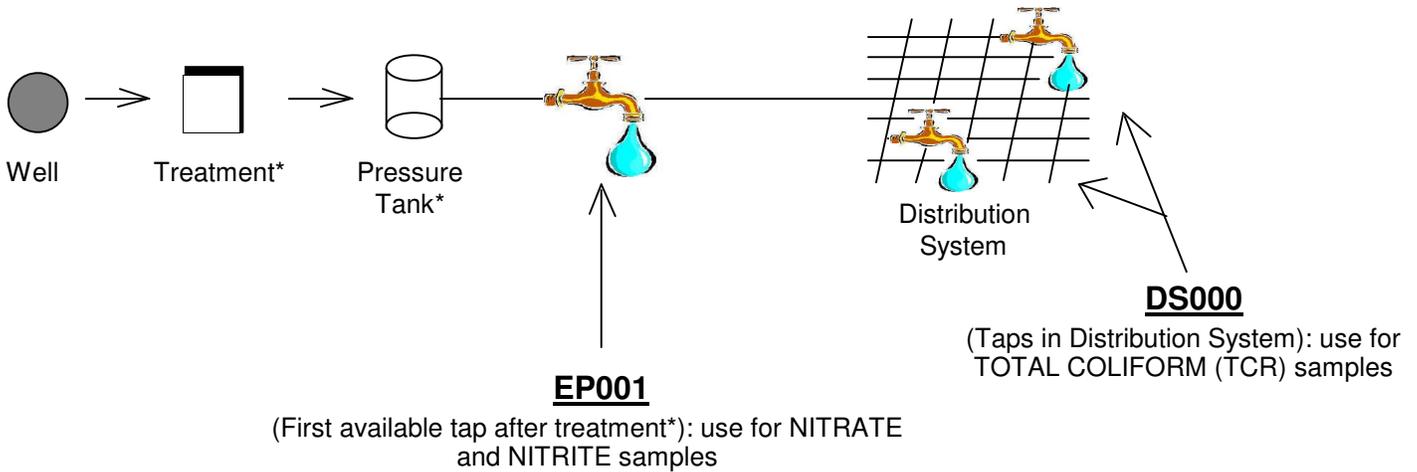

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2944912 PWS NAME: W.O. WRIGHTS PWS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954656 FACILITY NAME: WO WRIGHTS

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

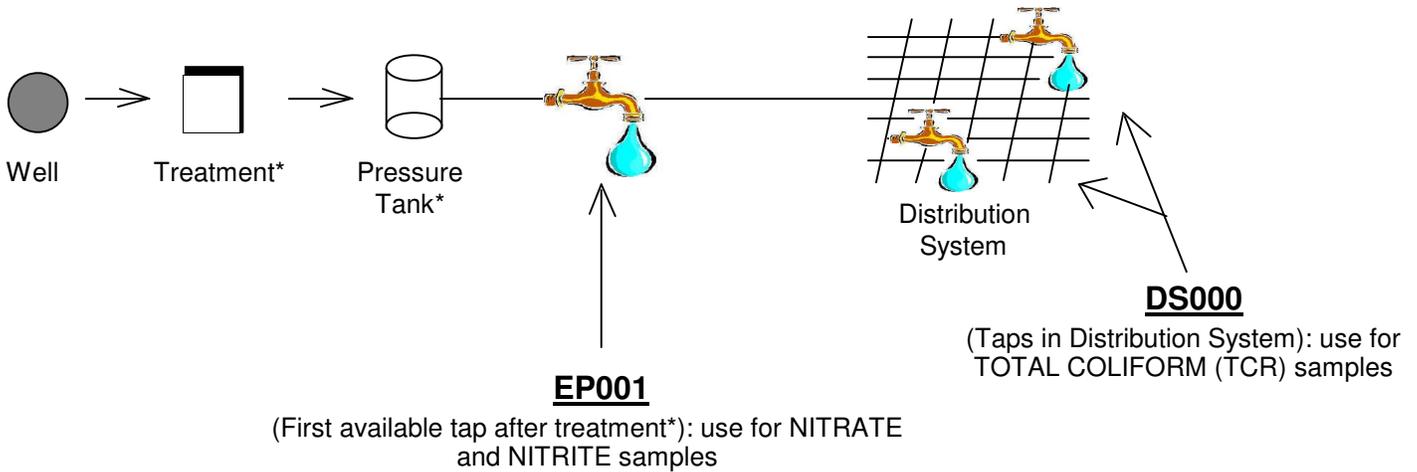

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2945712 PWS NAME: CAMP CLIFTON DAY CAMP

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954657 FACILITY NAME: CAMP CLIFTON DAY CAMP

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) Quarterly	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 9/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

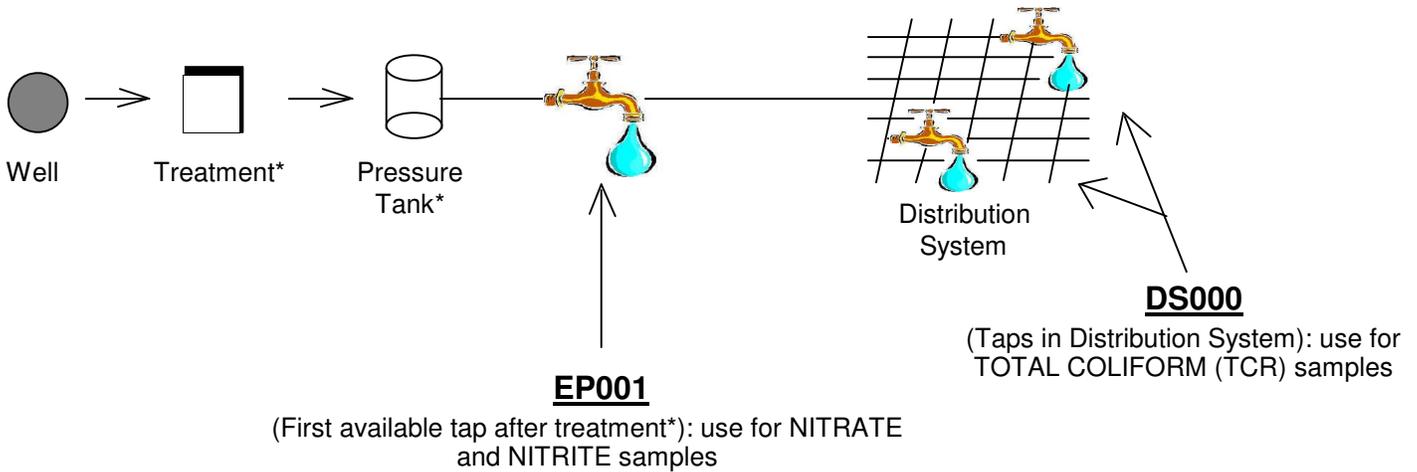

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
Nitrate Quarterly Sample Date(s):				
TCR Quarterly Sample Date(s):				

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2946912 PWS NAME: LIBERTY WORSHIP CENTER CHURCH OF GOD

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954660 FACILITY NAME: LIBERTY WORSHIP CENTER CHURCH OF GOD

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) Quarterly	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

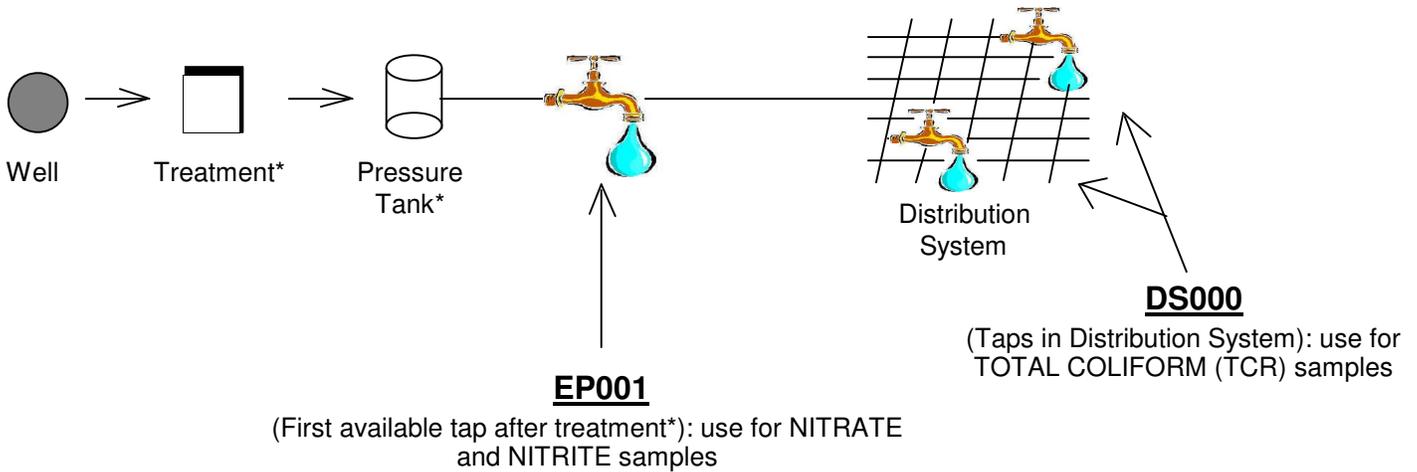

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
Nitrate Quarterly Sample Date(s):				
TCR Quarterly Sample Date(s):				

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2947212 PWS NAME: GRACE COVENANT CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954661 FACILITY NAME: GRACE COVENANT CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

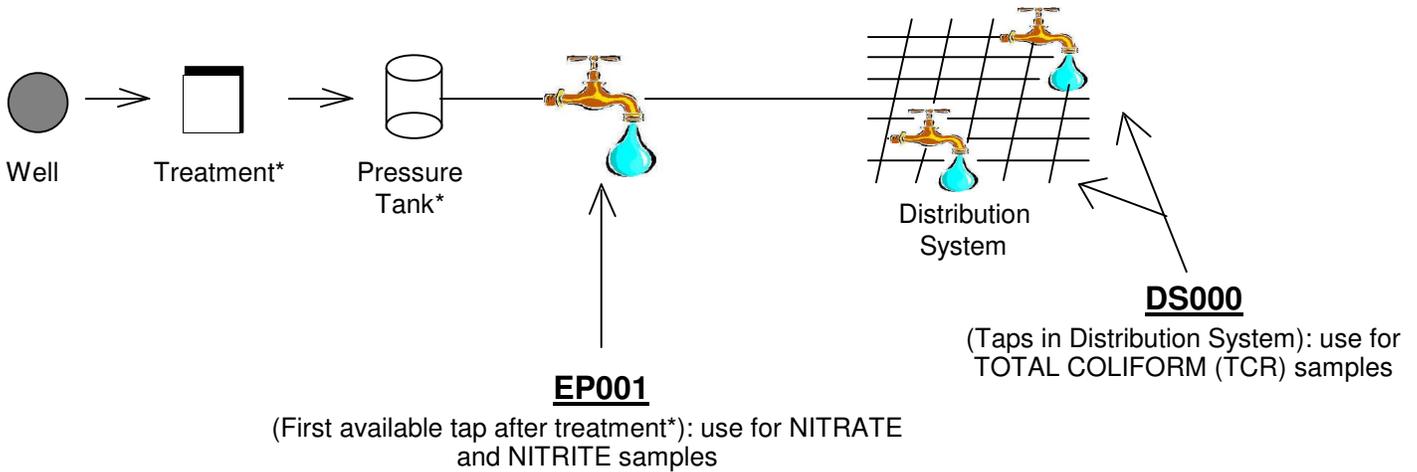

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2947612 PWS NAME: GRACE CHRISTIAN CENTER

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954662 FACILITY NAME: GRACE CHRISTIAN CENTER

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

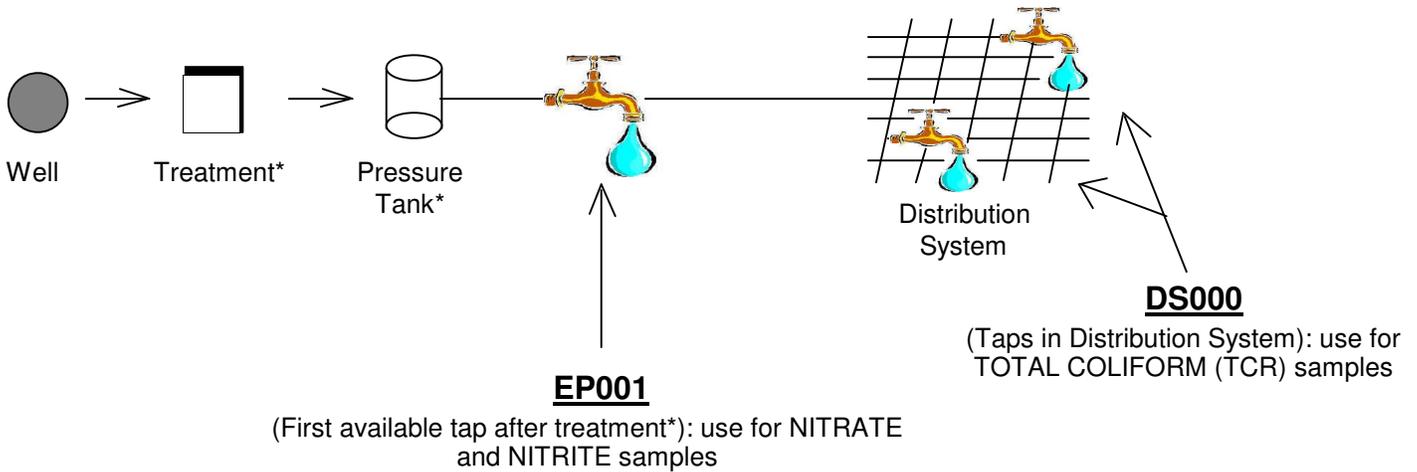

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2948312 PWS NAME: GREENE VALLEY RECREATION

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954664 FACILITY NAME: GREENE VALLEY RECREATION CLUB

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2010 and 9/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

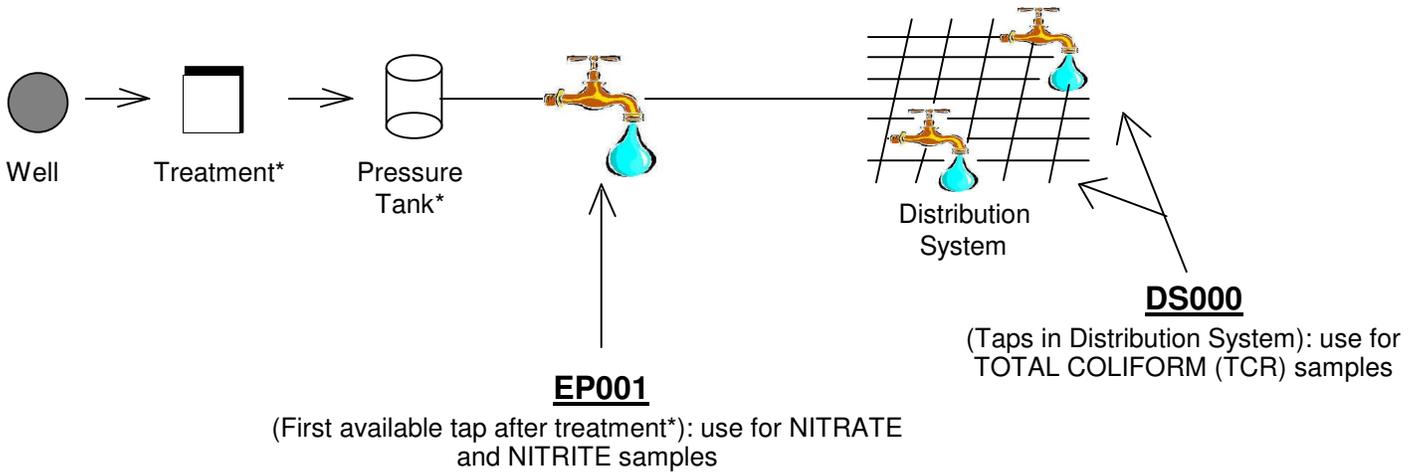

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2948512 PWS NAME: GREENE COUNTRY CLUB LLC

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954666 FACILITY NAME: GREENE COUNTRY CLUB

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

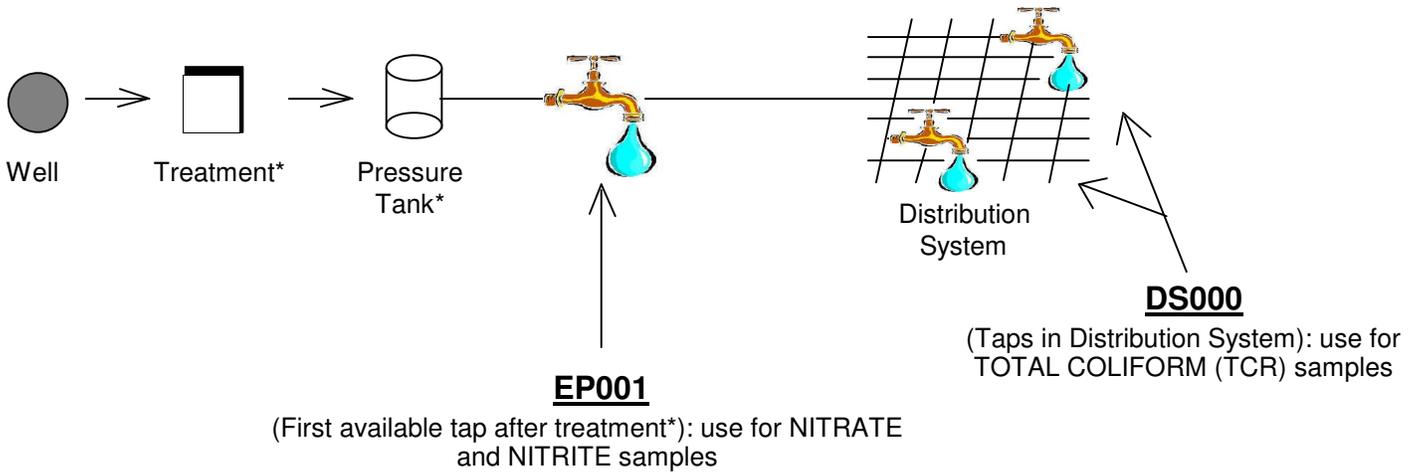

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2949112 PWS NAME: KIL-KARE INCORPORATED 1

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954667 FACILITY NAME: KIL-KARE INC NO 1

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 11/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

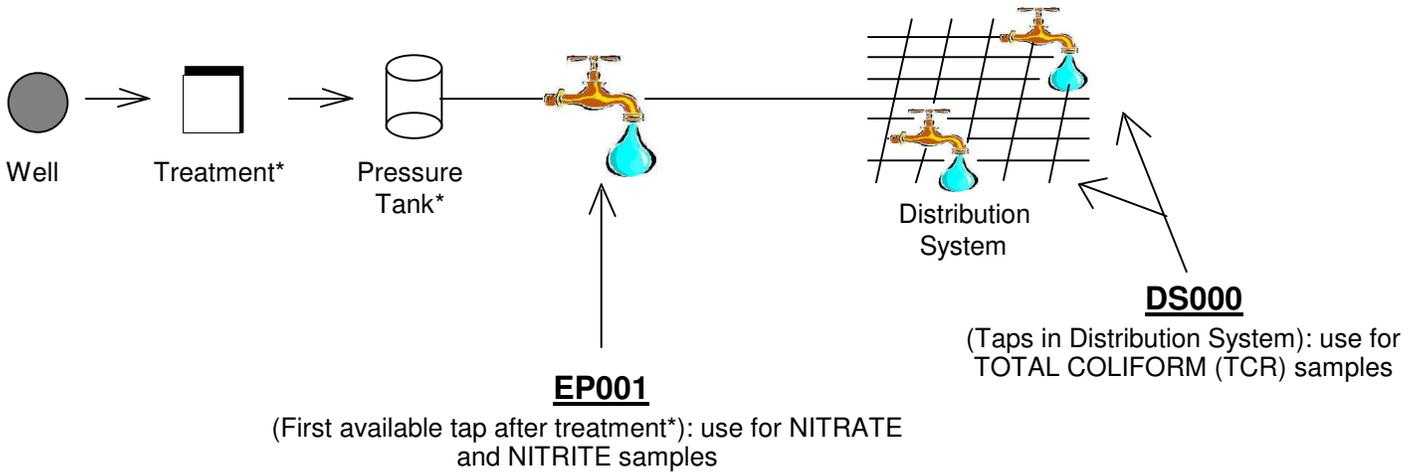

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2949712 PWS NAME: KNOLLWOOD FLOWERS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954669 FACILITY NAME: KNOLLWOOD FLORISTS INC

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

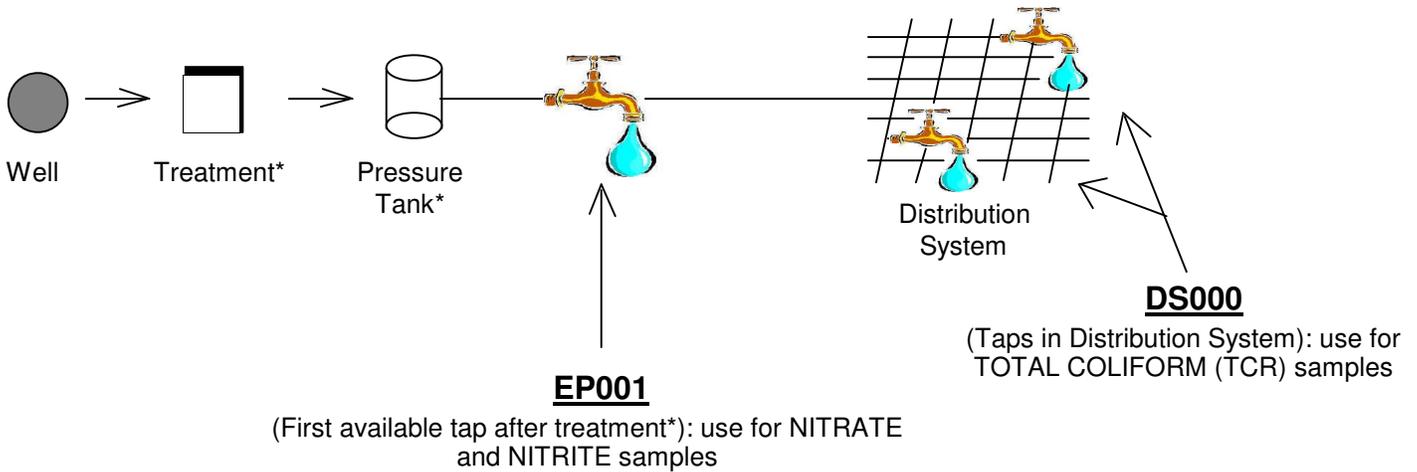

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2950212 PWS NAME: MAMMAWS KITCHEN
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954670 FACILITY NAME: MAMMAWS KITCHEN

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 4/1/2010 and 6/30/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

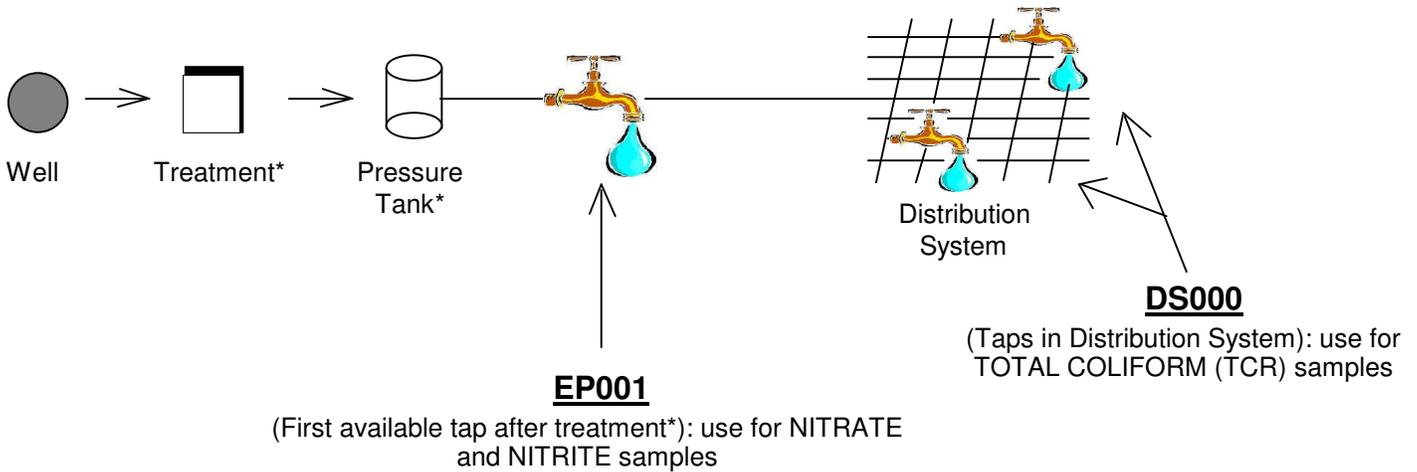

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2950312 PWS NAME: MOOSE LODGE 73
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954671 FACILITY NAME: MOOSE LODGE 73

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

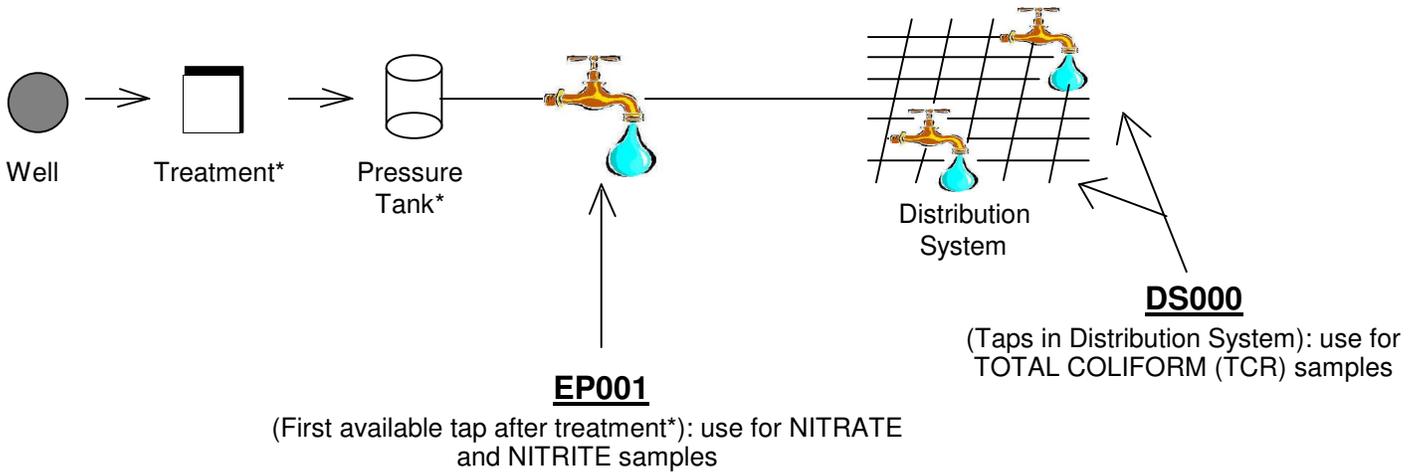

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2950712 PWS NAME: ODNR-JOHN BRYAN STATE PARK 2 PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954672 FACILITY NAME: ODNR JOHN BRYAN STATE PARK NO 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 9/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

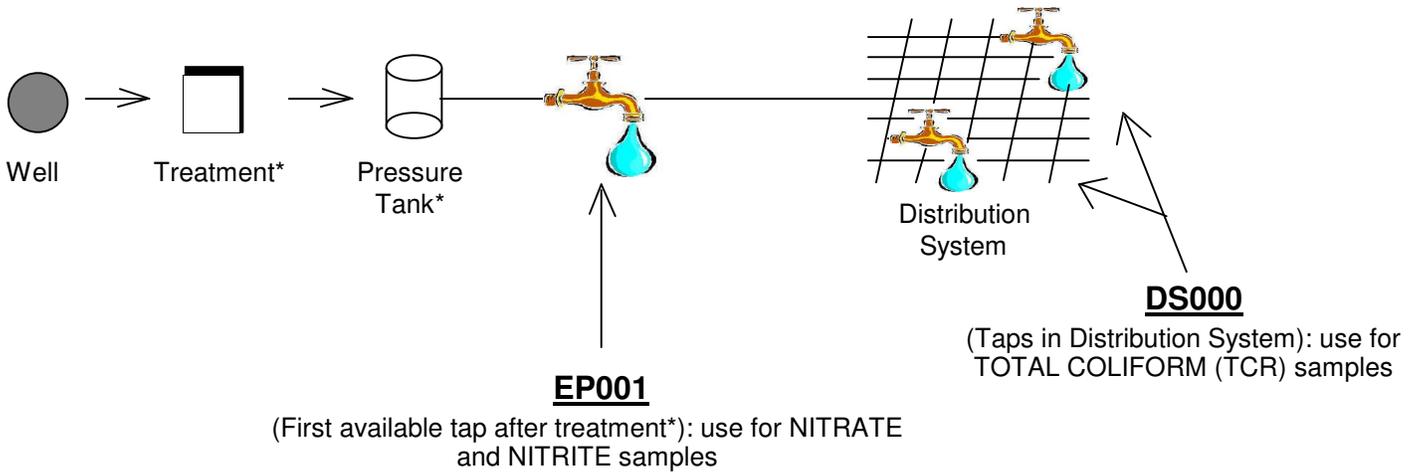

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2951112 PWS NAME: SUBMARINE HOUSE
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954674 FACILITY NAME: SUBMARINE HOUSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

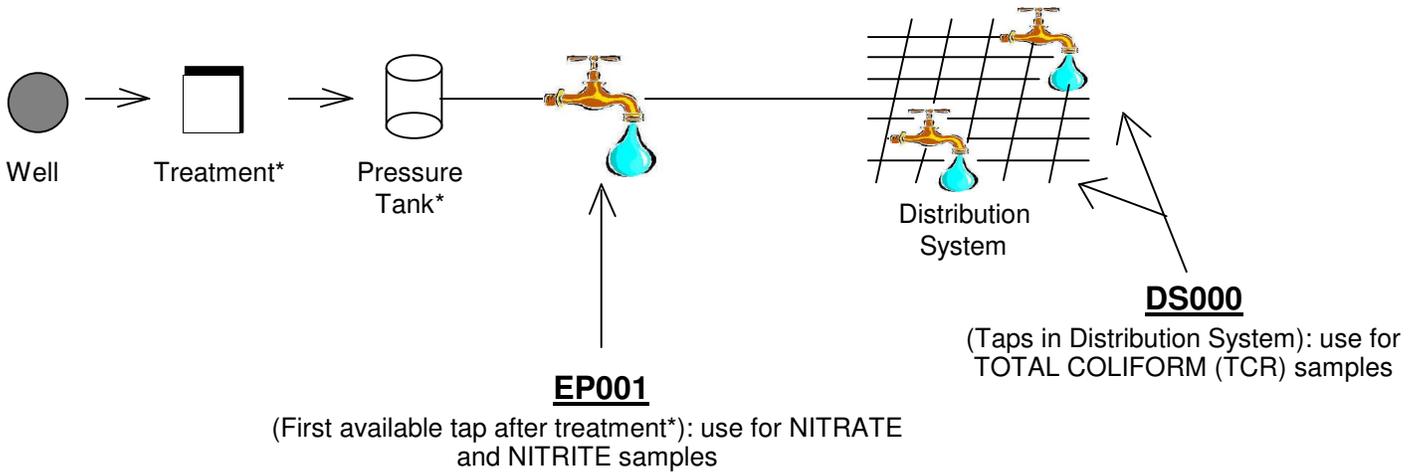

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2951312 PWS NAME: BELLBROOK-SUGARCREEK COMMUNITY CENTER

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954675 FACILITY NAME: BELLBROOK-SUGARCREEK COMM CTR

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

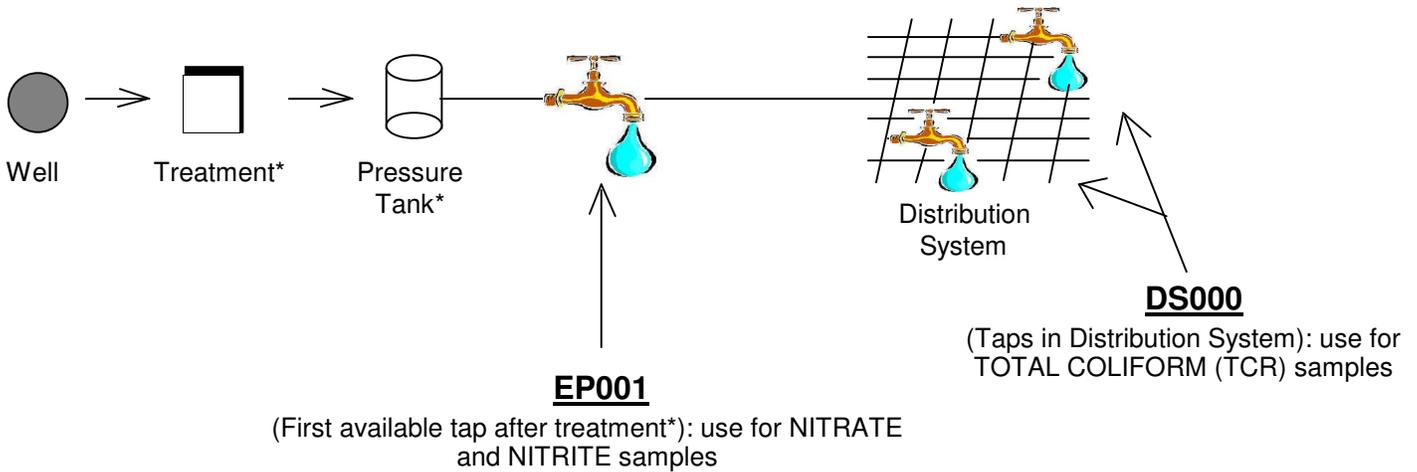

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2951412 PWS NAME: BEAVERCREEK PIZZA PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2961722 FACILITY NAME: TREATMENT

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

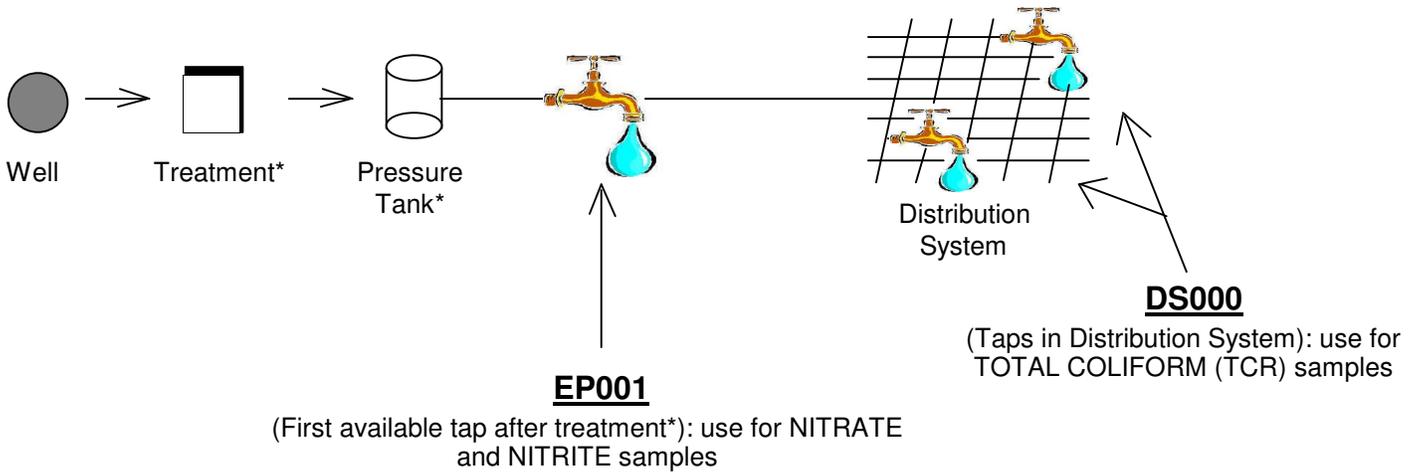

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2952512 PWS NAME: SUGAR VALLEY COUNTRY CLUB

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954677 FACILITY NAME: SUGAR VALLEY C.C. - CLUBHOUSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

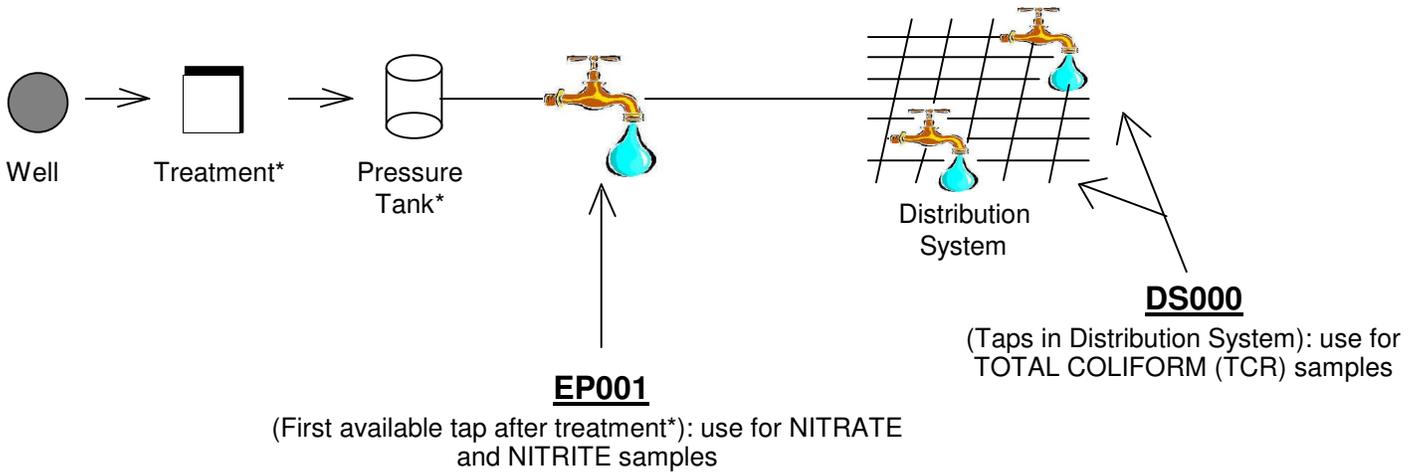

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2954412 PWS NAME: CEMEX - QUARRY

PWS TYPE: Nontransient Noncommunity SOURCE: Purchased Ground Water Sample Monitoring Point: DS000

FACILITY NAME: CEMEX - QUARRY

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** Not Required, Unless State Delinquency Notice Received
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010 1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>
<i>TCR Quarterly Sample Date(s):</i>				

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2954912 PWS NAME: HOMECROFT, INC. PWS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954691 STU NAME: HOMECROFT INC

Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 4/1/2010 and 6/30/2010
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 4 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	TOTAL POLYCHLORINATED BIPHENYLS (PCB) - 2383	1 Sample(s) between 4/1/2010 and 6/30/2010

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954691. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 4 Chemicals: BENZO (A) PYRENE - 2306, ENDOTHALL - 2033, DI(2-ETHYLHEXYL) - ADIPATE - 2035, DI(2-ETHYLHEXYL) - PHTHALATE - 2039

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>SOC Group 2 Sample Date(s):</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2954912 PWS NAME: HOMECROFT, INC. PWS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: HOMECROFT, INC. DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

Use for Sample Tracking Purposes				
<i>Lead & Copper Sample Date(s):</i>				
<i>TCR Quarterly Sample Date(s):</i>				
	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2955112 PWS NAME: DAYTON POWER AND LIGHT CO

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954693 STU NAME: DAYTON POWER & LIGHT CO XENIA SERV BLDG

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
ARSENIC	ARSENIC - 1005	1 Sample(s) Quarterly
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954693. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
<i>ARSENIC Quarterly Sample Date(s):</i>	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
<i>NITRATE Sample Date(s):</i>				

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2955112 PWS NAME: DAYTON POWER AND LIGHT CO

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: DAYTON POWER & LIGHT CO DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** Not Required
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
Lead & Copper Sample Date(s):				
TCR Quarterly Sample Date(s):				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2955812 PWS NAME: D & K FOOD MART
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954695 FACILITY NAME: D AND K FOOD MART

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

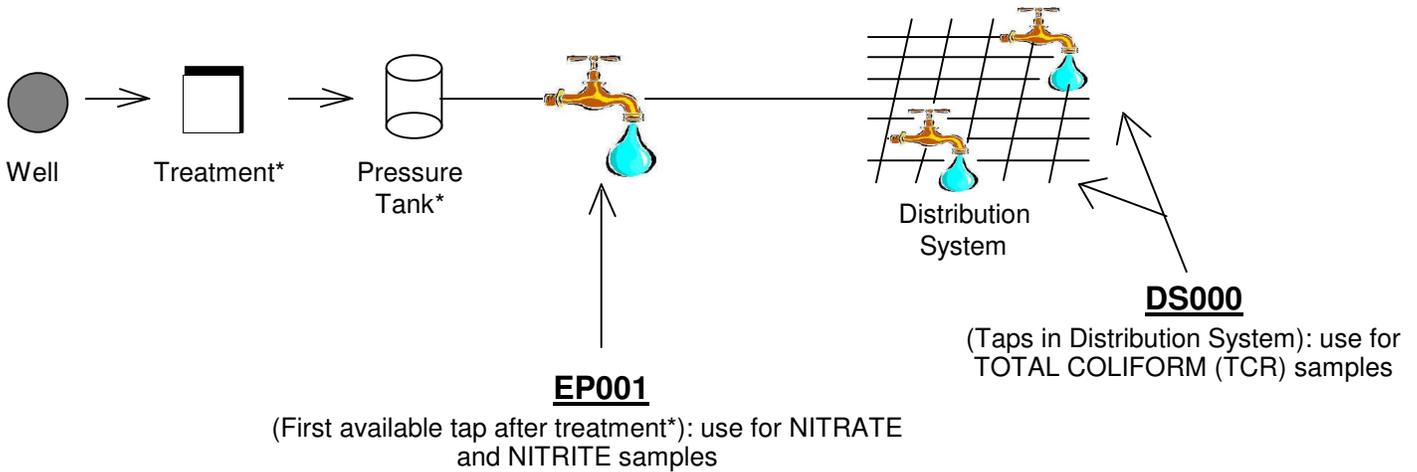

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2956012 PWS NAME: FREEDOM BAPTIST TEMPLE

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954697 FACILITY NAME: FREEDOM BAPTIST TEMPLE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

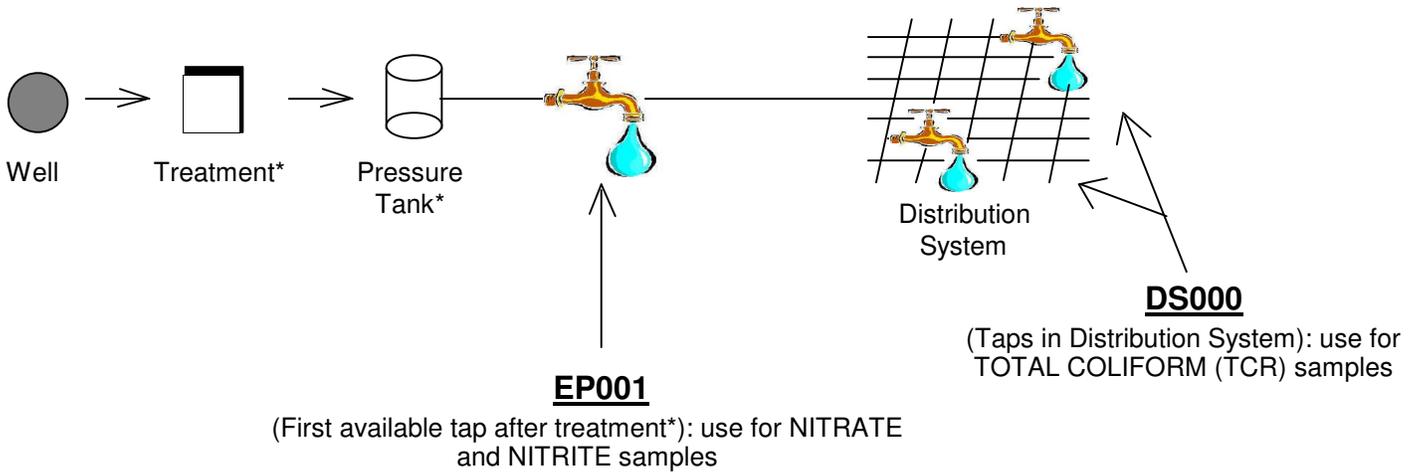

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2956112 PWS NAME: KINGDOM HALL JEHOVAHS PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954698 FACILITY NAME: KINGDOM HALL JEHOVAH WITNESSES

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

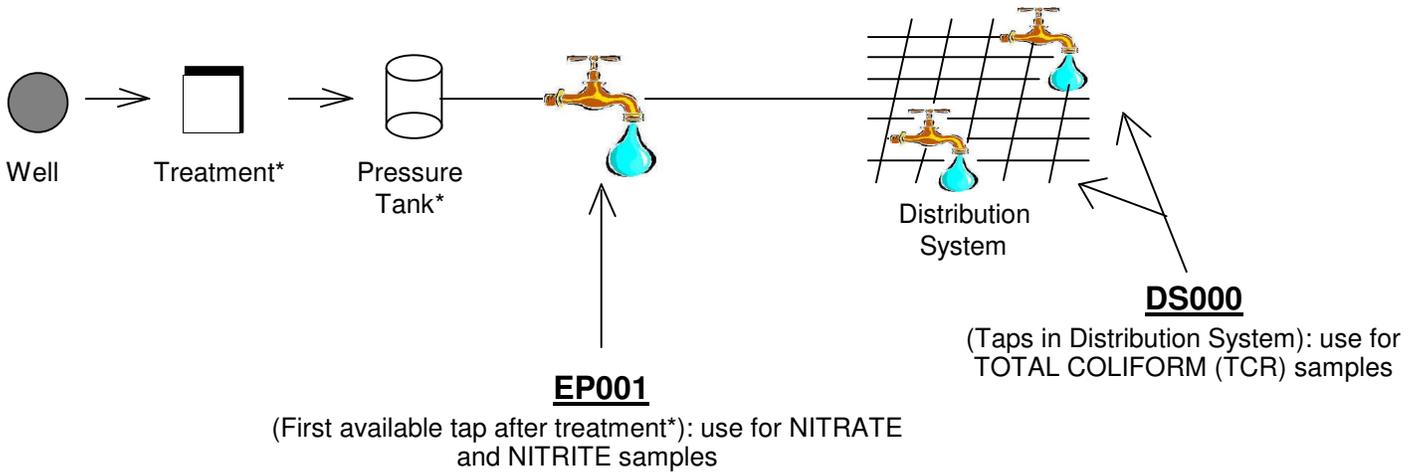

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2956312 PWS NAME: KIL-KARE INCORPORATED 2

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954700 FACILITY NAME: KIL-KARE INC NO 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 11/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

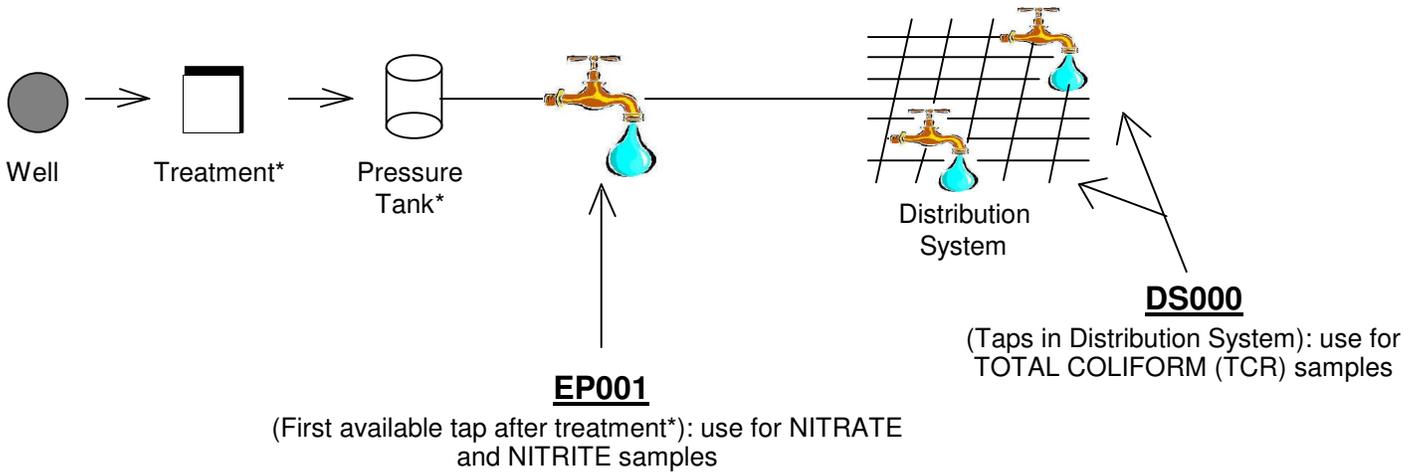

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2956512 PWS NAME: CHURCH OF JESUS CHRIST-FAIRBORN PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954702 FACILITY NAME: CHURCH OF JESUS CHRIST FAIRBORN

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

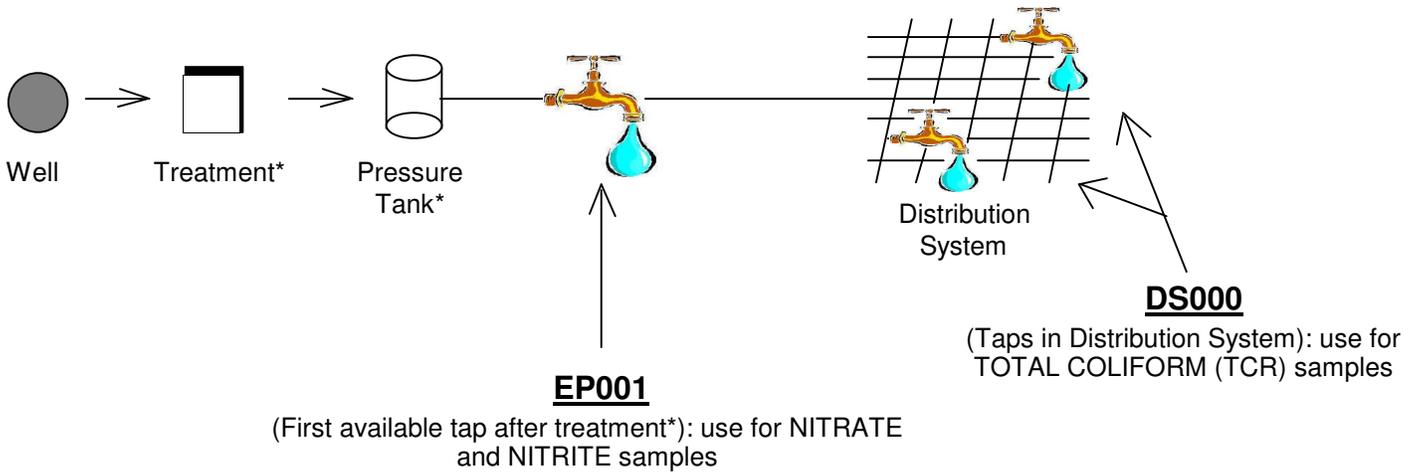

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2956712 PWS NAME: SPORTS PLEX

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954703 FACILITY NAME: SPORTS PLEX

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

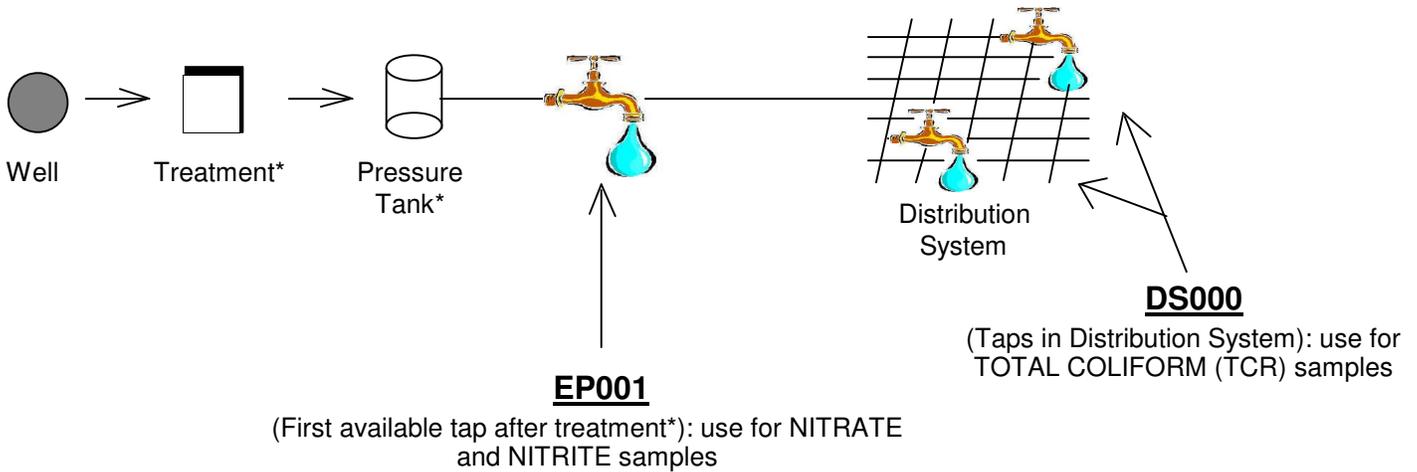

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2956812 PWS NAME: PLAYERS SPORTS PUB
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2954704 FACILITY NAME: PLAYERS SPORTS PUB

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

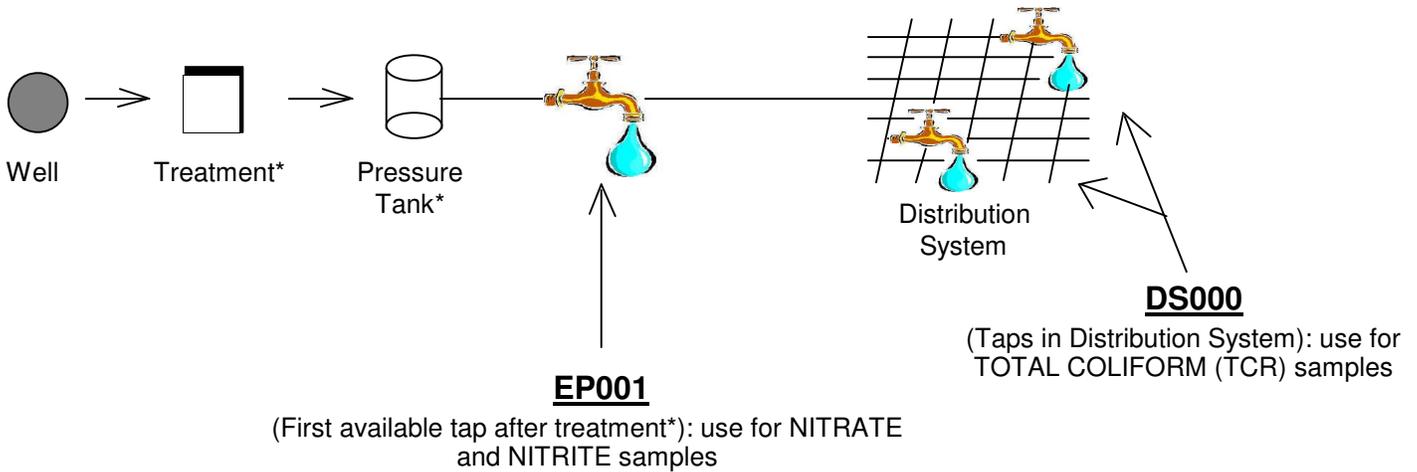

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2956912 PWS NAME: BATH ROAD CHURCH OF CHRIST PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2960779 FACILITY NAME: BATH ROAD CHURCH OF CHRIST

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

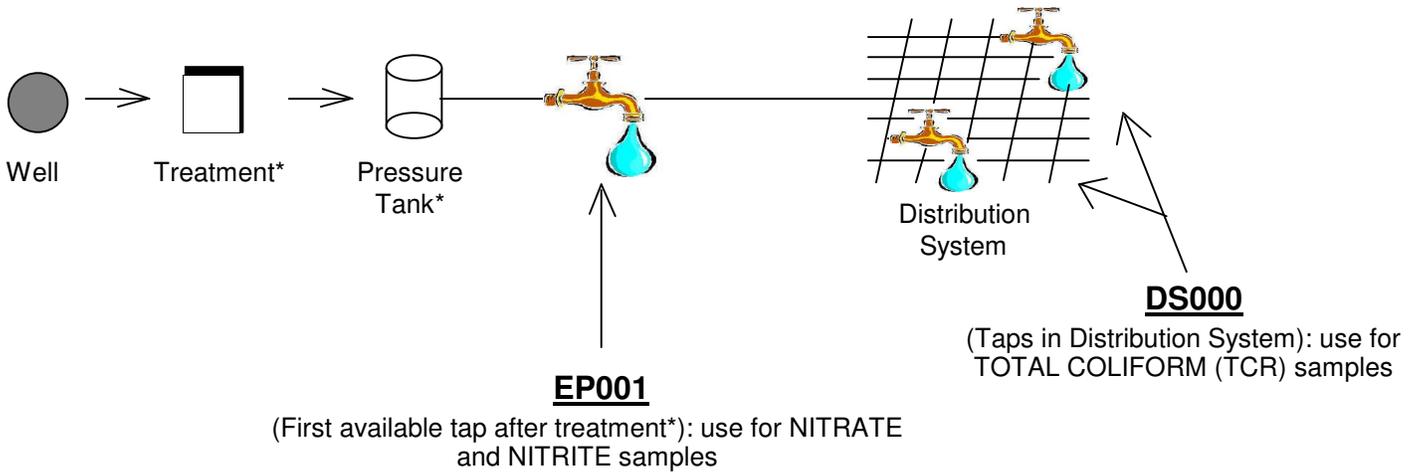

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2957112 PWS NAME: OLD US 35 CAMPGROUND
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2960674 FACILITY NAME: OLD US 35 CAMPGROUND

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 3/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

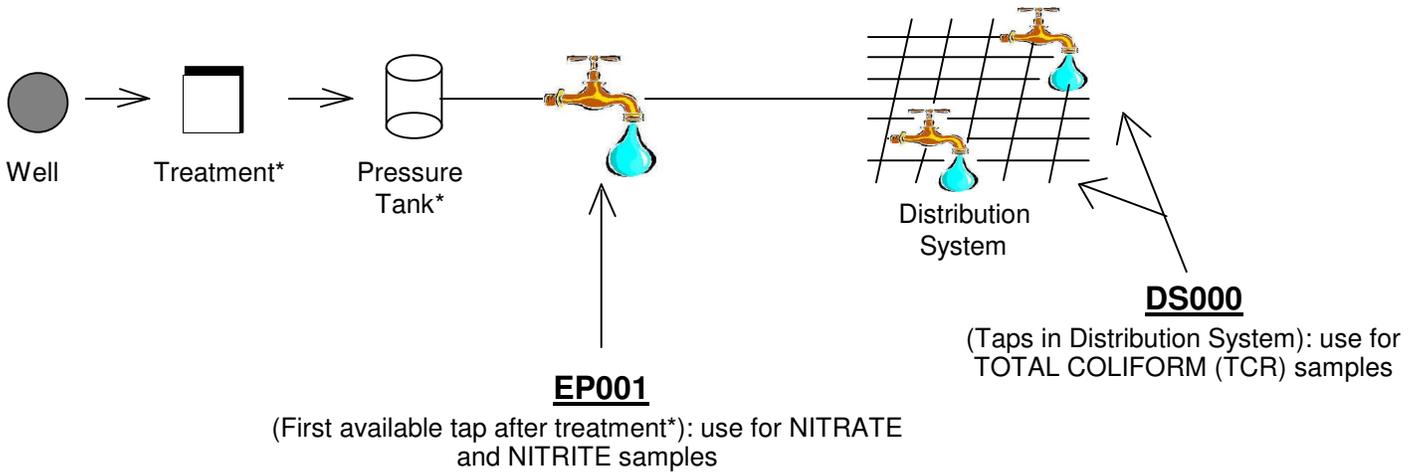

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2957212 PWS NAME: SEBASTIAN HILLS GOLF COURSE PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2960810 FACILITY NAME: SEBASTIAN HILLS GOLF COURSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

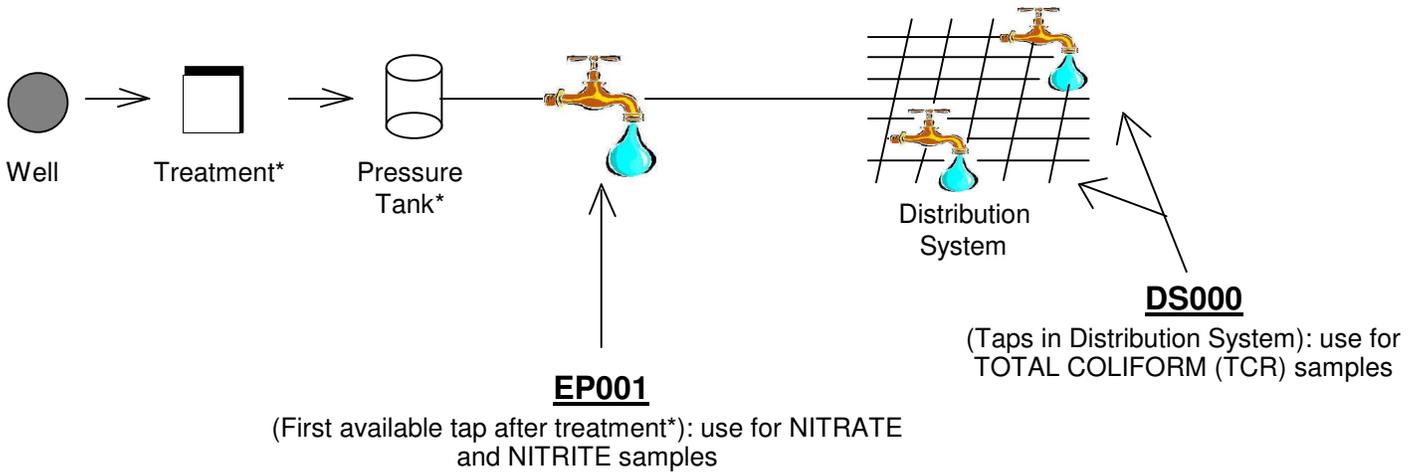

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2957712 PWS NAME: APOSTOLIC GOSPEL TEMPLE PWS
PWS TYPE: Transient Noncommunity SOURCE: Purchased Ground Water
Effective Date: 1/1/10


THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

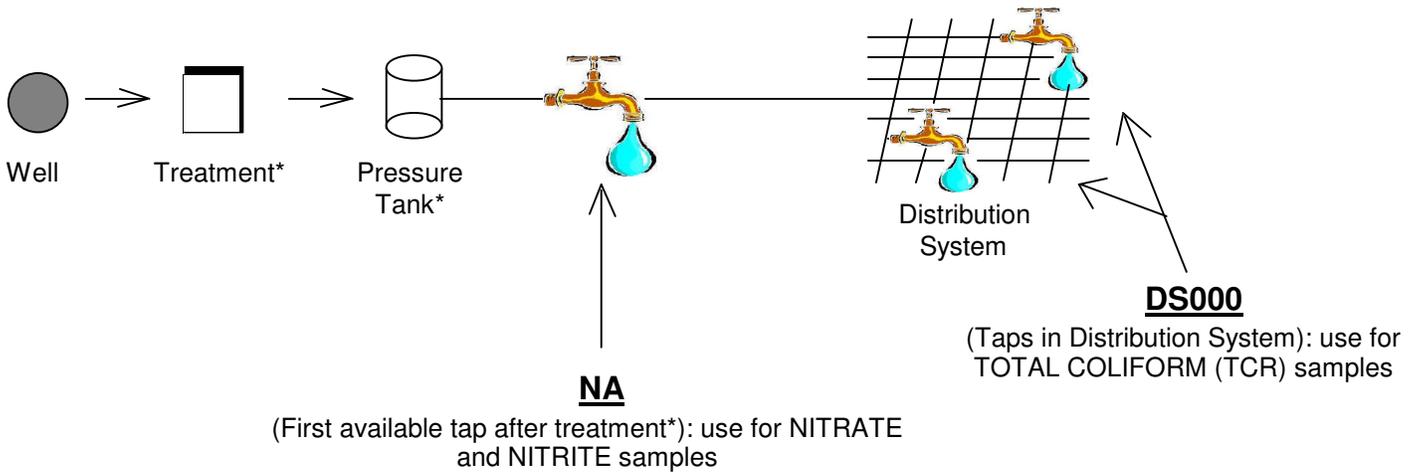

* If system does not have treatment, NA is the first tap after the well.

Use for Sample Tracking Purposes				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2957812 PWS NAME: NBA INC PWS

PWS TYPE: Nontransient Noncommunity SOURCE: Purchased Ground Water Sample Monitoring Point: DS000

FACILITY NAME: NBA INC DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code

Monitoring Requirements

TOTAL COLIFORM (TCR) - 3100

1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule.

Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.

If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

Use for Sample Tracking Purposes				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH2958312 PWS NAME: GREENE CO FISH AND GAME N CAMPGRND PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 2962124 FACILITY NAME: GREENE COUNTY FISH & GAME

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2010 and 10/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

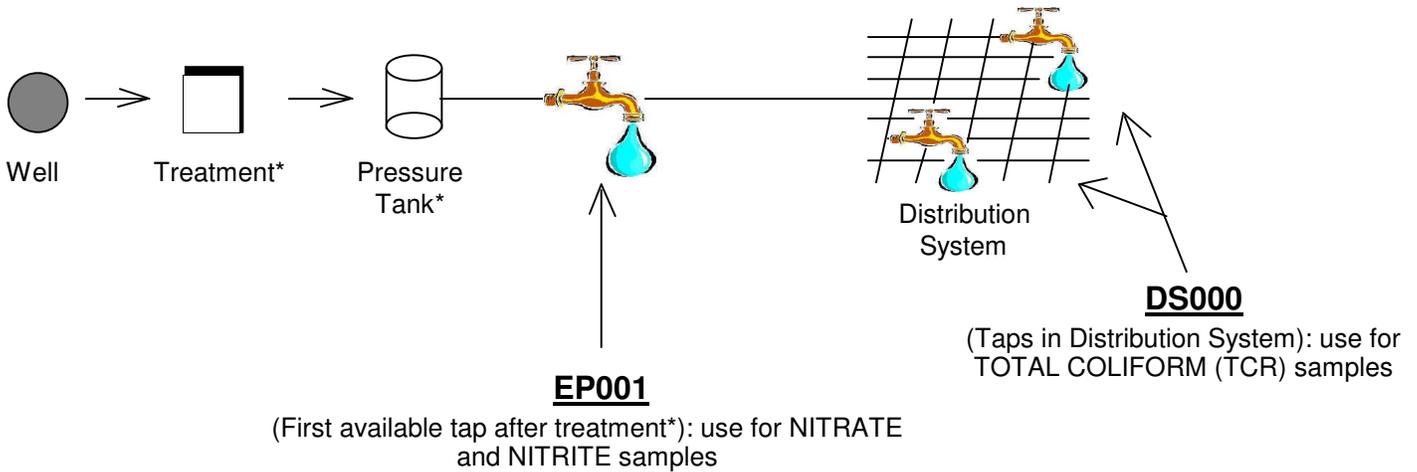

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH2900112 PWS NAME: MOUNT ST. JOHN

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 2954581 STU NAME: MOUNT ST JOHN STU 1

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2010 and 5/31/2010
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 2954581. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes

NITRATE Sample Date(s):

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH2900112 PWS NAME: MOUNT ST. JOHN

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: MOUNT ST. JOHN DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southwest District Office - DDAGW representative immediately at 937-285-6357.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
HAA5 & TTHM Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
Total Chlorine Sample Date(s):				