

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8400112 PWS NAME: BEVERLY VILLAGE PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 8459536 STU NAME: BEVERLY PWS

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 4/1/2010 and 6/30/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) Quarterly
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	PENTACHLOROPHENOL - 2326	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459536. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105,

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes				
<i>INORGANIC Sample Date(s):</i>				
<i>NITRATE Sample Date(s):</i>				
<i>VOC Quarterly Sample Date(s):</i>	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
<i>SOC Group 2 Sample Date(s):</i>				
<i>Date CCR sent to Ohio EPA:</i>				

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8400112 PWS NAME: BEVERLY VILLAGE PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: BEVERLY, VILLAGE OF DISTRIBUTION

Effective Date: 3/15/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	2 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
Lead & Copper Sample Date(s):												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):												
	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8400212 PWS NAME: LITTLE HOCKING WATER & SEWER ASSOCIATION
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 8459537 STU NAME: LITTLE HOCKING WATER & SEWER ASSN
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459537. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8400212 PWS NAME: LITTLE HOCKING WATER & SEWER ASSOCIATION

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: LITTLE HOCKING W&S ASSOC DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	30 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	10 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Lead & Copper Sample Date(s):</i>												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8400312 PWS NAME: LOWELL VILLAGE PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 8459538 STU NAME: LOWELL PWS

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) Quarterly
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459538. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes				
<i>INORGANIC Sample Date(s):</i>				
<i>NITRATE Quarterly Sample Date(s):</i>	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
<i>VOC Sample Date(s):</i>				
<i>SOC Group 2 Sample Date(s):</i>				
<i>Date CCR sent to Ohio EPA:</i>				

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8400312 PWS NAME: LOWELL VILLAGE PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: LOWELL, VILLAGE OF DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
Lead & Copper Sample Date(s):												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):												
	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8400412 PWS NAME: MARIETTA CITY PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 8459539 STU NAME: MARIETTA WTP

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 10/1/2010 and 12/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459539. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8400412 PWS NAME: MARIETTA CITY PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: MARIETTA, CITY OF DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	20 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes											
HAA5 & TTHM Sample Date(s):											
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov Dec
Total Chlorine Sample Date(s):											

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8400512 PWS NAME: MATAMORAS VILLAGE

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 8459540 STU NAME: MATAMORAS PWS

Effective Date: 1/19/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459540. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8400512 PWS NAME: MATAMORAS VILLAGE

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: MATAMORAS, VILLAGE OF DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8400612 PWS NAME: NEWPORT WATER & SEWER DISTRICT PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 8459541 STU NAME: NEWPORT W&SD - WTP
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 7/1/2010 and 9/30/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459541. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 2 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8400612 PWS NAME: NEWPORT WATER & SEWER DISTRICT PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: NEWPORT WTR. & SWR. DIST DISTRIBUTION
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	2 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8400712 PWS NAME: PUTNAM COMMUNITY WATER ASSOCIATION PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 8459542 STU NAME: PUTNAM COMMUNITY WATER ASSN
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) Monthly
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459542. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes												
<i>INORGANIC Sample Date(s):</i>												
<i>NITRATE Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>VOC Sample Date(s):</i>												
<i>SOC Group 2 Sample Date(s):</i>												
<i>Date CCR sent to Ohio EPA:</i>												

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8400712 PWS NAME: PUTNAM COMMUNITY WATER ASSOCIATION PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: PUTNAM COMM. WTR. ASSOC. DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	3 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8401112 PWS NAME: WATERFORD WATER & SEWER ASSOCIATION
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 8459544 STU NAME: WATERFORD WATER & SEWER ASSN INC
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459544. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8401112 PWS NAME: WATERFORD WATER & SEWER ASSOCIATION
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: WATERFORD WTR & SWR ASSN DISTRIBUTION
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8402703 PWS NAME: WARREN COMM W AND S ASSN 2

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 8459547 STU NAME: WARREN COMM WATER & SEWER ASSN NO 2

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	1 Sample(s) between 6/1/2010 and 10/31/2010
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459547. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>RADIOLOGICAL Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 2 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8403112 PWS NAME: TRI-COUNTY RURAL W AND S DISTRICT
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 8459551 STU NAME: TRI-COUNTY RURAL W&SD
Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) Monthly
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459551. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes												
<i>INORGANIC Sample Date(s):</i>												
<i>NITRATE Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>VOC Sample Date(s):</i>												
<i>SOC Group 2 Sample Date(s):</i>												
<i>Date CCR sent to Ohio EPA:</i>												

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8403112 PWS NAME: TRI-COUNTY RURAL W AND S DISTRICT

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: TRI-COUNTY RURAL W&S DIS DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	3 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>												
	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8433312 PWS NAME: EDGEWATER CAFE
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8459556 FACILITY NAME: EDGEWATER CAFE

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

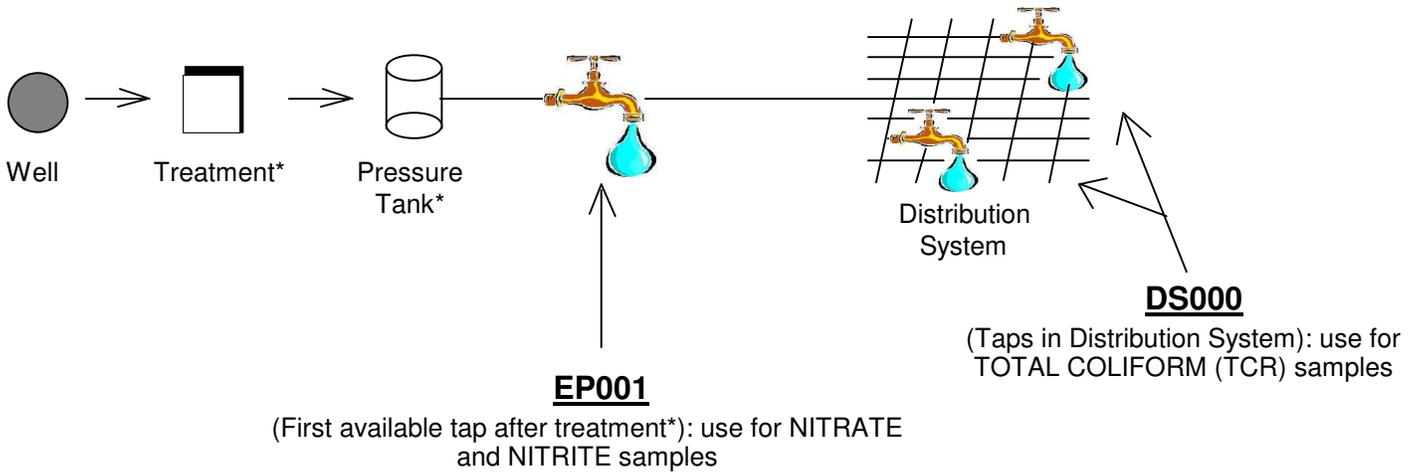

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8435912 PWS NAME: HOUSE OF WINES
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8459561 FACILITY NAME: HOUSE OF WINES

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 7/1/2010 and 9/30/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

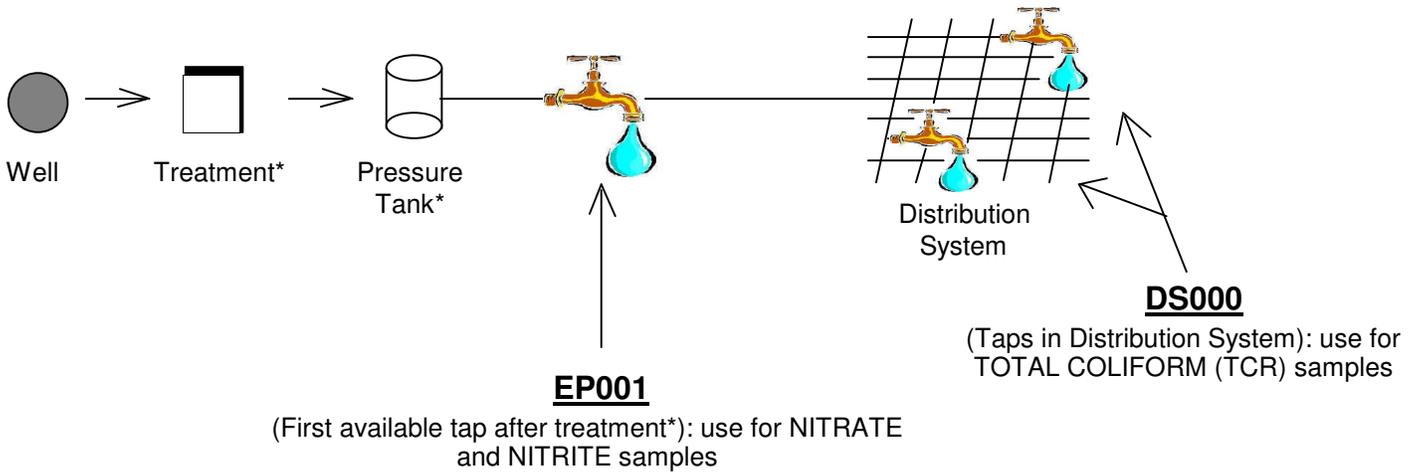

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8436512 PWS NAME: LAKESIDE INC.
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8459563 FACILITY NAME: LAKESIDE INC

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2010 and 3/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

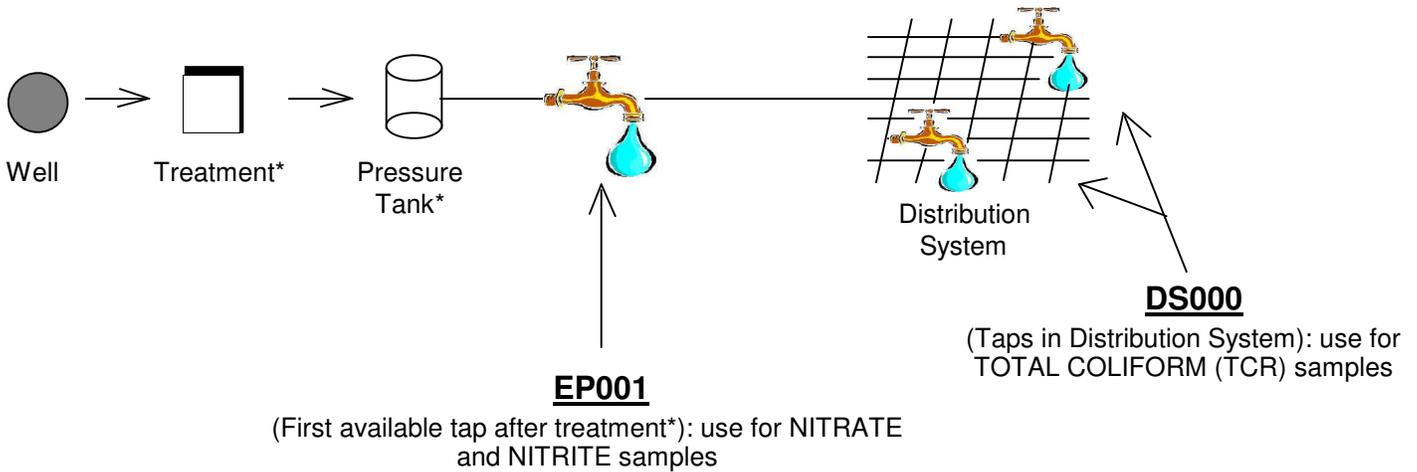

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8437512 PWS NAME: MARIETTA BIBLE CENTER CHURCH

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 8459566 STU NAME: MARIETTA BIBLE CENTER CHURCH

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459566. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8437512 PWS NAME: MARIETTA BIBLE CENTER CHURCH

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: MARIETTA BIBLE CENTER CH DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

Use for Sample Tracking Purposes				
<i>Lead & Copper Sample Date(s):</i>				
<i>TCR Quarterly Sample Date(s):</i>				
	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8438012 PWS NAME: MASONIC PARK
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8459568 FACILITY NAME: MASONIC PARK

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) Quarterly	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

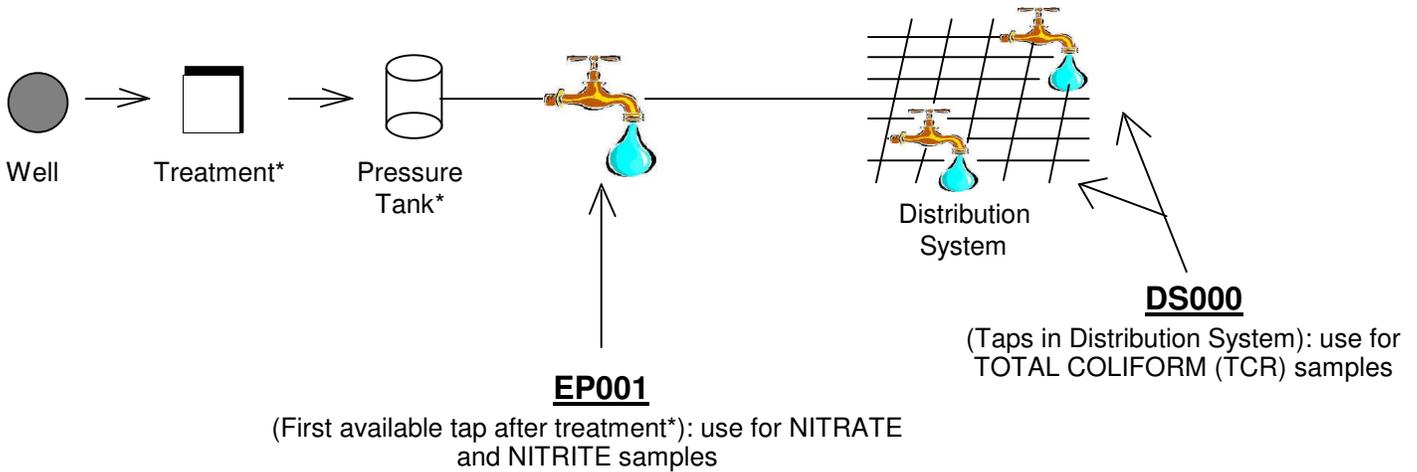

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
Nitrate Quarterly Sample Date(s):				
TCR Quarterly Sample Date(s):				

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8445112 PWS NAME: AEP-MUSKINGUM RIVER U5

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 8459573 STU NAME: AEP MUSKINGUM RIVER PLANT

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2010 and 3/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459573. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8445112 PWS NAME: AEP-MUSKINGUM RIVER U5

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: AEP-MUSKINGUM RIVER U5 DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
HAA5 & TTHM Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
Total Chlorine Sample Date(s):				

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8445412 PWS NAME: MARIETTA SHRINE CLUB
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8459575 FACILITY NAME: MARIETTA SHRINE CLUB TP

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 4/1/2010 and 6/30/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

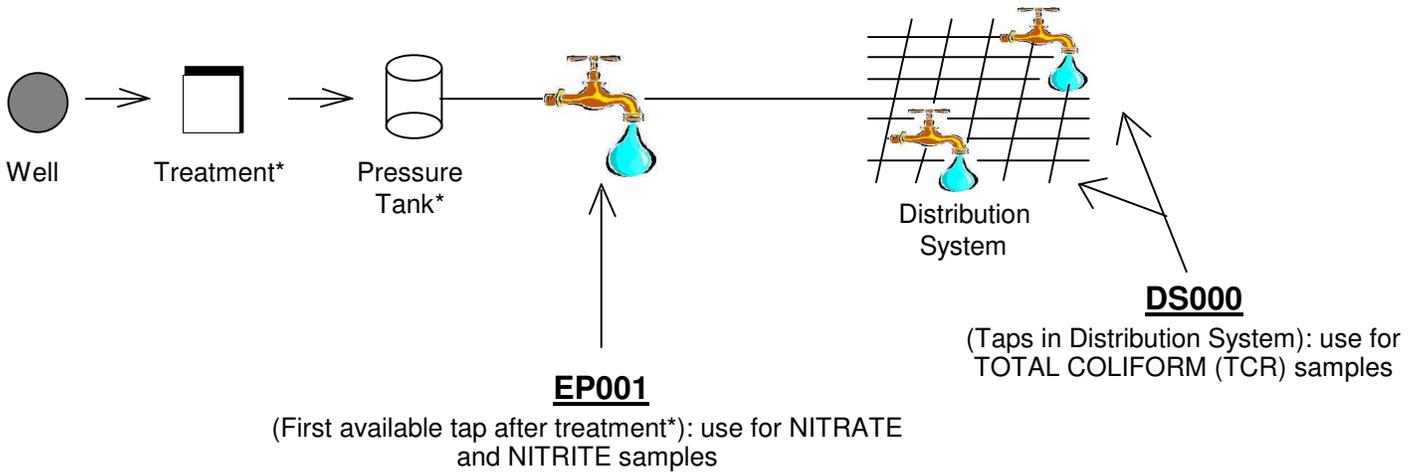

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8446112 PWS NAME: ODNR-LUKE CHUTE LOCK 5

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8459579 FACILITY NAME: ODNR - LUKE CHUTE LOCK NO 5

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 9/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

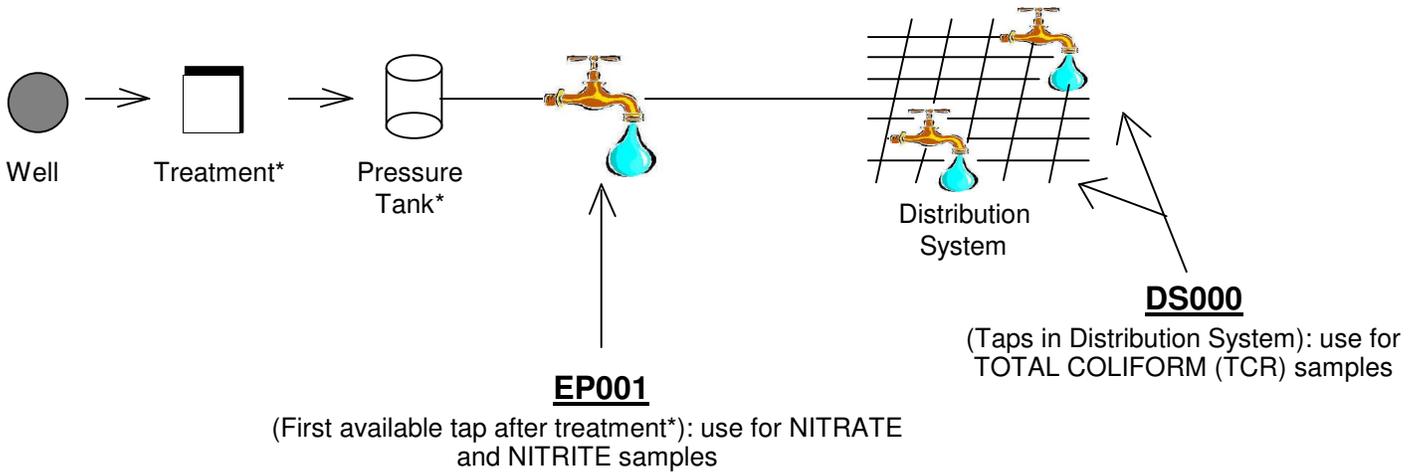

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8446312 PWS NAME: ARROWHEAD PINES GOLF

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8459581 FACILITY NAME: ARROWHEAD PINES GOLF

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

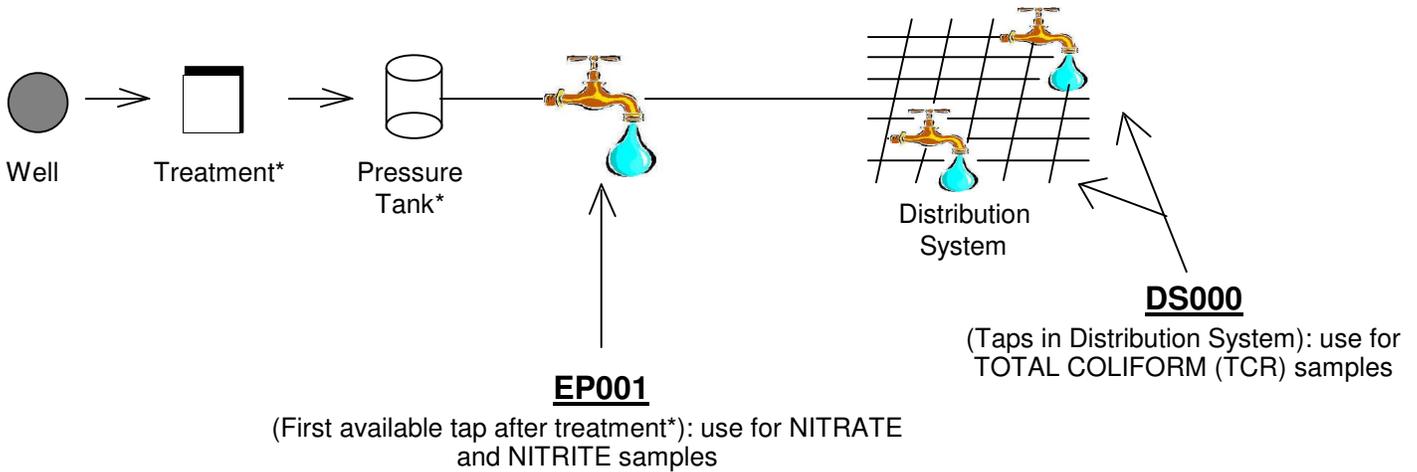

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8446812 PWS NAME: RENO MINI MART
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8459586 FACILITY NAME: RENO MINI MART

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

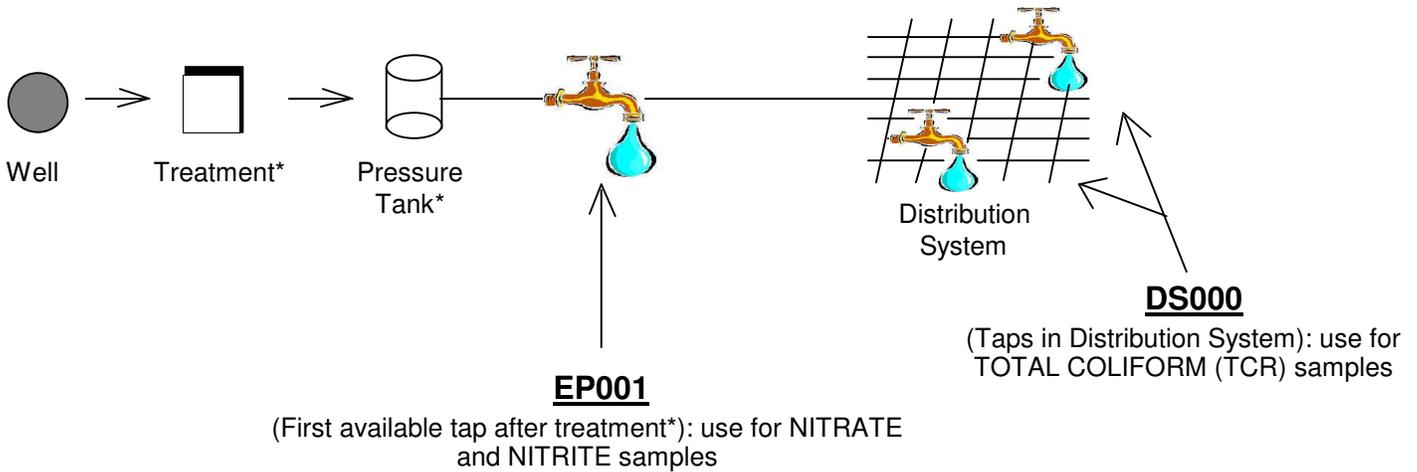

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8447112 PWS NAME: OAK GROVE COMPLEX PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8460760 FACILITY NAME: OAK GROVE COMPLEX

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) Monthly	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2010 and 12/31/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

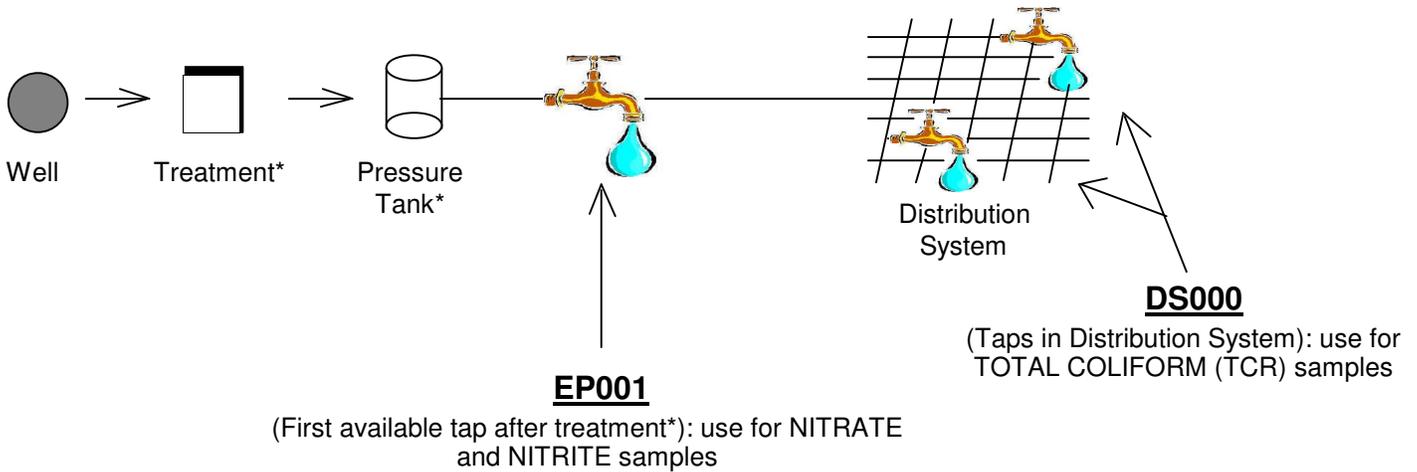

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes												
	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
Nitrate Monthly Sample Date(s):												
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)			Apr - Jun Sample Date(s)			Jul - Sept Sample Date(s)			Oct - Dec Sample Date(s)		

2010 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH8447212 PWS NAME: ASHLAND RV PARK
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Effective Date: 1/1/10

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 8462237 FACILITY NAME: ASHLAND RV PARK

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2010 and 9/30/2010	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

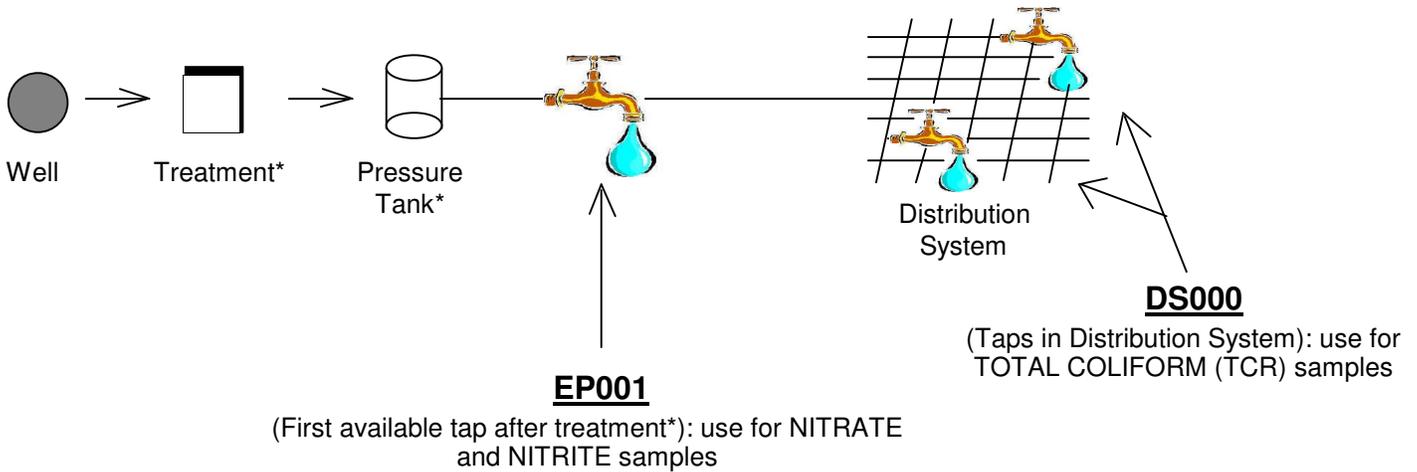

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2010 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH8400012 PWS NAME: BELPRE CITY PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 8459535 STU NAME: BELPRE PWS

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2010 and 10/31/2010
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	1 Sample(s) between 6/1/2010 and 10/31/2010
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2010 and 10/31/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	1 Sample(s) between 4/1/2010 and 6/30/2010
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 8459535. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2010

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>RADIOLOGICAL Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 2 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2010 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH8400012 PWS NAME: BELPRE CITY PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: BELPRE, CITY OF DISTRIBUTION

Effective Date: 1/1/10

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	20 Sample(s) between 6/1/2010 and 9/30/2010
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2010 and 9/30/2010
TOTAL COLIFORM (TCR) - 3100	8 Sample(s) Monthly between 1/1/2010 and 12/31/2010
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Southeast District Office - DDAGW representative immediately at 740-385-8501.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
Lead & Copper Sample Date(s):												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												