

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0200112 PWS NAME: BLUFFTON VILLAGE WATER
 PWS TYPE: Community SOURCE: Purchased Surface Water Sample Monitoring Point: DS000
 FACILITY NAME: BLUFFTON, VILLAGE OF DISTRIBUTION

Effective Date: 4/14/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	1 Sample(s) between 1/1/2011 and 5/31/2011
LEAD - 1030 & COPPER - 1022	20 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	4 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Asbestos Sample Date(s):</i>												
<i>Lead & Copper Sample Date(s):</i>												
<i>HAA5 & TTHM Quarterly Sample Date(s):</i>			<i>Jan - Mar Sample Date(s)</i>			<i>Apr - Jun Sample Date(s)</i>			<i>Jul - Sept Sample Date(s)</i>		<i>Oct - Dec Sample Date(s)</i>	
<i>TCR Monthly Sample Date(s):</i>												
	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0200412 PWS NAME: DELPHOS WATER TREATMENT PLANT
PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: EP002
STATE FACILITY ID: 262193 FACILITY NAME: DELPHOS WTP NO 2

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) Monthly
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
TOTAL ORGANIC CARBON (TOC)		1 Paired Sample Set Monthly *
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 4/1/2011 and 4/30/2011 1 Sample(s) between 5/1/2011 and 5/31/2011 1 Sample(s) between 6/1/2011 and 6/30/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 4 List Below	1 Sample(s) between 4/1/2011 and 6/30/2011
CRYPTOSPORIDIUM		per LT2 Monitoring Plan

**Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP002 and the State Facility ID is 262193.
This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.**

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

Paired Sample Set: * A paired sample set refers to one source water and one treated water sample. A source water alkalinity is also required at the same time the TOC sample is taken

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

SOC Group 4 Chemicals: BENZO (A) PYRENE - 2306, ENDOTHALL - 2033, DI(2-ETHYLHEXYL) - ADIPATE - 2035, DI(2-ETHYLHEXYL) - PHTHALATE - 2039

Use for Sample Tracking Purposes												
<i>INORGANIC Sample Date(s):</i>												
<i>NITRATE Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>NITRITE Sample Date(s):</i>												
<i>TOC Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>VOC Sample Date(s):</i>												
<i>SOC Group 1 Sample Date(s):</i>												
<i>SOC Group 4 Sample Date(s):</i>												
<i>Date CCR sent to Ohio EPA:</i>												

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE
PWS ID: OH0200412 PWS NAME: DELPHOS WATER TREATMENT PLANT
PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: DS000
FACILITY NAME: DELPHOS, CITY OF DISTRIBUTION

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	1 Sample(s) between 1/1/2011 and 5/31/2011
LEAD - 1030 & COPPER - 1022	20 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	8 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Asbestos Sample Date(s):</i>												
<i>Lead & Copper Sample Date(s):</i>												
<i>HAA5 & TTHM Quarterly Sample Date(s):</i>												
	<i>Jan - Mar Sample Date(s)</i>			<i>Apr - Jun Sample Date(s)</i>			<i>Jul - Sept Sample Date(s)</i>			<i>Oct - Dec Sample Date(s)</i>		
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0200503 PWS NAME: ELIDA WATER TREATMENT PLANT
PWS TYPE: Community SOURCE: Purchased Surface Water Sample Monitoring Point: DS000
FACILITY NAME: ELIDA, VILLAGE OF DISTRIBUTION

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	1 Sample(s) between 1/1/2011 and 5/31/2011
LEAD - 1030 & COPPER - 1022	20 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	5 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
Asbestos Sample Date(s):												
Lead & Copper Sample Date(s):												
HAA5 & TTHM Quarterly Sample Date(s):												
	Jan - Mar Sample Date(s)			Apr - Jun Sample Date(s)			Jul - Sept Sample Date(s)			Oct - Dec Sample Date(s)		
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0200712 PWS NAME: INDIAN VILLAGE MOBILE HOME PARK
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 252633 FACILITY NAME: INDIAN VILLAGE MHP
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
ARSENIC	ARSENIC - 1005	1 Sample(s) Quarterly
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252633. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
<i>INORGANIC Sample Date(s):</i>				
<i>ARSENIC Quarterly Sample Date(s):</i>	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
<i>NITRATE Sample Date(s):</i>				
<i>NITRITE Sample Date(s):</i>				
<i>VOC Sample Date(s):</i>				
<i>SOC Group 1 Sample Date(s):</i>				
<i>Date CCR sent to Ohio EPA:</i>				

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE
PWS ID: OH0200712 PWS NAME: INDIAN VILLAGE MOBILE HOME PARK
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: INDIAN VILLAGE MHP DISTRIBUTION
Groundwater Rule Substantial Treatment System
Effective Date: 1/19/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Lead & Copper Sample Date(s):</i>												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE
PWS ID: OH0200811 PWS NAME: LIMA WATER CITY WATER
PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: EP001
STATE FACILITY ID: 252634 FACILITY NAME: LIMA WTP

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) Monthly
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
TOTAL ORGANIC CARBON (TOC)		1 Paired Sample Set Monthly *
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 4/1/2011 and 4/30/2011 1 Sample(s) between 5/1/2011 and 5/31/2011 1 Sample(s) between 6/1/2011 and 6/30/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252634. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

Paired Sample Set: * A paired sample set refers to one source water and one treated water sample. A source water alkalinity is also required at the same time the TOC sample is taken

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes												
<i>INORGANIC Sample Date(s):</i>												
<i>NITRATE Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>NITRITE Sample Date(s):</i>												
<i>TOC Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>VOC Sample Date(s):</i>												
<i>SOC Group 1 Sample Date(s):</i>												
<i>Date CCR sent to Ohio EPA:</i>												

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0200811 PWS NAME: LIMA WATER CITY WATER
PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: DS000
FACILITY NAME: LIMA, CITY OF DISTRIBUTION

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	1 Sample(s) between 1/1/2011 and 5/31/2011
LEAD - 1030 & COPPER - 1022	30 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 4 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	80 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes														
Asbestos Sample Date(s):														
Lead & Copper Sample Date(s):														
HAA5 & TTHM Quarterly Sample Date(s):			Jan - Mar Sample Date(s)			Apr - Jun Sample Date(s)			Jul - Sept Sample Date(s)		Oct - Dec Sample Date(s)			
TCR Monthly Sample Date(s):			Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):														

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0201112 PWS NAME: RICHLAND MANOR NURSING HOME
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 252635 FACILITY NAME: RICHLAND MANOR NURSING HOME
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252635. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0201112 PWS NAME: RICHLAND MANOR NURSING HOME

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: RICHLAND MANOR NUR. HOME DISTRIBUTION

Groundwater Rule Substantial Treatment System

Effective Date: 1/19/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0201312 PWS NAME: SPENCERVILLE WATER TREATMENT PLANT
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 252636 FACILITY NAME: SPENCERVILLE WTP
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252636. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0201312 PWS NAME: SPENCERVILLE WATER TREATMENT PLANT
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: SPENCERVILLE, VILLAGE OF DISTRIBUTION
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	1 Sample(s) between 1/1/2011 and 5/31/2011
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	2 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Asbestos Sample Date(s):</i>												
<i>HAA5 & TTHM Quarterly Sample Date(s):</i>			<i>Jan - Mar Sample Date(s)</i>			<i>Apr - Jun Sample Date(s)</i>			<i>Jul - Sept Sample Date(s)</i>		<i>Oct - Dec Sample Date(s)</i>	
<i>TCR Monthly Sample Date(s):</i>												
	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0230812 PWS NAME: RUDOLPH FOODS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 252638 FACILITY NAME: RUDOLPH FOODS INC

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

**Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252638.
This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.**

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020,
CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0230812 PWS NAME: RUDOLPH FOODS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: RUDOLPH FOODS DISTRIBUTION

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0231512 PWS NAME: BLUFFTON GOLF CLUB
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252641 FACILITY NAME: BLUFFTON GOLF COURSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

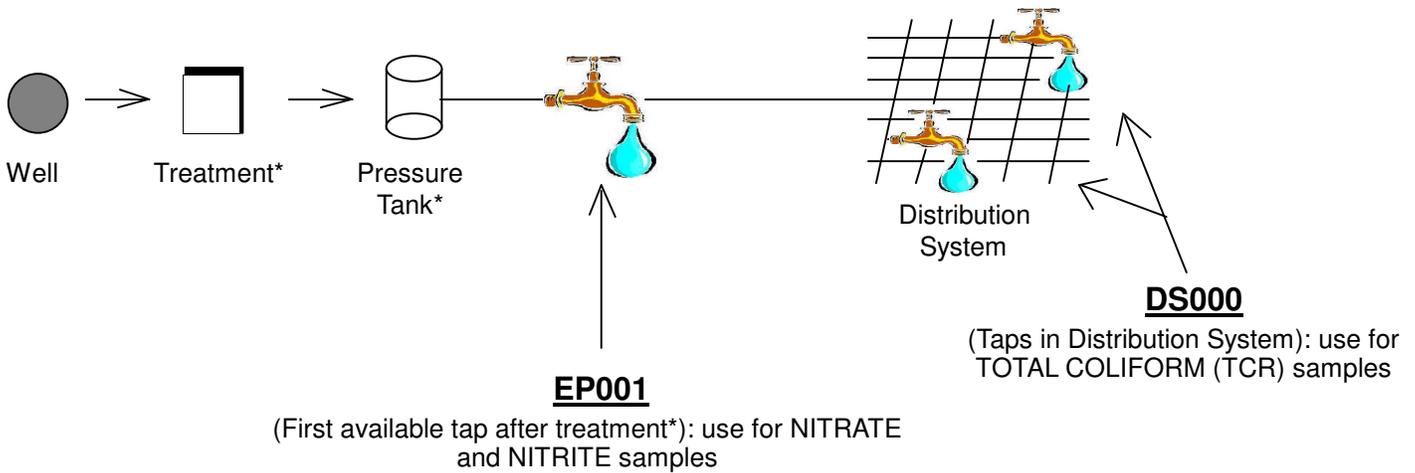

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0232012 PWS NAME: BIGGIES COAST TO COAST

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252642 FACILITY NAME: BIGGIES COAST TO COAST

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

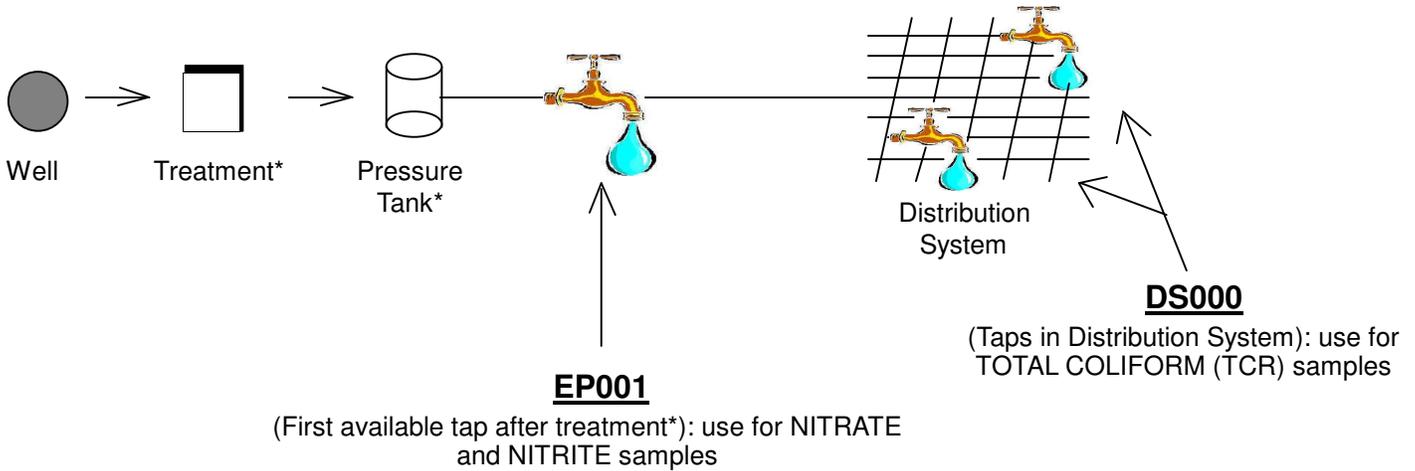

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0232212 PWS NAME: LAKE CODY
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252643 FACILITY NAME: LAKE CODY

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

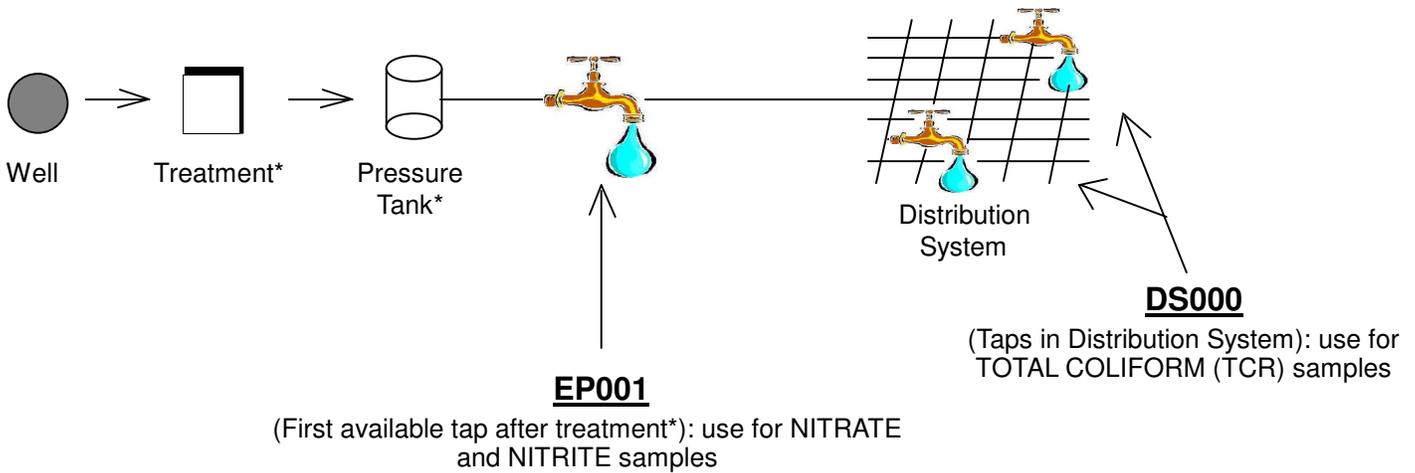

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0232312 PWS NAME: LIMA RESCUE MISSION/CAMP ROBERTS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252644 FACILITY NAME: LIMA RESCUE MISSION

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 6/1/2011 and 8/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

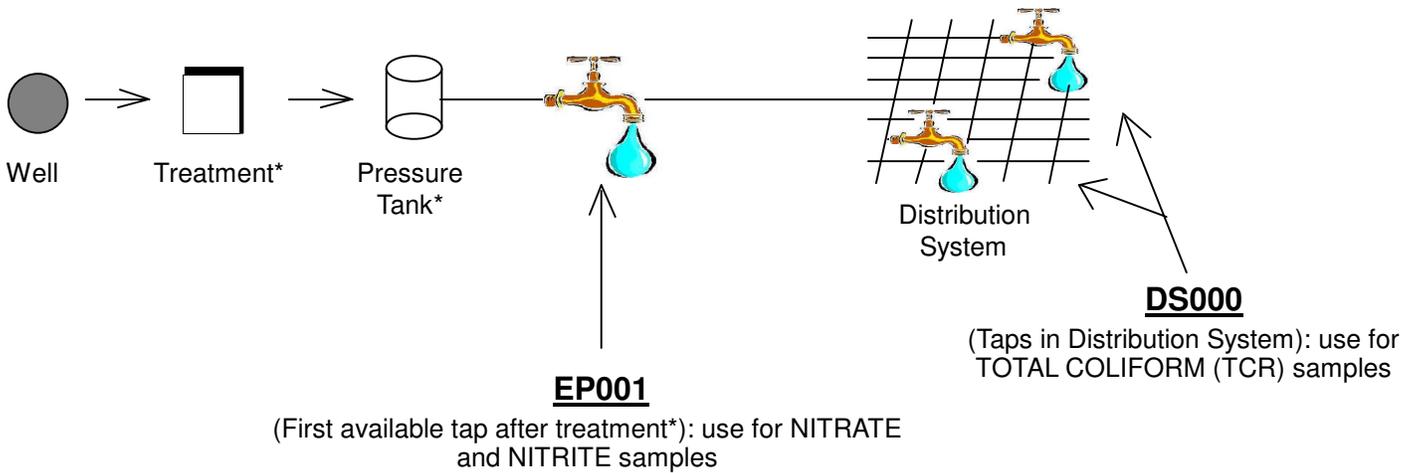

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0232612 PWS NAME: THE STALLION
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252646 FACILITY NAME: THE STALLION

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

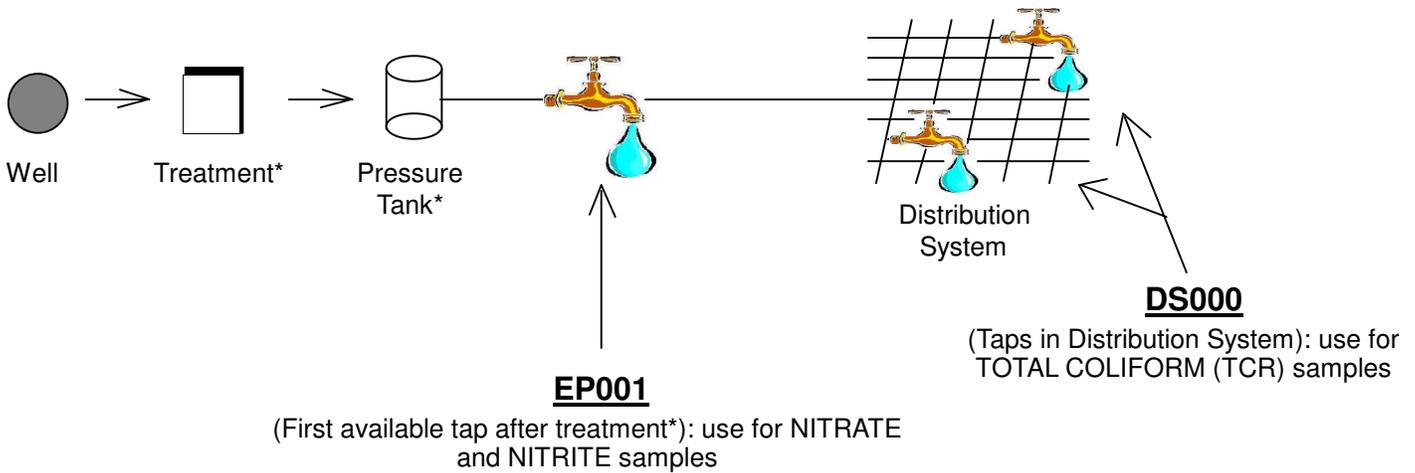

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0232812 PWS NAME: CARTER LUMBER STORE 65-8

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252648 FACILITY NAME: CARTER LUMBER

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

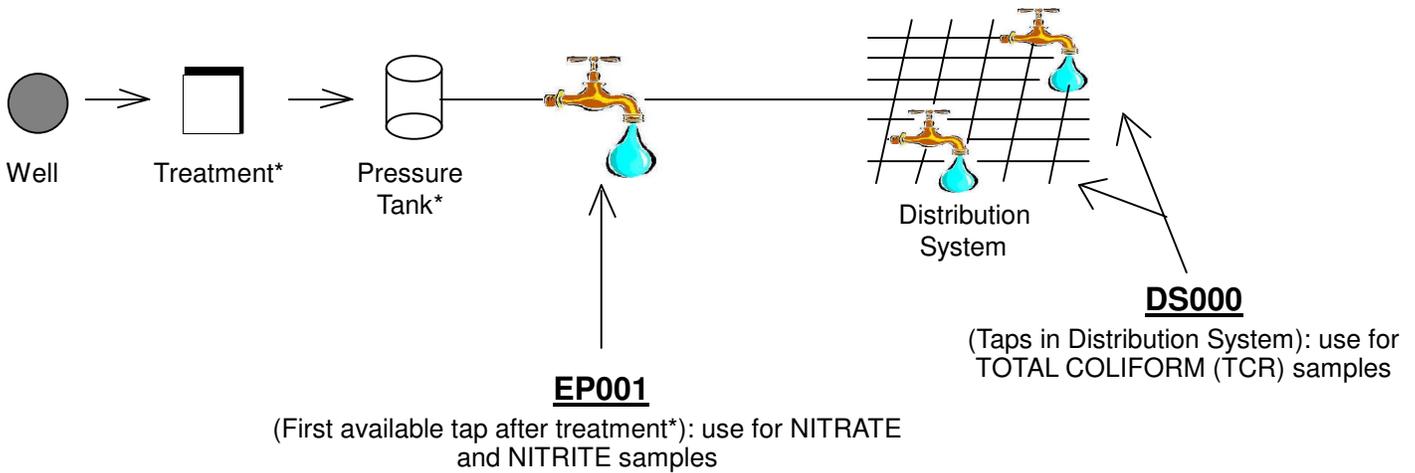

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0233112 PWS NAME: COLONIAL GOLFERS CLUB

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252649 FACILITY NAME: COLONIAL GOLFERS CLUB

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

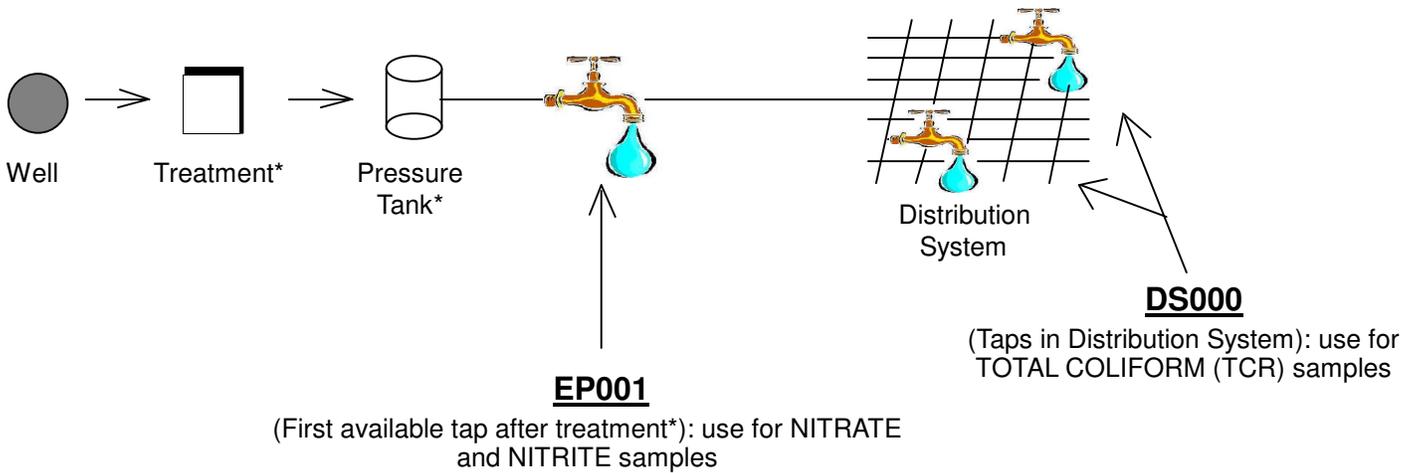

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0233312 PWS NAME: CONGREGATIONAL CHRISTIAN CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252650 FACILITY NAME: CONGREGATIONAL CHRIST CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

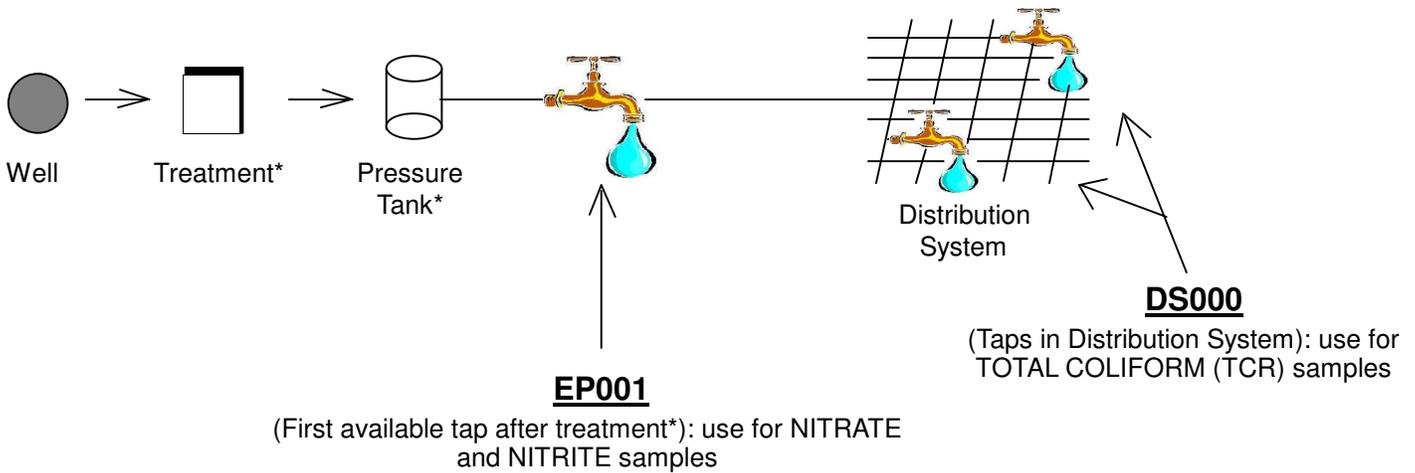

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0233612 PWS NAME: DAIRY HAUS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252651 FACILITY NAME: DAIRY HAUS

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 8/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

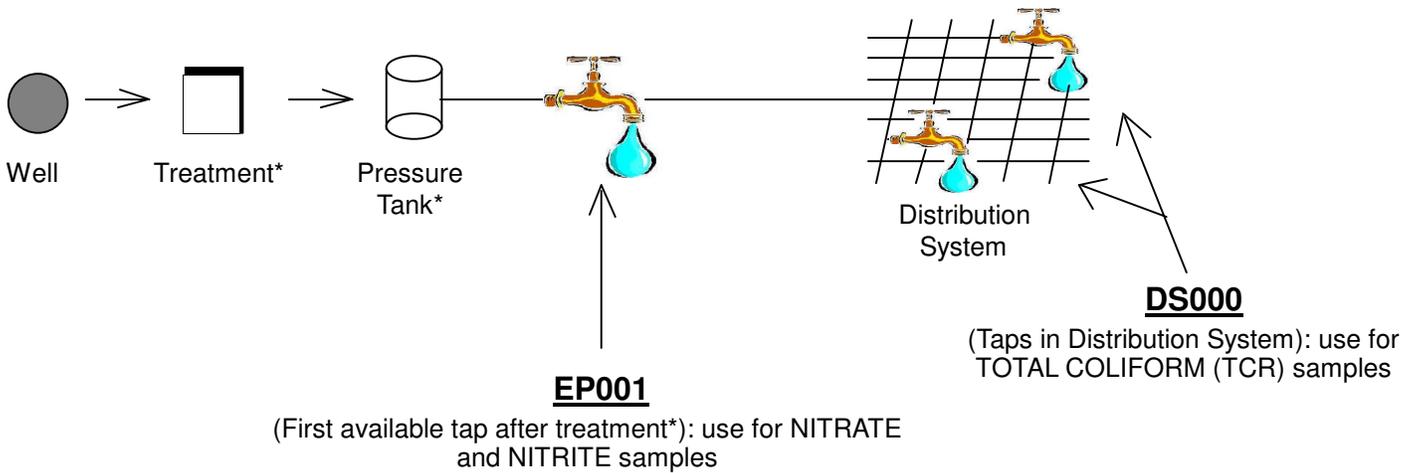

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0235212 PWS NAME: ELIDA ELEMENTARY KINDERGARTEN SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 252655 FACILITY NAME: GOMER KINDERGARTEN SCHOOL

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

**Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252655.
This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.**

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0235212 PWS NAME: ELIDA ELEMENTARY KINDERGARTEN SCHOOL
PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: GOMER KINDERGARTEN SCHOOL DISTRIBUTION
Groundwater Rule Substantial Treatment System

Effective Date: 1/19/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
<i>Lead & Copper Sample Date(s):</i>				
<i>HAA5 & TTHM Sample Date(s):</i>				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>
<i>Total Chlorine Sample Date(s):</i>				

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0235412 PWS NAME: ALLEN EAST COMMUNITY CENTER

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252657 FACILITY NAME: ALLEN EAST COMMUNITY CENTER

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

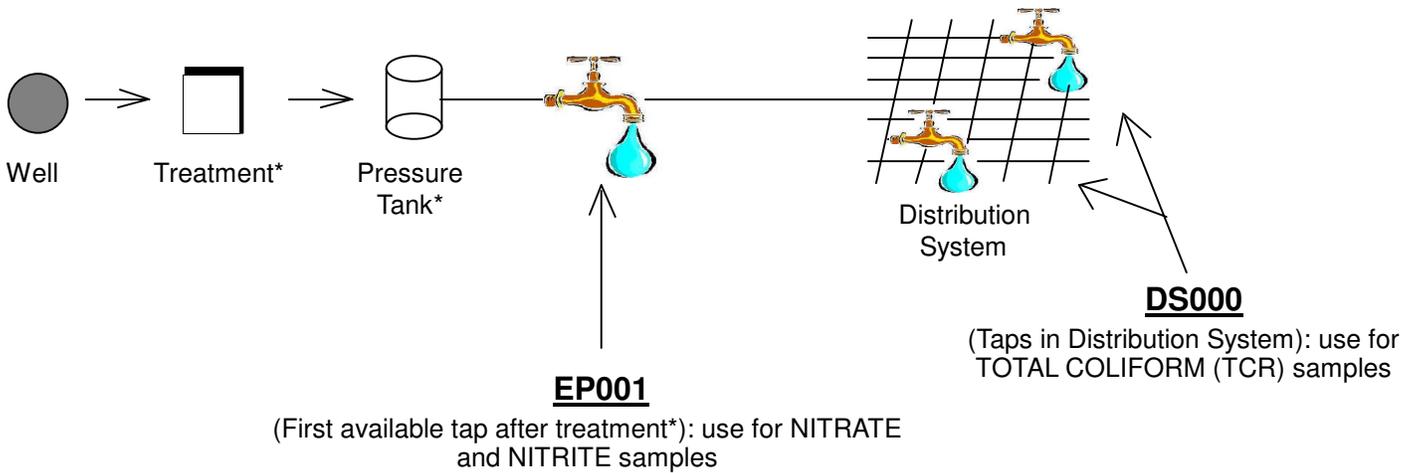

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0235612 PWS NAME: HAWTHORNE HILLS COUNTRY CLUB

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252659 FACILITY NAME: HAWTHORNE HILLS GOLF CLUB

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

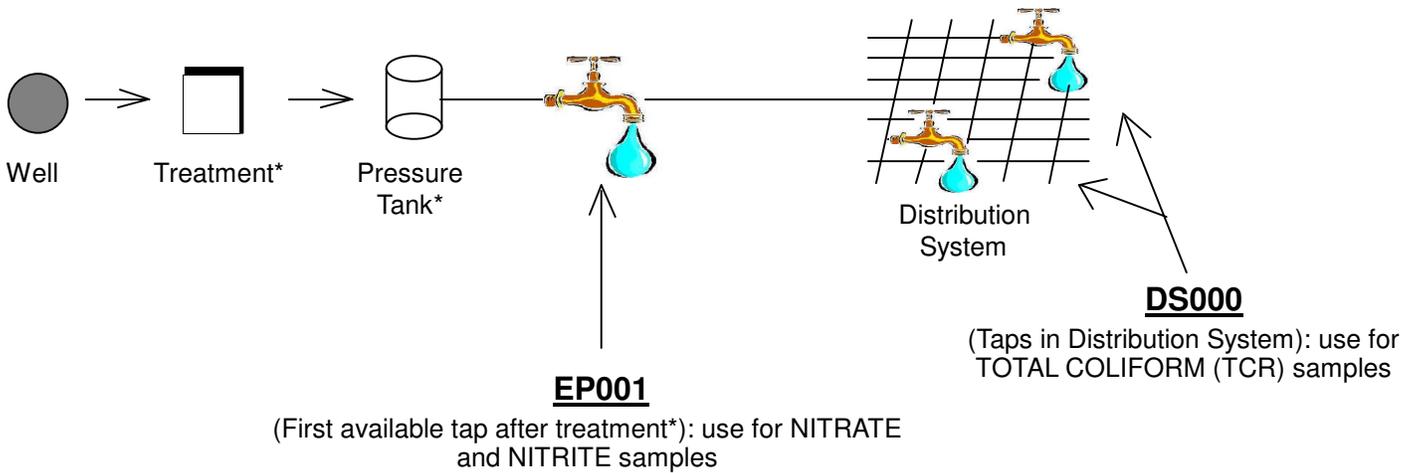

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0236412 PWS NAME: ROBINS NEST CAMPGROUND

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252662 FACILITY NAME: ROBINS NEST CAMPGROUND

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

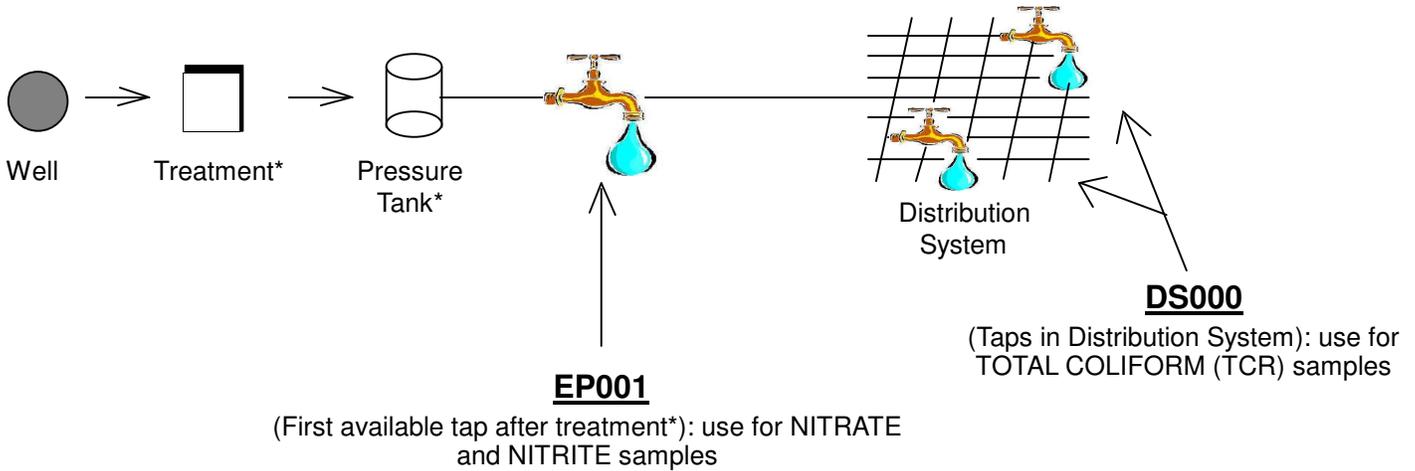

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0238912 PWS NAME: RAABE MOTOR SALES INC

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252667 FACILITY NAME: RAABE MOTOR SALES INC

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

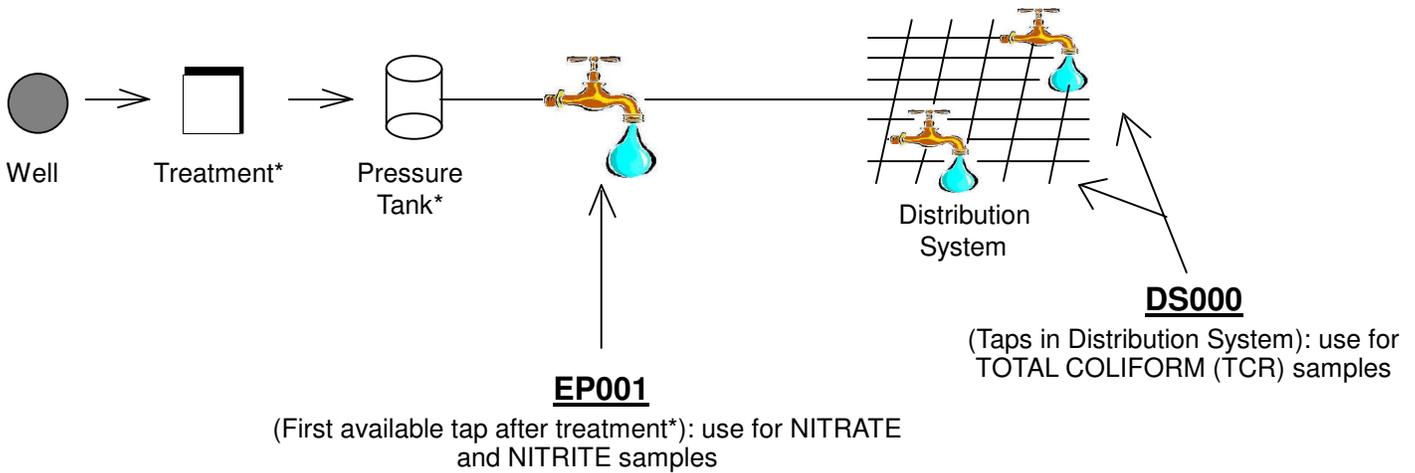

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0239312 PWS NAME: SALEM MENNONITE CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252668 FACILITY NAME: SALEM MENNONITE CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

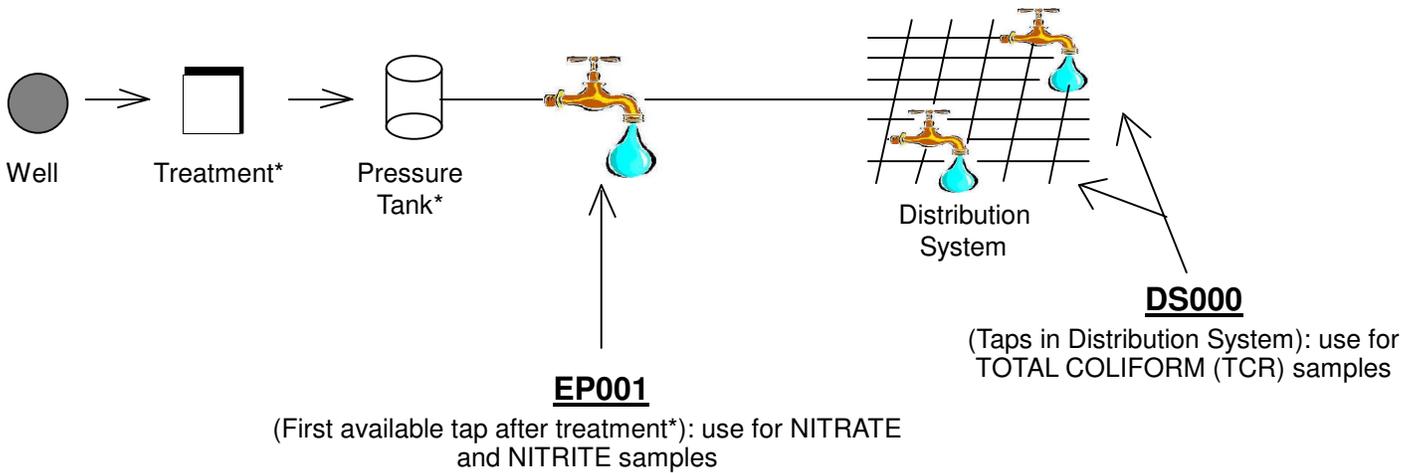

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0239412 PWS NAME: SANDY POINT LAKE
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252669 FACILITY NAME: SANDY POINT LAKE

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

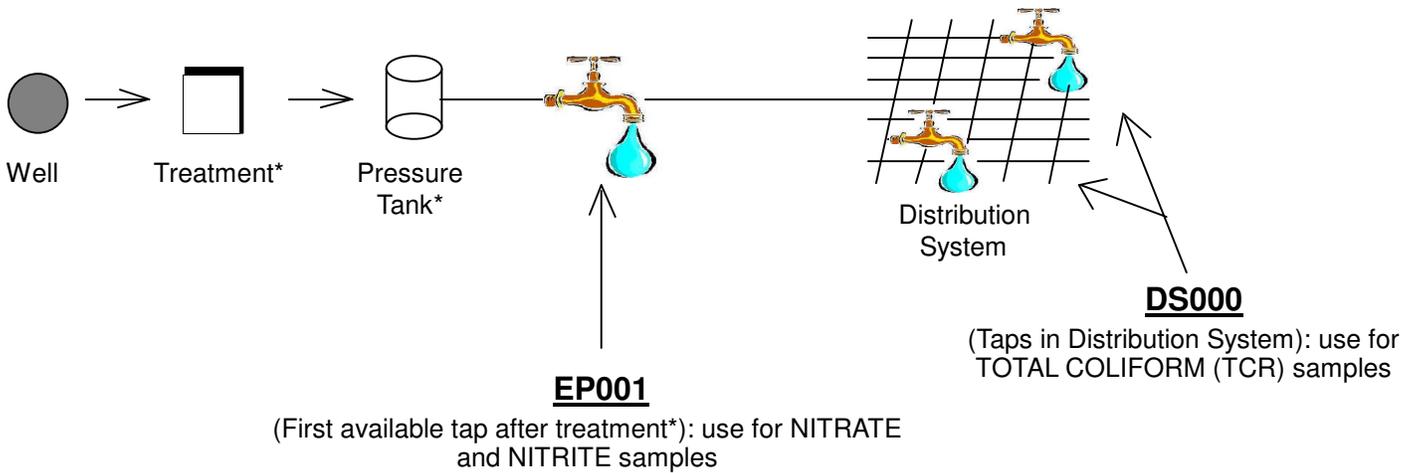

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0241812 PWS NAME: KEITH'S LANDECK TAVERN & CATERING

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252674 FACILITY NAME: KEITH'S LANDECK TAVERN & CATERING PWS

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

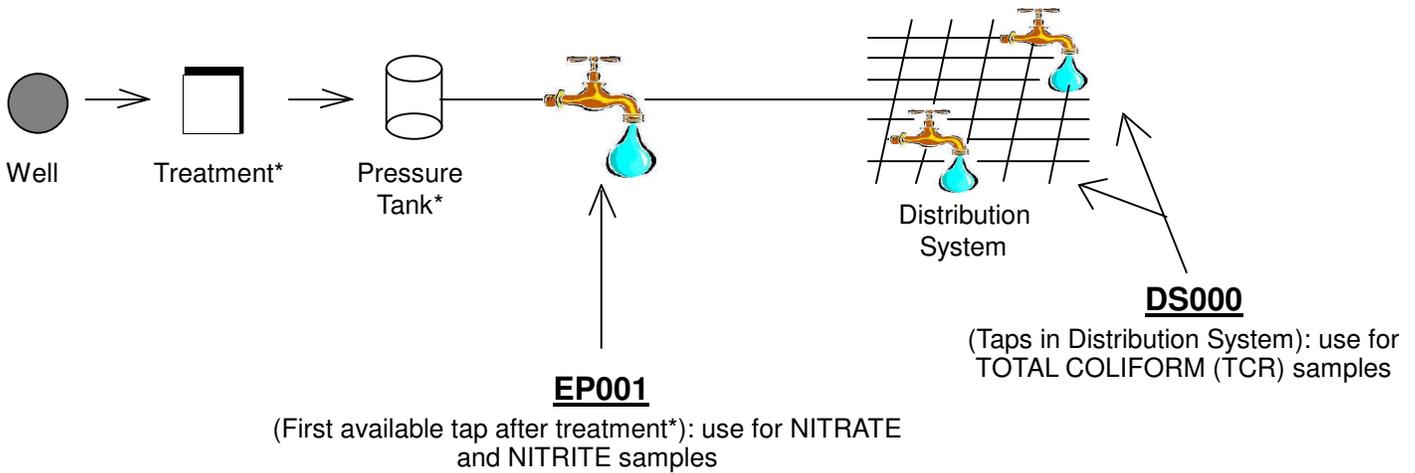

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0242012 PWS NAME: UNION CHAPEL MISSIONARY CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252675 FACILITY NAME: UNION CHAPEL CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

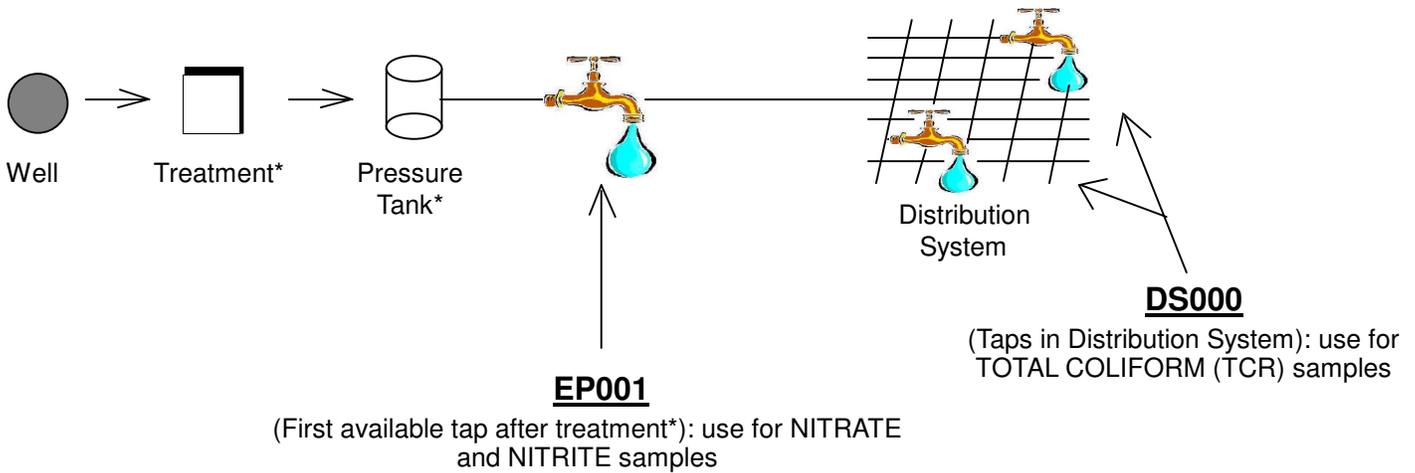

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0242712 PWS NAME: THE OAKS GOLF CLUB
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252676 FACILITY NAME: THE OAKS GOLF CLUB

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 2/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

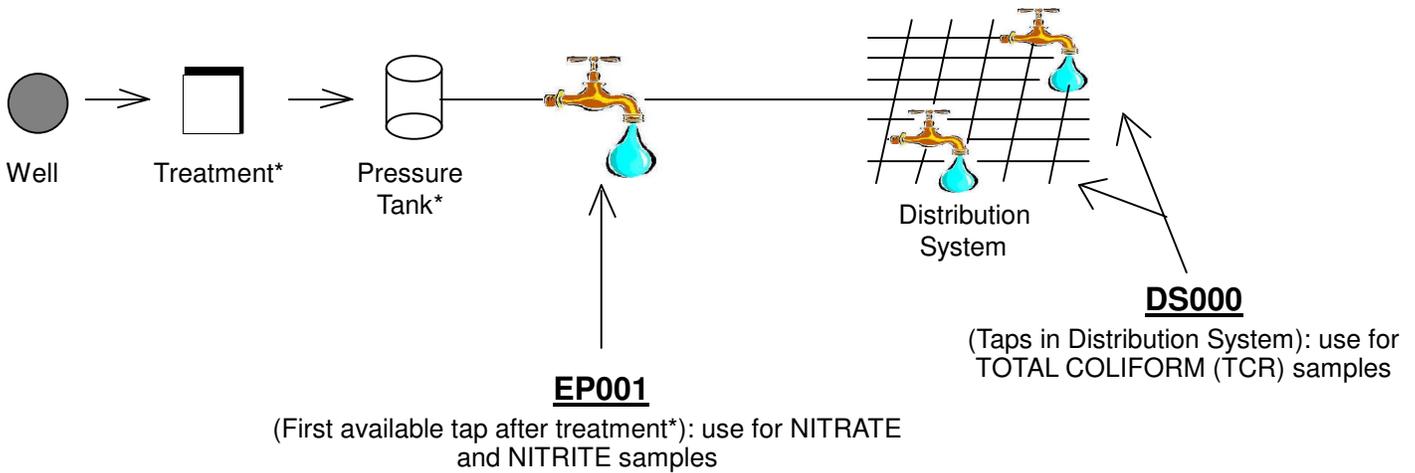

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0243012 PWS NAME: WINONA LAKE SWIM & TENNIS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252677 FACILITY NAME: WINONA LAKE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

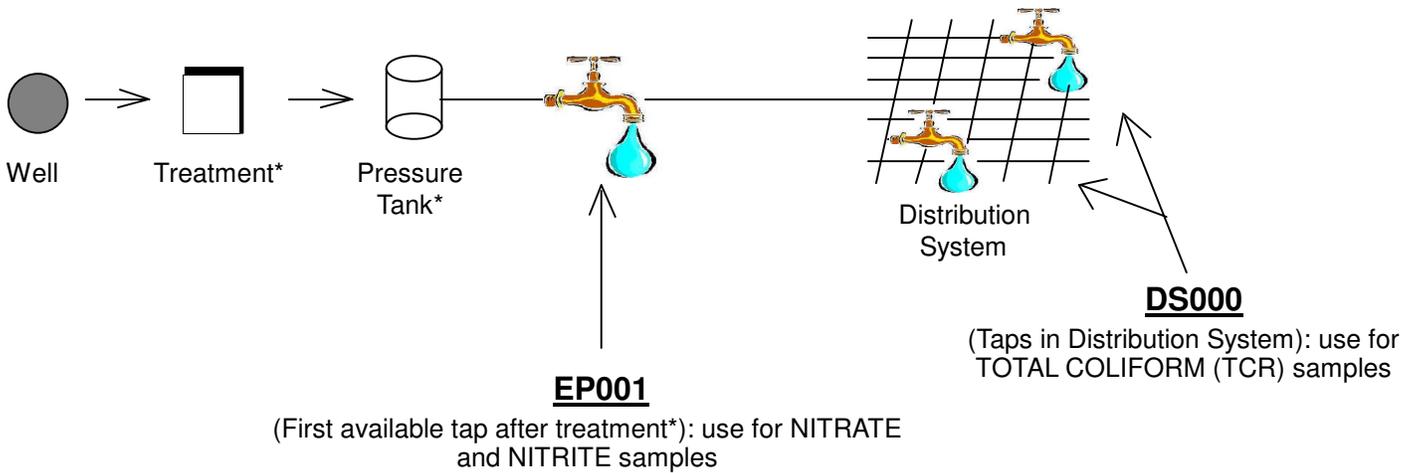

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0243112 PWS NAME: ZION EVANGELICAL LUTHERAN CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252678 FACILITY NAME: ZION EVANGELICAL LUTHERAN CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

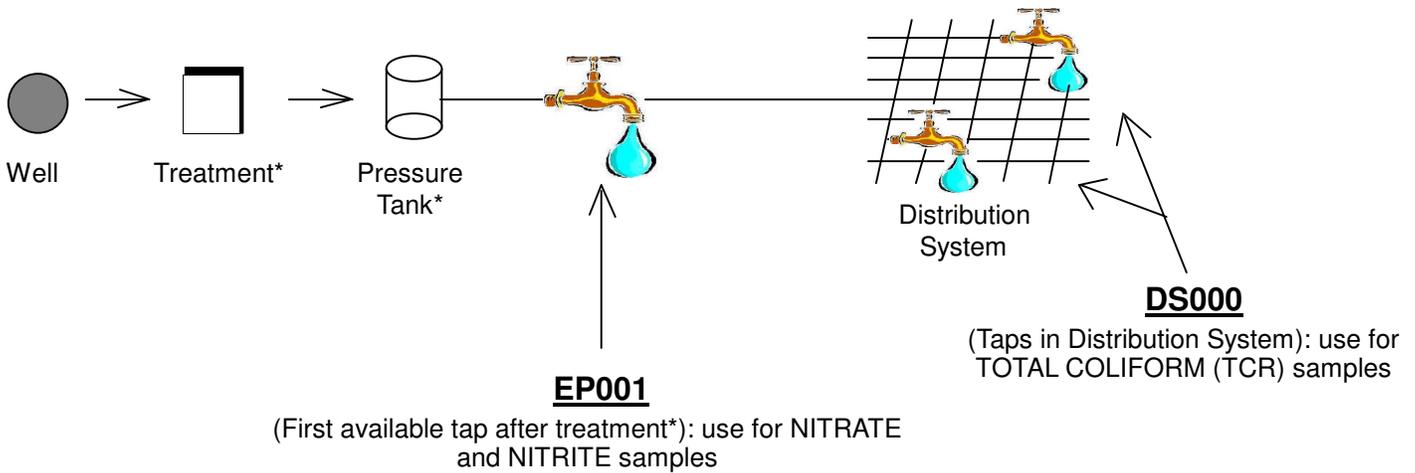

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0243812 PWS NAME: ORIOLES AUGLAIZE RIVER BEND CAMP 1

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252680 FACILITY NAME: ORIOLES AUGLAIZE RIVER BEND CAMPGROUND

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

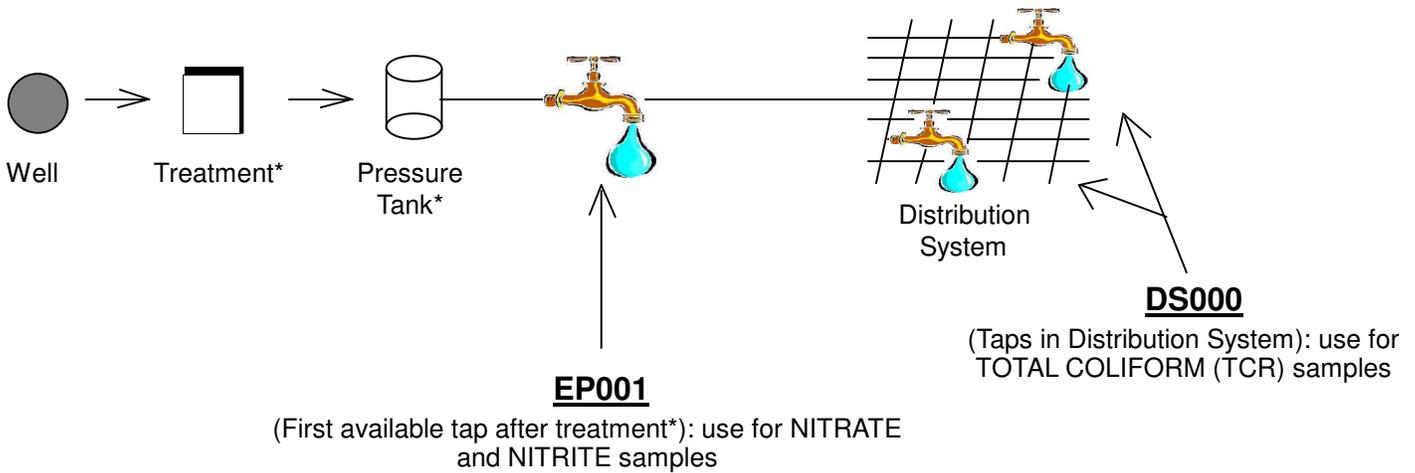

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0243912 PWS NAME: ORIOLES AUGLAIZE RIVER BEND CAMP 2

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252681 FACILITY NAME: ORIOLES AUGLAIZE RIVER BEND CAMP 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

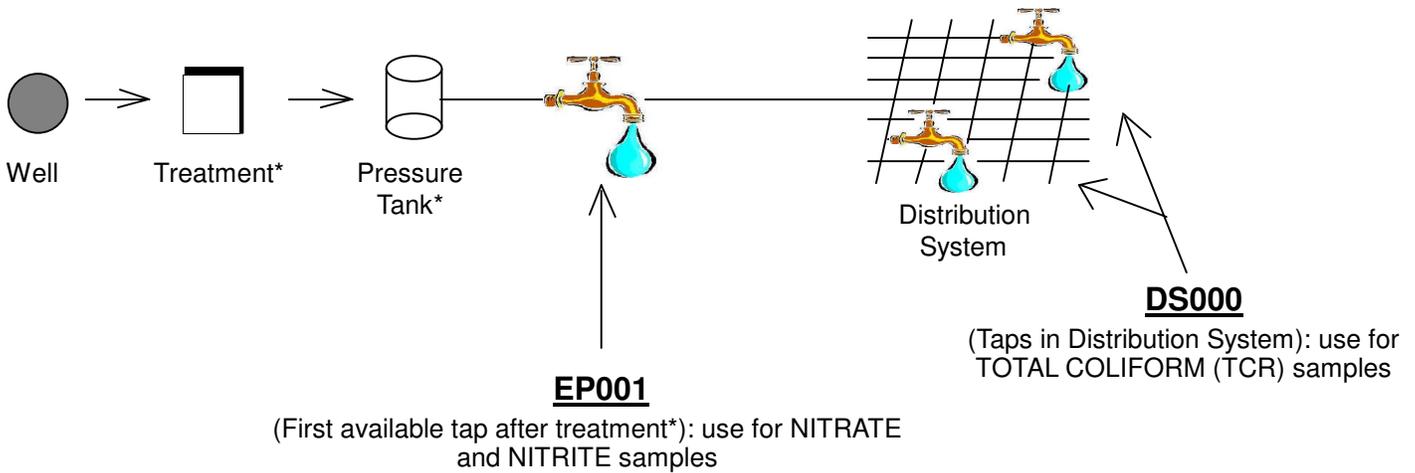

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0244312 PWS NAME: BUCKEYE TRUCK CENTER INC

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252682 FACILITY NAME: BUCKEYE TRUCK CENTER

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

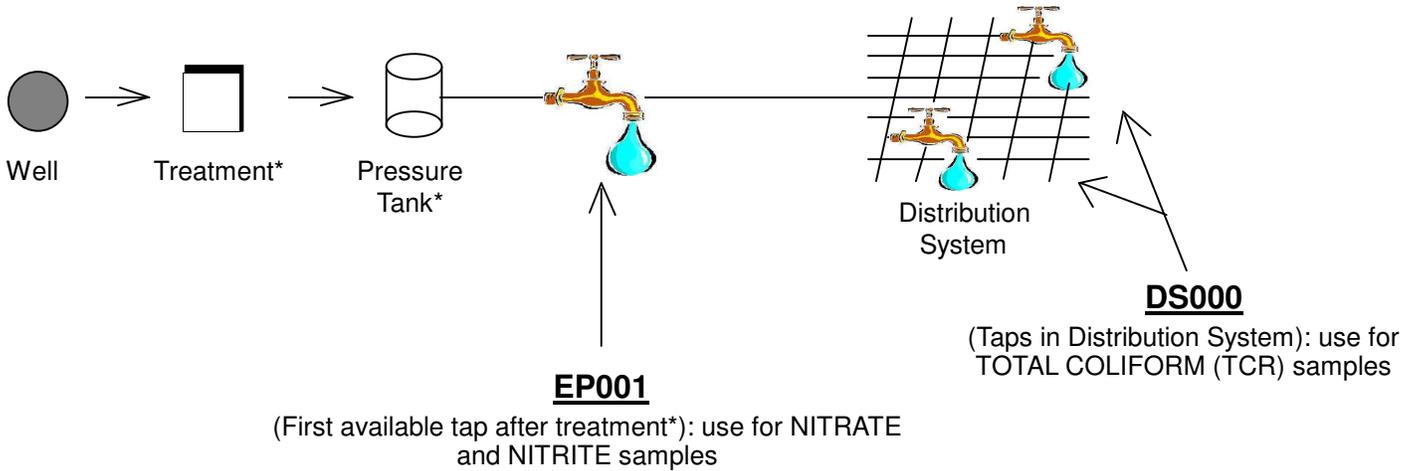

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0244612 PWS NAME: CAIRO UNITED METHODIST CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252683 FACILITY NAME: CAIRO UNITED METHODIST CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

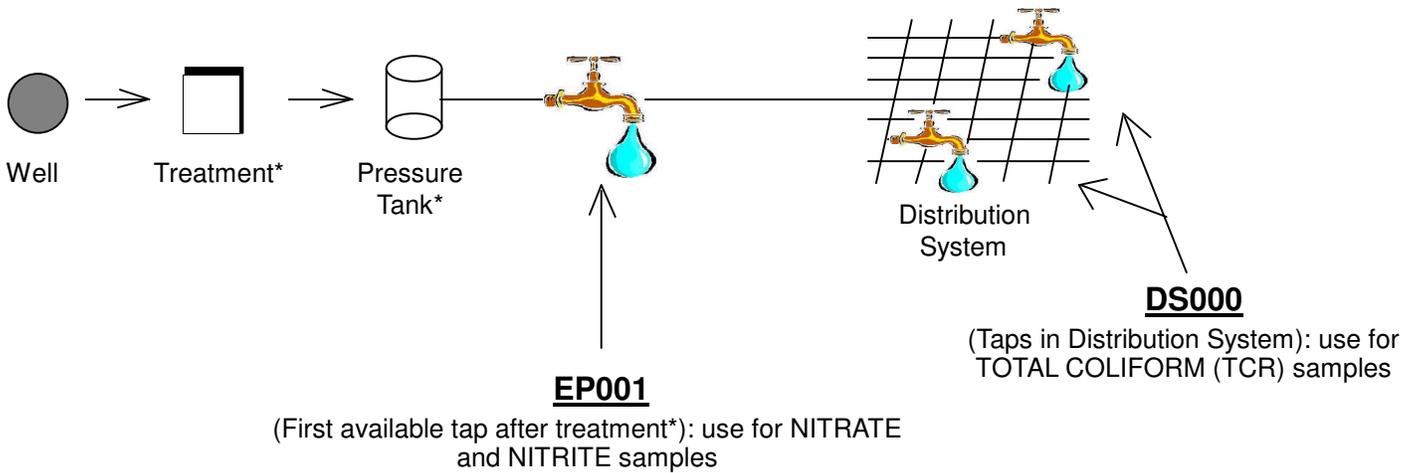

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0247812 PWS NAME: ODOT REST AREA 1-31 EB

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252686 FACILITY NAME: ODOT REST AREA NO 1-31 EB

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

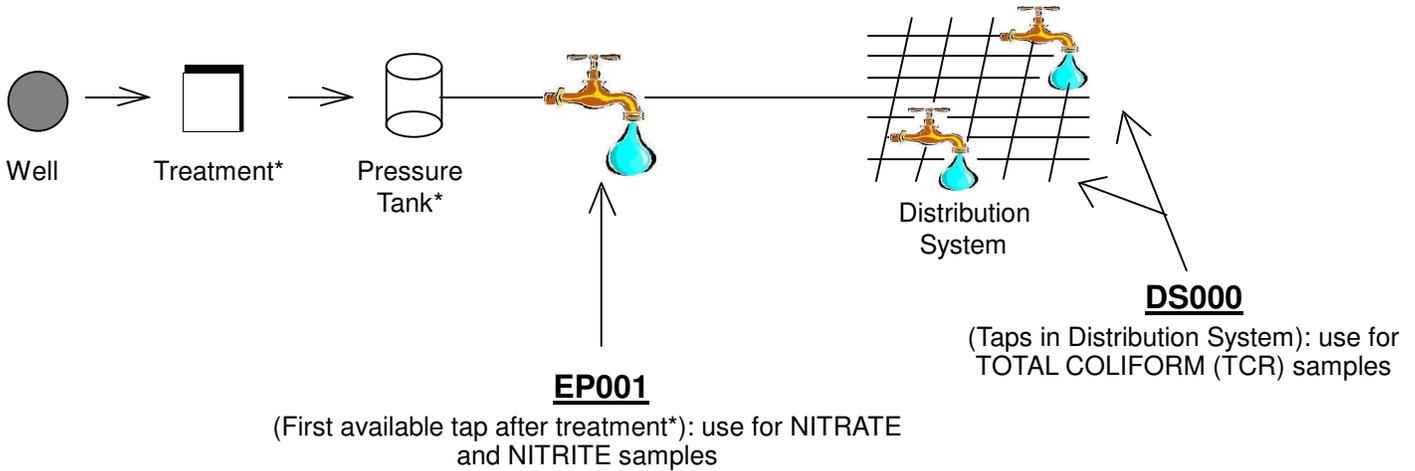

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0247912 PWS NAME: ODOT REST AREA 1-32 WB

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252687 FACILITY NAME: ODOT REST AREA NO 1-32 WB

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

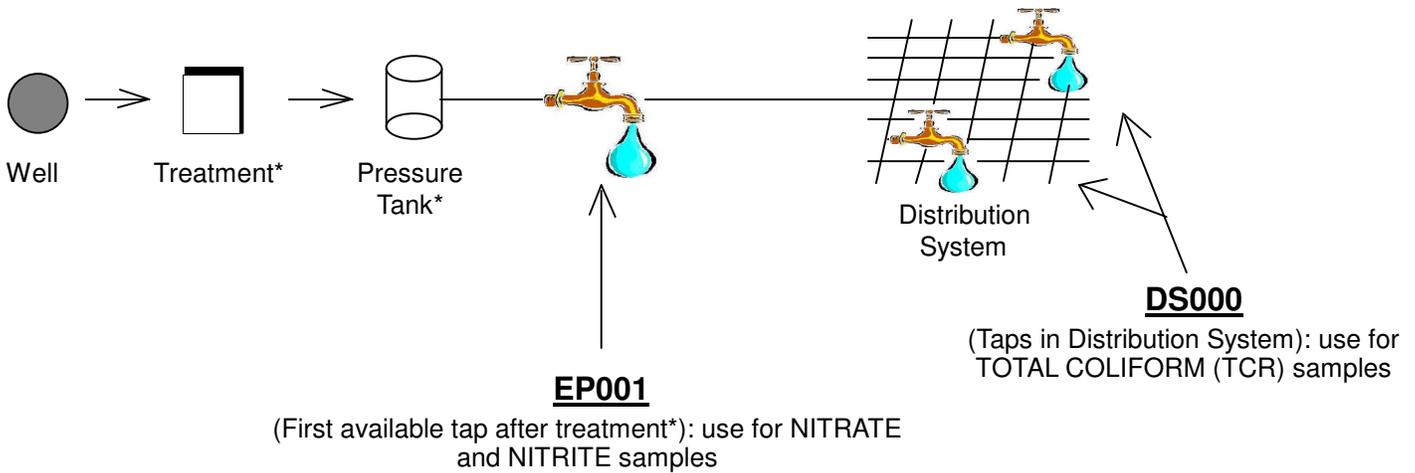

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0248212 PWS NAME: PIKE MENNONITE CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252688 FACILITY NAME: PIKE MENNONITE CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

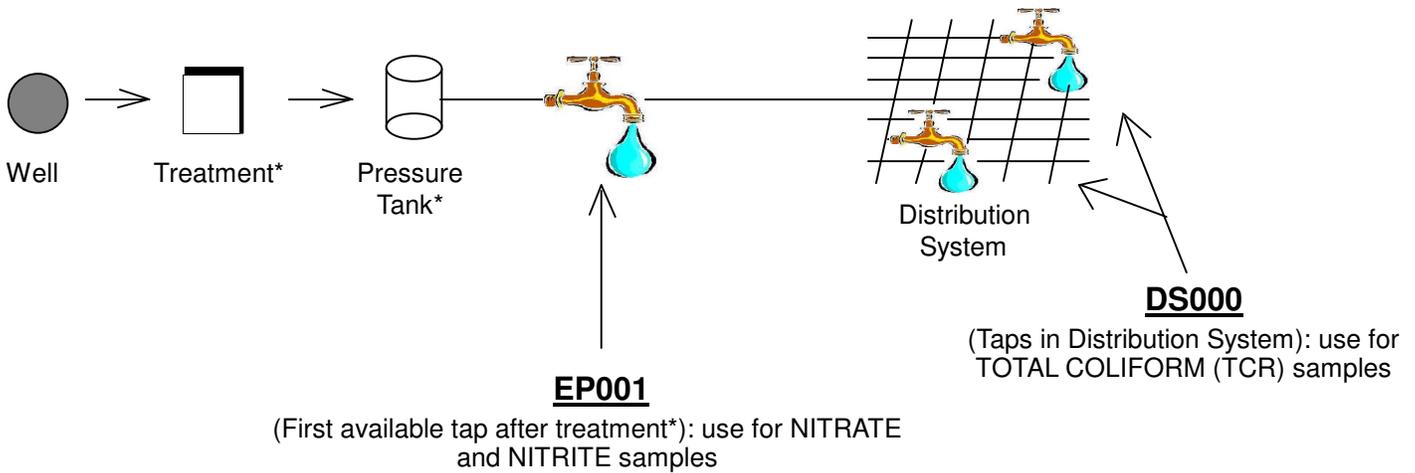

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0249812 PWS NAME: SOUTHGATE LANES
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252691 FACILITY NAME: SOUTHGATE LANES

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

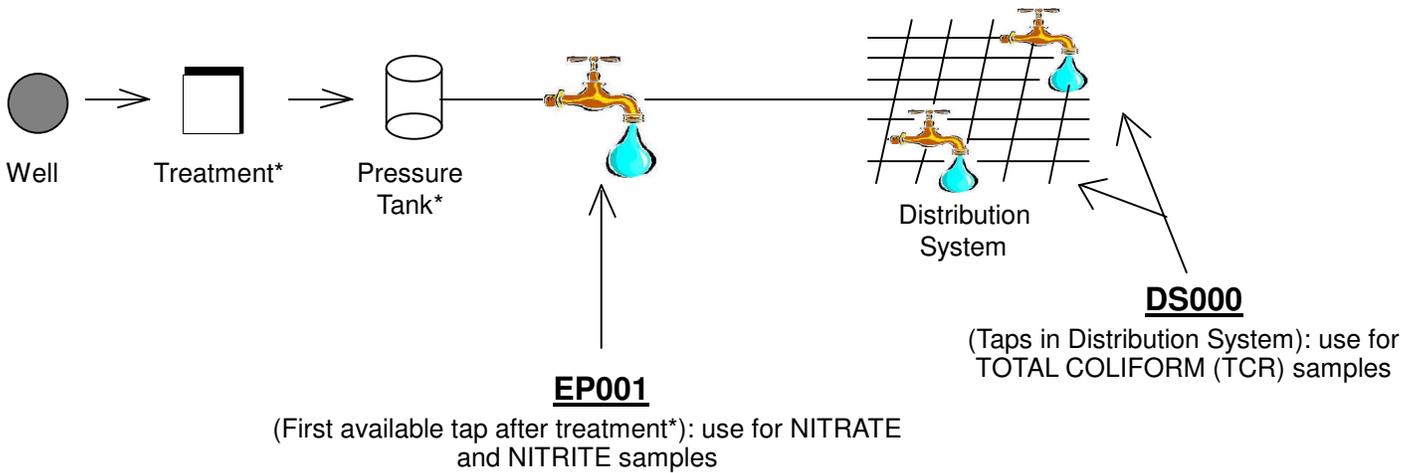

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0251112 PWS NAME: EBENEZER MENNONITE CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252694 FACILITY NAME: EBENEZER MENNONITE CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

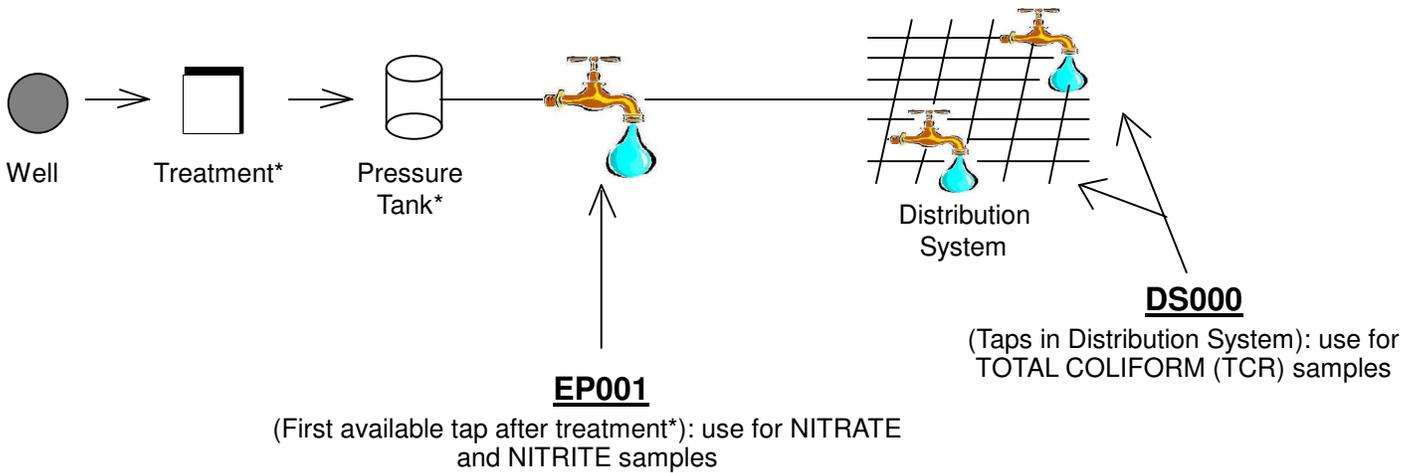

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0251312 PWS NAME: PLEASANT VIEW CHURCH OF BRETHREN

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252695 FACILITY NAME: PLEASANT VIEW CHURCH OF BRETHREN

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

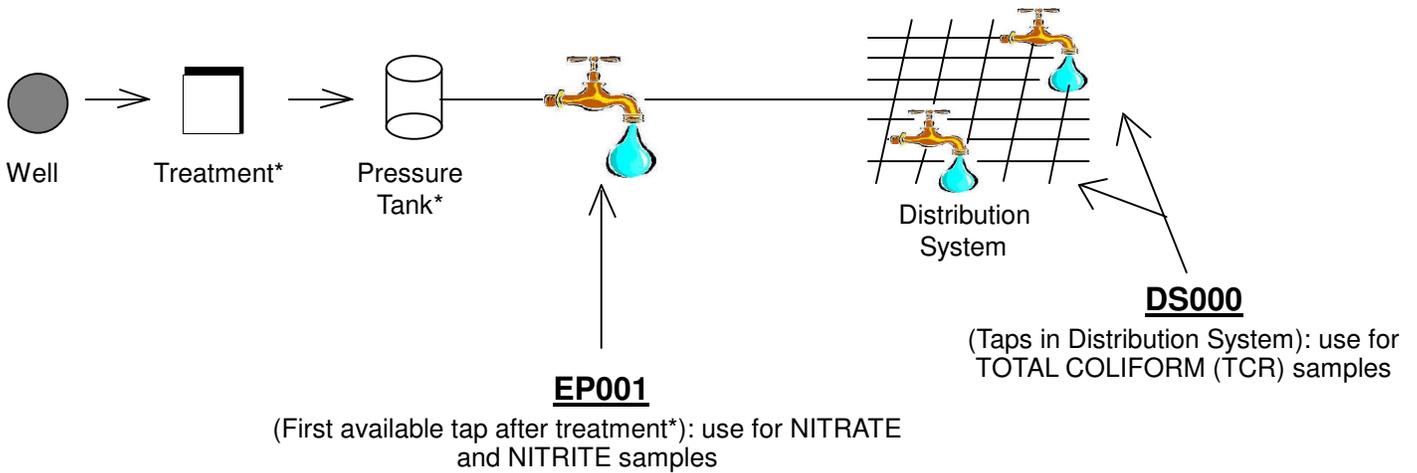

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0251912 PWS NAME: MENNONITE CHRISTIAN SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 252699 FACILITY NAME: MENNONITE CHRISTIAN SCHOOL

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

**Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252699.
This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.**

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0251912 PWS NAME: MENNONITE CHRISTIAN SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: MENNONITE CHRISTIAN SCH. DISTRIBUTION

Groundwater Rule Minimal Treatment System

Effective Date: 6/17/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0252012 PWS NAME: KENDRICK WOODS METRO PARK

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252700 FACILITY NAME: KENDRICK WOODS METRO PARK

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

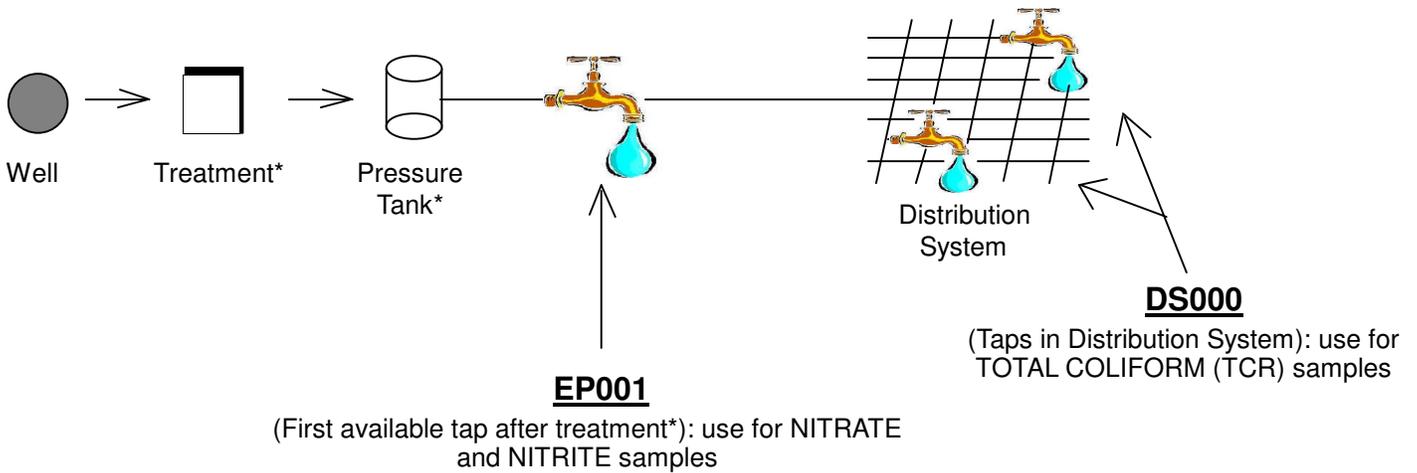

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0252212 PWS NAME: SUN VALLEY FAMILY CAMPGROUND
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 252701 FACILITY NAME: SUN VALLEY FAMILY CAMPGROUND
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	1 Sample(s) between 1/1/2011 and 5/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 4/1/2011 and 6/30/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252701. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>RADIOLOGICAL Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0252212 PWS NAME: SUN VALLEY FAMILY CAMPGROUND

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: SUN VALLEY FAMILY CMPGRD DISTRIBUTION

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0252912 PWS NAME: MARATHON MINI MART
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 252705 FACILITY NAME: D AND G MINI MART

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

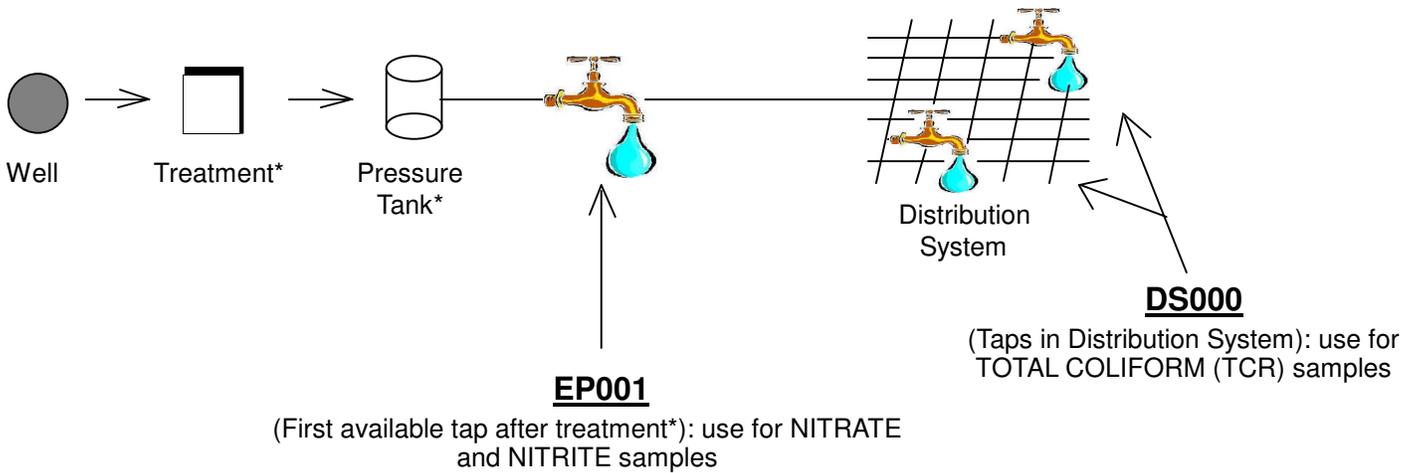

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0253512 PWS NAME: LANDECK ELEMENTARY SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 252710 FACILITY NAME: LANDECK ELEMENTARY SCHOOL

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
BROMATE	BROMATE - 1011	1 Sample(s) Monthly
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 10/1/2011 and 12/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

**Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252710.
This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.**

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes												
<i>INORGANIC Sample Date(s):</i>												
<i>NITRATE Sample Date(s):</i>												
<i>NITRITE Sample Date(s):</i>												
<i>BROMATE Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>VOC Sample Date(s):</i>												
<i>SOC Group 1 Sample Date(s):</i>												

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0253512 PWS NAME: LANDECK ELEMENTARY SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: LANDECK ELEM SCHOOL DISTRIBUTION

Groundwater Rule Substantial Treatment System

Effective Date: 1/19/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
HAA5 & TTHM Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
Total Chlorine Sample Date(s):				

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0253812 PWS NAME: CROSSROADS CHURCH OF GOD

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 261005 FACILITY NAME: CROSSROADS CHURCH OF GOD-TP

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

**Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 261005.
This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.**

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0253812 PWS NAME: CROSSROADS CHURCH OF GOD

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: CROSSROADS CHURCH OF GOD DISTRIBUTION

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
<i>Lead & Copper Sample Date(s):</i>				
<i>TCR Quarterly Sample Date(s):</i>				
	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0254212 PWS NAME: ALLEN EAST LOCAL SCHOOLS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 261797 FACILITY NAME: ALLEN EAST LOCAL SCHOOL DISTRICT

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

**Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 261797.
This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.**

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0254212 PWS NAME: ALLEN EAST LOCAL SCHOOLS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: ALLEN EAST LOCAL SCHOOL DISTRICT DISTRIB

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	2 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
Lead & Copper Sample Date(s):												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0254312 PWS NAME: PROCTER & GAMBLE DIST CTR - LIMA

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 262032 FACILITY NAME: PROCTOR & GAMBLE TREATMENT PLANT

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 6/1/2011 and 10/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

**Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 262032.
This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.**

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020,
CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0254312 PWS NAME: PROCTER & GAMBLE DIST CTR - LIMA

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: PROCTOR & GAMBLE DISTRIBUTION

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
<i>Lead & Copper Sample Date(s):</i>				
<i>HAA5 & TTHM Sample Date(s):</i>				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>
<i>Total Chlorine Sample Date(s):</i>				

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0254512 PWS NAME: BENROTH DRIVE-THRU
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 262244 FACILITY NAME: BENROTH DRIVE-THUR

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

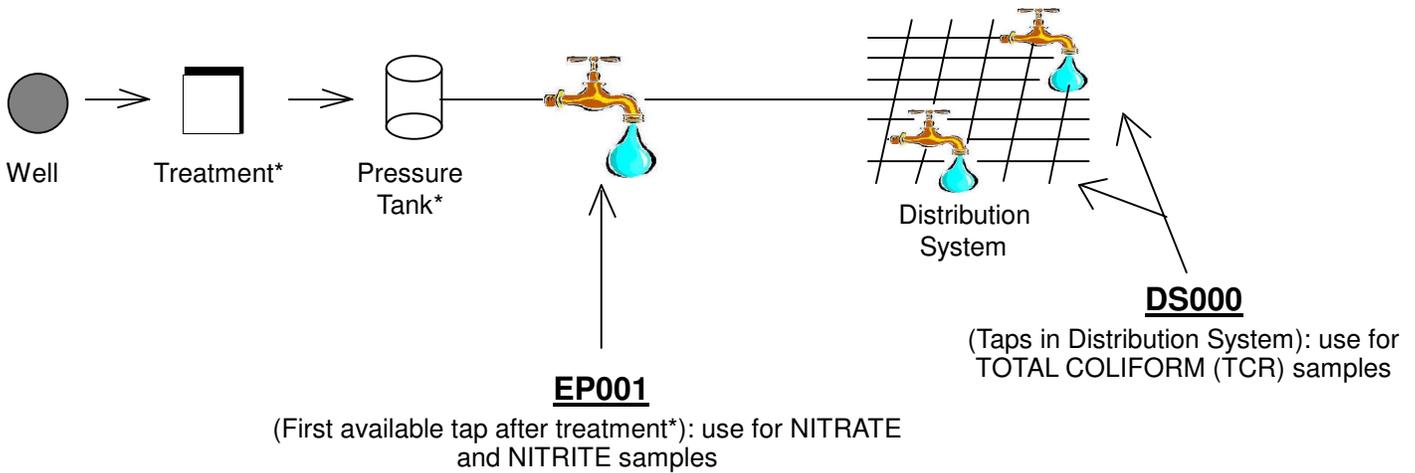

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0254612 PWS NAME: SNACK SHACK
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 262245 FACILITY NAME: SNACK SHACK

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

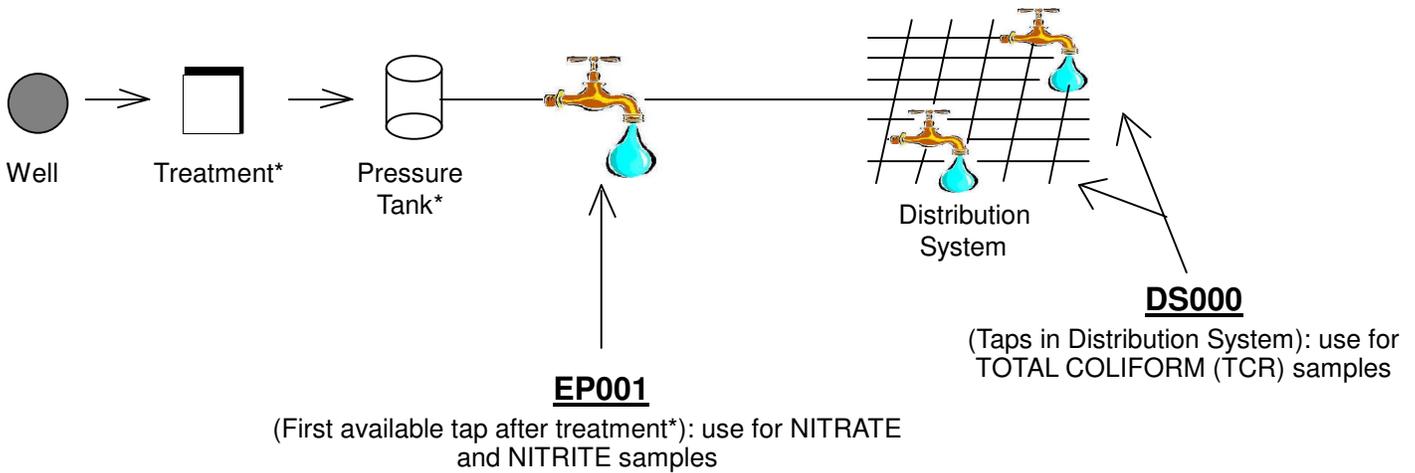

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH0254712 PWS NAME: ST MATTHEWS LUTHERAN CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 262246 FACILITY NAME: ST MATTHEWS LUTHERAN CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001
NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011	Sample should be taken at EP001

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

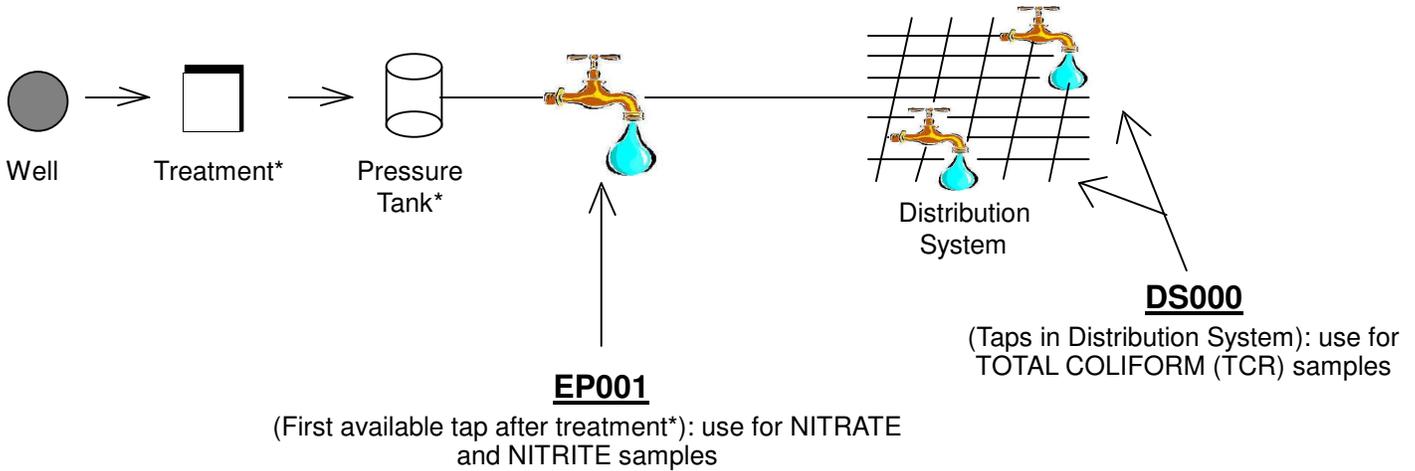

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
Nitrite Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0254912 PWS NAME: SAFY

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 262318 FACILITY NAME: SAFY

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 262318. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0254912 PWS NAME: SAFY

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: SAFY DISTRIBUTION

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
<i>Lead & Copper Sample Date(s):</i>				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH0200012 PWS NAME: BEAVERDAM WATER TREATMENT PLANT
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 252629 FACILITY NAME: BEAVERDAM WATER DEPARTMENT
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) between 1/1/2011 and 5/31/2011
NITRITE	NITRITE - 1041	1 Sample(s) between 1/1/2011 and 5/31/2011
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	1 Sample(s) between 1/1/2011 and 5/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 1/1/2011 and 5/31/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 252629. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>INORGANIC Sample Date(s):</i>
<i>NITRATE Sample Date(s):</i>
<i>NITRITE Sample Date(s):</i>
<i>RADIOLOGICAL Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>SOC Group 1 Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH0200012 PWS NAME: BEAVERDAM WATER TREATMENT PLANT
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: BEAVERDAM, VILLAGE OF DISTRIBUTION
Groundwater Rule Substantial Treatment System

Effective Date: 1/19/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												